



Ransburg Vector™ R Series Cascade Applicators

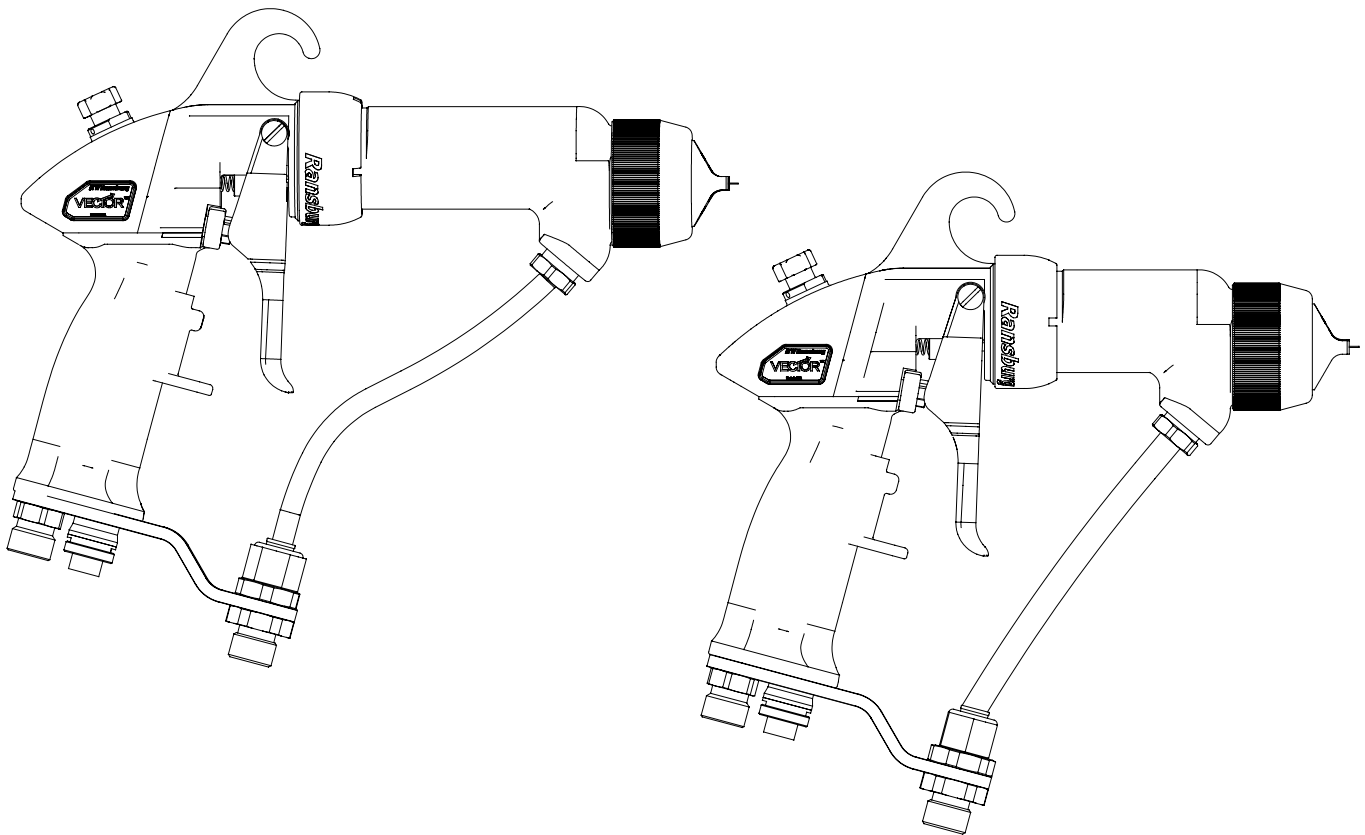

Model: 79500 R90 Cascade - Solventborne
79501 R70 Cascade - Solventborne
79523 R90 Cascade - Waterborne 
For Use With 80131-xxx Control Unit

IMPORTANT: Before using this equipment, carefully read SAFETY PRECAUTIONS and all instructions in this manual. Keep this Service Manual for future reference.

NOTE: This manual has been changed from revision **AH-06-01.16** to revision **AH-06-01-R17**. Reasons for this change are noted under “Manual Change Summary” inside the back cover of this manual.

CONTENTS

| | |
|---|--------------|
| SAFETY: | 5-9 |
| Safety Precautions | 5 |
| Hazards / Safeguards | 6 |
| ATEX/FM: | 10-17 |
| European ATEX Directive | 10 |
| European ATEX Labels | 11 |
| FM Configuration Drawings | 12 |
| INTRODUCTION: | 18-23 |
| General Description | 18 |
| 79500 R90 Cascade Solventborne Specifications | 19 |
| 79501 R70 Cascade Solventborne Specifications | 20 |
| R90/70 Cascade Solventborne Electrostatic Spray Applicator Features | 21 |
| 80131-XXX 9060 Power Supply Electrical Specifications | 22 |
| 80131-XXX Cascade Control Unit Features | 23 |
| INSTALLATION: | 24-29 |
| 79500 R90 / 79501 R70 Solventborne Installation | 24 |
| Typical Solventborne Installation | 24 |
| Low Voltage Cable | 26 |
| Filters | 26 |
| Paint Preparation | 27 |
| Spray Pattern Adjustment | 28 |
| Applicator to Target Distance | 28 |
| Fluid Nozzle / Air Cap Selection Charts | 28 |
| Round Spray Performance Chart | 29 |
| OPERATION: | 30-34 |
| Powering Up Control Unit | 30 |
| Setpoint Voltage | 30 |
| Lockouts | 31 |
| KV Test Jumper | 33 |
| Basic Operation | 33 |
| Fault Descriptions | 34 |
| MAINTENANCE: | 35-53 |
| Suitable Solvents for Cleaning Vector R90/70 Applicators | 35 |
| Routine Schedule | 36 |
| Applicator Assembly Cleaning Procedure | 37 |
| Flushing Procedures | 38 |
| Applicator Repair | 39 |
| To Remove the Applicator from the Work Site | 39 |
| Air Cap | 40 |
| Fluid Nozzle | 40 |
| Needle / Electrode | 41 |
| Needle / Electrode Resistance Testing | 42 |

(Continued On Next Page)

CONTENTS (Cont.)

| | |
|--|--------------|
| MAINTENANCE (Cont.): | 35-53 |
| Barrel Assembly | 42 |
| Disassembly / Reassembly of Barrel with the 2K Fluid Needle Packings | 43 |
| Handle / Plug Assembly | 48 |
| Troubleshooting Guide | 51 |
| PARTS IDENTIFICATION: | 54-77 |
| R90/70 Cascade Solventborne Applicator Breakdown / Parts List | 54 |
| Vector R90/70 Cascade Solventborne Model Identification | 57 |
| R90 (78628-11) and R70 (79599-02) Cascade Needle Shaft (Standard 2K Packings) / Parts List | 59 |
| R90 (79599-01) and R70 (79599-02) Cascade Needle Shaft Parts List | 60 |
| WATERBORNE APPLICATOR MODEL 79523 SECTION | 61-70 |
| R90 Cascade Waterborne Electrostatic Spray Applicator Features | 62 |
| 79523 R90 Cascade Waterborne Specifications | 63 |
| 79513-1XX 9050 Power Supply Electrical Specifications | 63 |
| R90 Cascade Waterborne Typical Installation | 65 |
| Waterborne Isolation System Installation Guidelines | 66 |
| Waterborne Hose Fitting Installation | 66 |
| Waterborne Fluid Delivery Components / Parts List | 68 |
| Vector R90 Cascade Waterborne Model Identifications | 70 |
| Vector Air Hose Options / Parts List | 71 |
| Vector Fluid Hose Options / Parts List | 71 |
| Vector Applicator Cover Options / Parts List | 72 |
| Vector Swirl Nozzle Options / Parts List | 72 |
| Vector Fluid Tube Options / Parts List | 73 |
| Low Voltage Cable Options / Parts List | 73 |
| Parts Comparison / Trans-Tech Atomization / Parts List | 74 |
| 79555 Trans-Tech Conversion Kits Available | 75 |
| Accessories for Econ Flush Box Compatibility (Optional) | 75 |
| Vector Cascade Applicators Recommended Spare Parts | 76 |
| MANUAL CHANGE SUMMARY: | 78 |
| Manual Changes | 78 |

SAFETY

SAFETY PRECAUTIONS

Before operating, maintaining or servicing any electrostatic coating system, read and understand all of the technical and safety literature for your products. This manual contains information that is important for you to know and understand. This information relates to **USER SAFETY** and **PREVENTING EQUIPMENT PROBLEMS**. To help you recognize this information, we use the following symbols. Please pay particular attention to these sections.

WARNING

A **WARNING!** states information to alert you to a situation that might cause serious injury if instructions are not followed.

CAUTION

A **CAUTION!** states information that tells how to prevent damage to equipment or how to avoid a situation that might cause minor injury.

NOTE

A **NOTE** is information relevant to the procedure in progress.

While this manual lists standard specifications and service procedures, some minor deviations may be found between this literature and your equipment. Differences in local codes and plant requirements, material delivery requirements, etc., make such variations inevitable. Compare this manual with your system installation drawings and associated equipment manuals to reconcile such differences.

Careful study and continued use of this manual will provide a better understanding of the equipment and process, resulting in more efficient operation, longer trouble-free service and faster, easier troubleshooting. If you do not have the manuals and safety literature for your equipment, contact your local Carlisle Fluid Technologies representative or Carlisle Fluid Technologies technical support.


WARNING



- The user **MUST** read and be familiar with the Safety Section in this manual and the safety literature therein identified.
- This equipment is intended to be used by trained personnel **ONLY**.
- This manual **MUST** be read and thoroughly understood by **ALL** personnel who operate, clean or maintain this equipment! Special care should be taken to ensure that the **WARNINGS** and safety requirements for operating and servicing the equipment are followed. The user should be aware of and adhere to **ALL** local building and fire codes and ordinances as well as **NFPA-33 AND EN 50177 SAFETY STANDARDS, LATEST EDITION**, or applicable country safety standards, prior to installing, operating, and/or servicing this equipment.


WARNING




- The hazards shown on the following pages may occur during the normal use of this equipment.

Repairs may only be performed by authorized personnel.

| <p>AREA Tells where hazards may occur.</p> | <p>HAZARD Tells what the hazard is.</p> | <p>SAFEGUARDS Tells how to avoid the hazard.</p> |
|--|---|---|
| <p>Spray Area</p>  | <p>Fire Hazard</p> <p>Improper or inadequate operation and maintenance procedures will cause a fire hazard.</p> <p>Protection against inadvertent arcing that is capable of causing fire or explosion is lost if any safety interlocks are disabled during operation. Frequent Power Supply or Controller shutdown indicates a problem in the system requiring correction.</p> | <p>Fire extinguishing equipment must be present in the spray area and tested periodically.</p> <p>Spray areas must be kept clean to prevent the accumulation of combustible residues.</p> <p>Smoking must never be allowed in the spray area.</p> <p>The high voltage supplied to the atomizer must be turned off prior to cleaning, flushing or maintenance.</p> <p>Spray booth ventilation must be kept at the rates required by NFPA-33, OSHA, country, and local codes. In addition, ventilation must be maintained during cleaning operations using flammable or combustible solvents.</p> <p>Electrostatic arcing must be prevented. Safe sparking distance must be maintained between the parts being coated and the applicator. A distance of 1 inch for every 10KV of output voltage is required at all times.</p> <p>Test only in areas free of combustible material. Testing may require high voltage to be on, but only as instructed.</p> <p>Non-factory replacement parts or unauthorized equipment modifications may cause fire or injury. If used, the key switch bypass is intended for use only during setup operations. Production should never be done with safety interlocks disabled.</p> <p>The paint process and equipment should be set up and operated in accordance with NFPA-33, NEC, OSHA, local, country, and European Health and Safety Norms.</p> |

| <p>AREA Tells where hazards may occur.</p> | <p>HAZARD Tells what the hazard is.</p> | <p>SAFEGUARDS Tells how to avoid the hazard.</p> |
|---|---|---|
| <p>Spray Area</p>  | <p>Explosion Hazard</p> <p>Improper or inadequate operation and maintenance procedures will cause a fire hazard.</p> <p>Protection against inadvertent arcing that is capable of causing fire or explosion is lost if any safety interlocks are disabled during operation.</p> <p>Frequent Power Supply or Controller shutdown indicates a problem in the system requiring correction.</p> | <p>Electrostatic arcing must be prevented. Safe sparking distance must be maintained between the parts being coated and the applicator. A distance of 1 inch for every 10KV of output voltage is required at all times.</p> <p>Unless specifically approved for use in hazardous locations, all electrical equipment must be located outside Class I or II, Division 1 or 2 hazardous areas, in accordance with NFPA-33.</p> <p>Test only in areas free of flammable or combustible materials.</p> <p>The current overload sensitivity (if equipped) MUST be set as described in the corresponding section of the equipment manual. Protection against inadvertent arcing that is capable of causing fire or explosion is lost if the current overload sensitivity is not properly set. Frequent power supply shutdown indicates a problem in the system which requires correction.</p> <p>Always turn the control panel power off prior to flushing, cleaning, or working on spray system equipment.</p> <p>Before turning high voltage on, make sure no objects are within the safe sparking distance.</p> <p>Ensure that the control panel is interlocked with the ventilation system and conveyor in accordance with NFPA-33, EN 50176.</p> <p>Have fire extinguishing equipment readily available and tested periodically.</p> |
| <p>General Use and Maintenance</p>  | <p>Improper operation or maintenance may create a hazard.</p> <p>Personnel must be properly trained in the use of this equipment.</p> | <p>Personnel must be given training in accordance with the requirements of NFPA-33, EN 60079-0.</p> <p>Instructions and safety precautions must be read and understood prior to using this equipment.</p> <p>Comply with appropriate local, state, and national codes governing ventilation, fire protection, operation maintenance, and housekeeping. Reference OSHA, NFPA-33, EN Norms and your insurance company requirements.</p> |

| <p>AREA Tells where hazards may occur.</p> | <p>HAZARD Tells what the hazard is.</p> | <p>SAFEGUARDS Tells how to avoid the hazard.</p> |
|---|---|---|
| <p>Spray Area / High Voltage Equipment</p>  | <p>Electrical Discharge</p> <p>There is a high voltage device that can induce an electrical charge on ungrounded objects which is capable of igniting coating materials.</p> <p>Inadequate grounding will cause a spark hazard. A spark can ignite many coating materials and cause a fire or explosion.</p> | <p>Parts being sprayed and operators in the spray area must be properly grounded.</p> <p>Parts being sprayed must be supported on conveyors or hangers that are properly grounded. The resistance between the part and earth ground must not exceed 1 meg ohm. (Refer to NFPA-33.)</p> <p>Operators must be grounded. Rubber soled insulating shoes should not be worn. Grounding straps on wrists or legs may be used to assure adequate ground contact.</p> <p>Operators must not be wearing or carrying any ungrounded metal objects.</p> <p>When using an electrostatic handgun, operators must assure contact with the handle of the applicator via conductive gloves or gloves with the palm section cut out.</p> <p>NOTE: REFER TO NFPA-33 OR SPECIFIC COUNTRY SAFETY CODES REGARDING PROPER OPERATOR GROUNDING.</p> <p>All electrically conductive objects in the spray area, with the exception of those objects required by the process to be at high voltage, must be grounded. Grounded conductive flooring must be provided in the spray area.</p> <p>Always turn off the power supply prior to flushing, cleaning, or working on spray system equipment.</p> <p>Unless specifically approved for use in hazardous locations, all electrical equipment must be located outside Class I or II, Division 1 or 2 hazardous areas, in accordance with NFPA-33.</p> <p>Avoid installing an applicator into a fluid system where the solvent supply is ungrounded.</p> <p>Do not touch the applicator electrode while it is energized.</p> |

| <p>AREA Tells where hazards may occur.</p> | <p>HAZARD Tells what the hazard is.</p> | <p>SAFEGUARDS Tells how to avoid the hazard.</p> |
|--|---|---|
| <p>Electrical Equipment</p>  | <p>Electrical Discharge</p> <p>High voltage equipment is utilized in the process. Arcing in the vicinity of flammable or combustible materials may occur. Personnel are exposed to high voltage during operation and maintenance.</p> <p>Protection against inadvertent arcing that may cause a fire or explosion is lost if safety circuits are disabled during operation.</p> <p>Frequent power supply shut-down indicates a problem in the system which requires correction.</p> <p>An electrical arc can ignite coating materials and cause a fire or explosion.</p> | <p>Unless specifically approved for use in hazardous locations, the power supply, control cabinet, and all other electrical equipment must be located outside Class I or II, Division 1 and 2 hazardous areas in accordance with NFPA-33 and EN 50176.</p> <p>Turn the power supply OFF before working on the equipment.</p> <p>Test only in areas free of flammable or combustible material.</p> <p>Testing may require high voltage to be on, but only as instructed.</p> <p>Production should never be done with the safety circuits disabled.</p> <p>Before turning the high voltage on, make sure no objects are within the sparking distance.</p> |
| <p>Toxic Substances</p>  | <p>Chemical Hazard</p> <p>Certain materials may be harmful if inhaled, or if there is contact with the skin.</p> | <p>Follow the requirements of the Safety Data Sheet supplied by coating material manufacturer.</p> <p>Adequate exhaust must be provided to keep the air free of accumulations of toxic materials.</p> <p>Use a mask or respirator whenever there is a chance of inhaling sprayed materials. The mask must be compatible with the material being sprayed and its concentration. Equipment must be as prescribed by an industrial hygienist or safety expert, and be NIOSH approved.</p> |
| <p>Spray Area</p>  | <p>Explosion Hazard — Incompatible Materials</p> <p>Halogenated hydrocarbon solvents for example: methylene chloride and 1,1,1, - Trichloroethane are not chemically compatible with the aluminum that might be used in many system components. The chemical reaction caused by these solvents reacting with aluminum can become violent and lead to an equipment explosion.</p> | <p>Spray applicators require that aluminum inlet fittings be replaced with stainless steel.</p> <p>Aluminum is widely used in other spray application equipment - such as material pumps, regulators, triggering valves, etc. Halogenated hydrocarbon solvents must never be used with aluminum equipment during spraying, flushing, or cleaning. Read the label or data sheet for the material you intend to spray. If in doubt as to whether or not a coating or cleaning material is compatible, contact your coating supplier. Any other type of solvent may be used with aluminum equipment.</p> |

EUROPEAN ATEX DIRECTIVE 2014/34/EU

The following instructions apply to equipment covered by certificate number Sira 06ATEX5282X:

1. The equipment may be used with flammable gases and vapors with apparatus groups II and with temperature class T6.
 2. The equipment is only certified for use in ambient temperatures in the range +0°C to +40°C and should not be used outside this range.
 3. Installation shall be carried out by suitably trained personnel in accordance with the applicable code of practice e.g. EN 60079-14.
 4. Inspection and maintenance of this equipment shall be carried out by suitably trained personnel in accordance with the applicable code of practice e.g. EN 60079-17.
 5. Repair of this equipment shall be carried out by suitable trained personnel in accordance with the applicable code of practice e.g. EN 60079-19.
 6. Putting into service, use, assembling, and adjustment of the equipment shall be fitted by suitably trained personnel in accordance with the manufacturer's documentation.
- Refer to the "Table of Contents" of this service manual:
- a. Installation
 - b. Operation
 - c. Maintenance
 - d. Parts Identification
7. Components to be incorporated into or used as replacement parts of the equipment shall be fitted by suitably trained personnel in accordance with the manufacturer's documentation.
 8. The certification of this equipment relies upon the following materials used in its construction:

If the equipment is likely to come into contact with aggressive substances, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected, thus ensuring that the type of protection provided by the equipment is not compromised.

Aggressive substances: e.g. acidic liquids or gases that may attack metals, or solvents that may affect polymeric materials.

Suitable precautions: e.g. regular checks as part of routine inspections or establishing from the material's data sheets that it is resistant to specific chemicals.

Refer to "Specifications" in the "Introduction" section:

 - a. All fluid passages contain stainless steel or nylon fittings.
 - b. High voltage cascade is encapsulated with a solvent resistant epoxy.
 9. A recapitulation of the certification marking is detailed in the "ATEX" section, on the next page, drawing numbers: 79846-01 and 79852-01.
 10. The characteristics of the equipment shall be detailed e.g. electrical, pressure, and voltage parameters.

The manufacturer should note that, on being put into service, the equipment must be accompanied by a translation of the instructions in the language or languages of the country in which the equipment is to be used and by the instructions in the original language.

Vector R Series 79500, 79501, and 79523 ATEX Product Marking Definitions

Ex Certificate Number: Sira 06ATEX5282X

- Sira = Notified Body performing EC-type examination
- 06 = Year of certification
- ATEX = Reference to ATEX Directive
- 5 = Protection Concept Code (code 5 is titled Encapsulation)
- 282 = Document serial number
- X = Special conditions for safe use apply

Special conditions for safe use:

The Vector 79500, 79501, and 79523 R Series Cascade Applicators shall only be used with associated 80131-21X Control Unit.

Product Marking



- Ex = Specific marking of explosive protection
- II = Equipment Group hazardous area characteristics
- 2 = Equipment Category
- G = Type of explosive atmosphere (gases, vapors, or mists)

EEx 0.24mJ The Vector 79500, 79501, and 79523 Cascade Applicators are suitable for use in manual spraying installations complying with EN 50050 as they are a Type A class with a discharge energy limit of 0.24mJ.




Label 80082




Label 80081


Label 79515

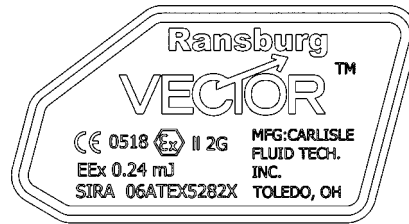


Label 79516-70

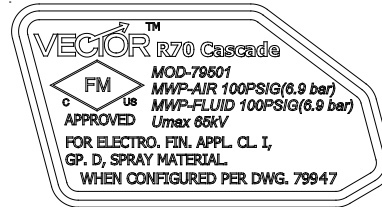

Label 79516-91

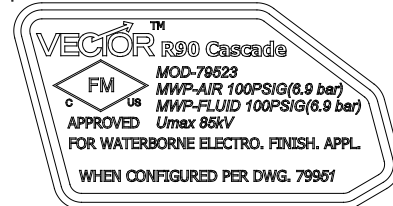

Label 79516-90

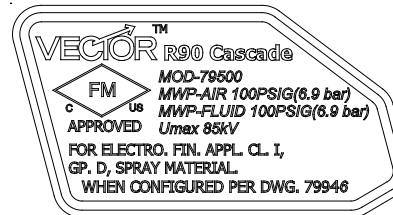

Label 80108

Ransburg CARLISLE FLUID TECHNOLOGIES INC. TOLEDO, OH. CONTROL UNIT/POWER SUPPLY FOR ELECTROSTATIC PAINT FINISHING APPLICATIONS (See table below for safe use of equipment)

WARNING
FAILURE TO OBSERVE THE FOLLOWING PRECAUTIONS MAY RESULT IN AN ELECTRICAL DISCHARGE CAPABLE OF STARTING A FIRE.

1. THE ARTICLE BEING COATED MUST BE GROUNDED.
2. ALL OTHER ELECTRICALLY CONDUCTING OBJECTS WITHIN SPRAY BOOTH WITH THE SPRAY APPLICATOR MUST BE GROUNDED.
3. THIS CONTROL UNIT/POWER SUPPLY MUST BE INTERLOCKED WITH THE SPRAY BOOTH VENTILATORS SO AS TO PREVENT OPERATION OF THE POWER SUPPLY UNLESS VENTILATING FANS ARE IN OPERATION.
4. SERVICE WARNING - ENCLOSURE PROTECTS AGAINST SHOCK AND INJURY. SERVICE TRAINING REQUIRED.
5. KEEP POWER SUPPLY OUTSIDE THE HAZARDOUS AREA.
6. DO NOT ATTEMPT OPERATION OR REPAIR BEFORE READING SERVICE MANUAL.
7. FOR ELECTROSTATIC PAINT FINISHING APPLICATIONS.


| | | | |
|---------------|--------------------|------------|--------------------------|
| SERIAL No. | | "C" A MAX. | PHYS. DIM. (SEE DRAWING) |
| VOLTAGE | 100-240 VAC | 1 | Wt. (SEE DRAWING) |
| FREQUENCY | 50/60 HZ | "L" | Wt. (SEE DRAWING) |
| VOLUME | "D" ON MAX. | "B" | TEMPERATURE |
| HUMIDITY | 50% NON-CONDENSING | 0 - 40°C | |
| MAX. PRESSURE | 100 PSI MAX. | NA | BOOR |
| UNIT WEIGHT | | | |

UNLESS OTHERWISE SPECIFIED

VECTOR R90 CASCADE, SOLVENT BASE

79500 - ABCDE


Base Model No. Optional Designations
(Ordering Information Only)

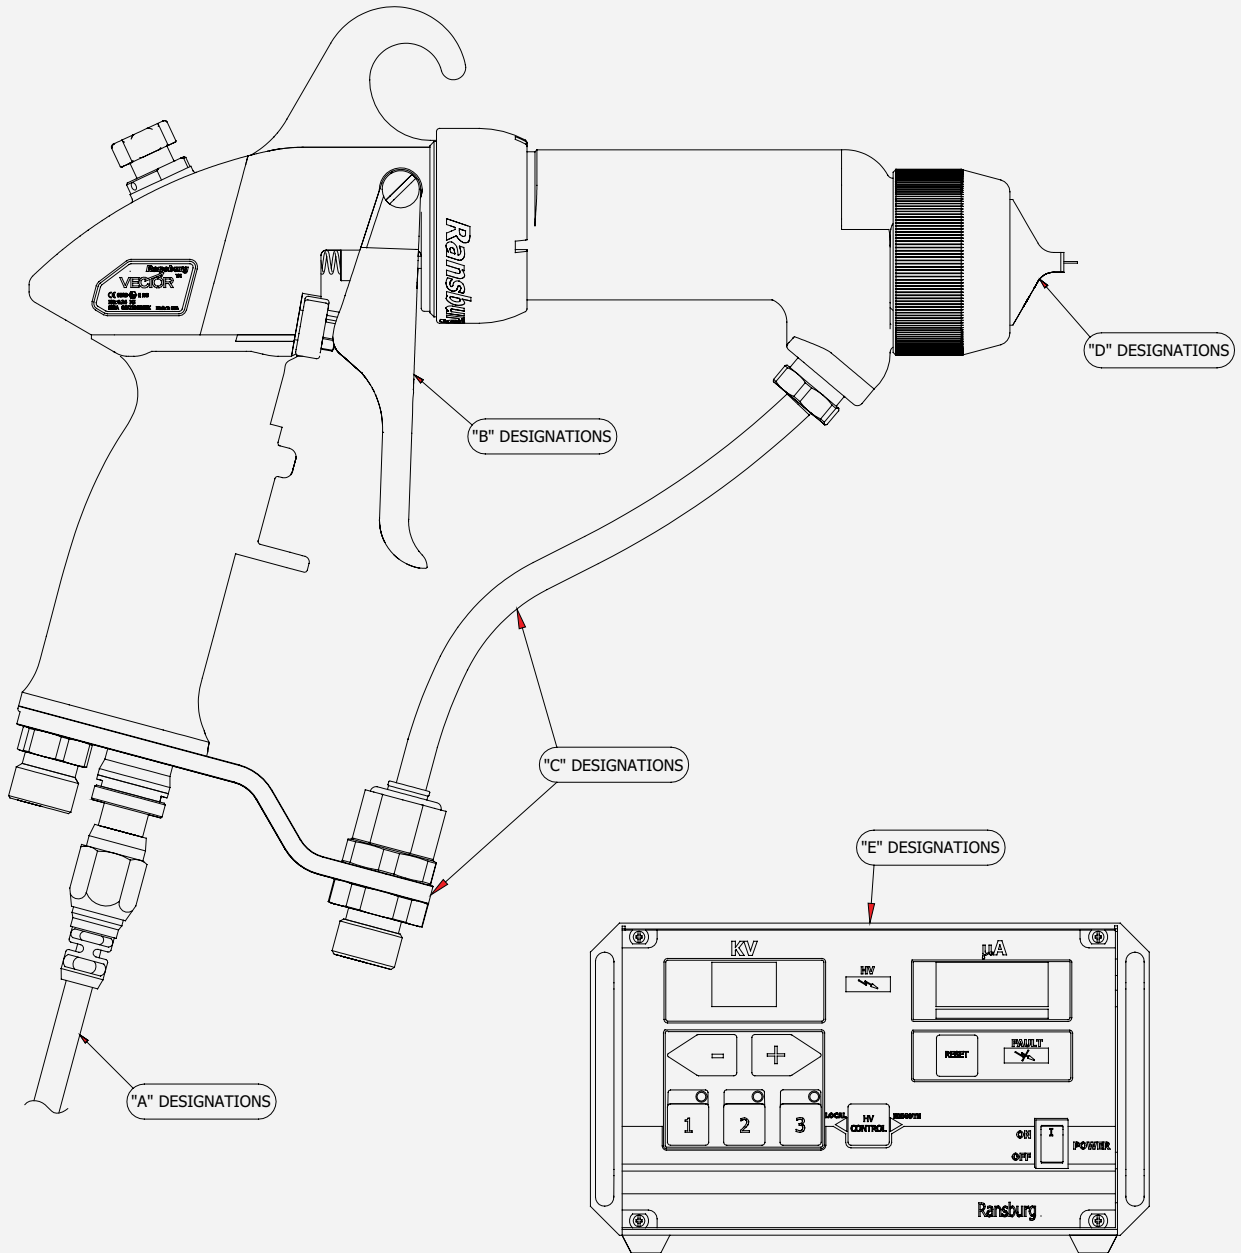

CONFIGURATION DWG. 79946 REV C


**OPTION "A" DESIGNATIONS
CABLE LENGTH**

 - 0 FOR NO CABLE
- 1 FOR 10 METER CABLE-PART NUMBER: 79338-10
- 2 FOR 15 METER CABLE-PART NUMBER: 79338-15
- 3 FOR 20 METER CABLE-PART NUMBER: 79338-10 (2)
- 4 FOR 25 METER CABLE-PART NUMBER: 79338-10 (1) & 79338-15 (1)
- 5 FOR 30 METER CABLE-PART NUMBER: 79338-15 (2)






**OPTION "B" DESIGNATIONS
TRIGGER TYPE**

- 2 FOR TWO FINGER TRIGGER-PART NUMBER: 79325-02
- 4 FOR FOUR FINGER TRIGGER-PART NUMBER: 79325-04

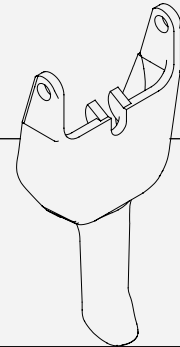

**OPTION "C" DESIGNATIONS
FLUID DELIVERY COMBINATION**

  - 1 OFFSET WITH .093" ID FLUID TUBE-PART NUMBER: 79438-00 & 9704-16
- 2 45° WITH .093" ID FLUID TUBE-PART NUMBER: 79439-00 & 9704-16
- 3 OFFSET STAINLESS WITH .093" ID FLUID TUBE-PART NUMBER: 79438-01 & 9704-16
- 4 OFFSET WITH .250" ID FLUID TUBE-PART NUMBER: 79438-00 & 9704-16
- 5 45° WITH .250" ID FLUID TUBE-PART NUMBER: 79439-00 & 9704-11
- 6 OFFSET STAINLESS WITH .250" ID FLUID TUBE-PART NUMBER: 79438-01 & 9704-11
- 7 OFFSET WITH .125" ID COILED FLUID TUBE-PART NUMBER: 79438-00 & 79871-00

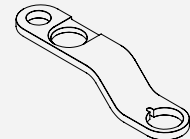


**OPTION "D" DESIGNATIONS
SPRAY TECHNOLOGY**

- 0 FOR STANDARD SPRAY, 65V CAP, #44 NOZZLE-PART NUMBER: 79374-65 & 79377-44
- 1 FOR STANDARD SPRAY, 65V CAP, #45 NOZZLE-PART NUMBER: 79374-65 & 79377-45
- 2 FOR TRANSTECH SPRAY, 122V CAP, #245 NOZZLE-PART NUMBER: 79374-122 & 79552-245
- 3 FOR ROUND SPRAY-PART NUMBER: 79962-00 & 79959-00


APPROVED SPARE FLUID NOZZLES LIST

- 79377-46 (1.06mm ID, STD. WEAR), 79377-47 (.71mm ID, STD. WEAR),
- 79377-48 (1.19mm ID, STD. WEAR), 79377-144 (1.40mm ID, HIGH. WEAR),
- 79377-145 (1.78mm ID, HIGH. WEAR), 79377-146 (1.06mm ID, HIGH. WEAR),
- 79377-147 (.71mm ID, HIGH. WEAR), 79552-244 (1.40mm ID, STD.. WEAR),
- 79552-344 (1.40mm ID, HIGH. WEAR), 79552-345 (1.78mm ID, HIGH. WEAR),

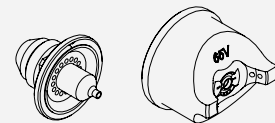

**OPTION "E" DESIGNATIONS
CONTROL UNITS**

- 0 FOR NO CONTROL UNIT
- 1 FOR DOMESTIC SALES, 110/120 V-PART NUMBER: 80131-511
- 2 FOR EUROPE, 240V-50/60 Hz-PART NUMBER: 80131-512
- 2 FOR CHINA, 240V-50/60 Hz-PART NUMBER: 80131-513

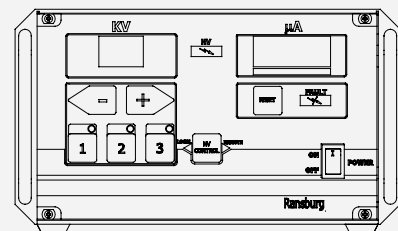


CONFIGURATION DWG. 79946 REV C

VECTOR R70 CASCADE, SOLVENT BASE

79501 - ABCDE


Base Model No. Optional Designations
(Ordering Information Only)

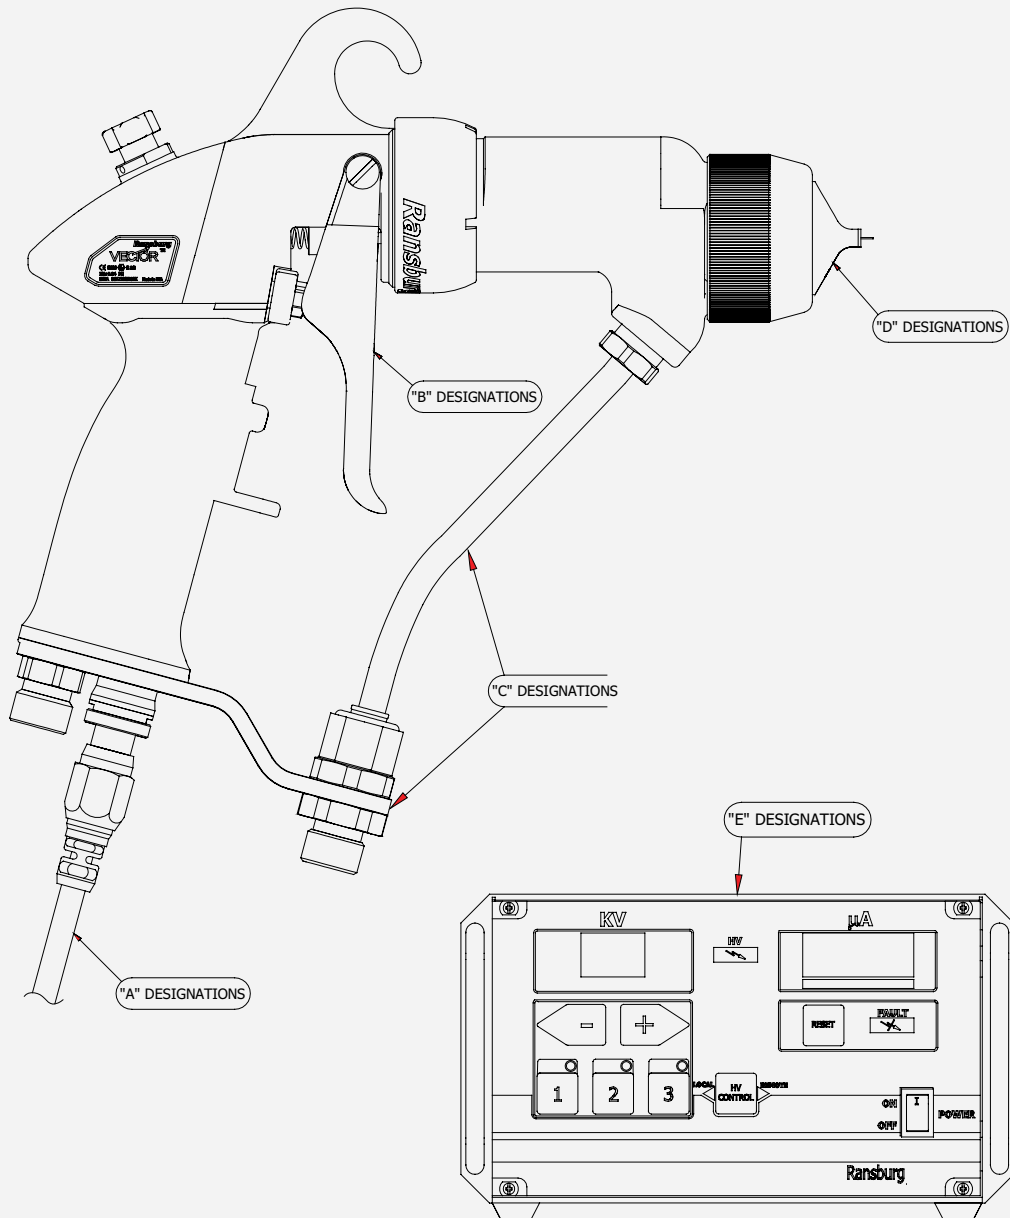

CONFIGURATION DWG. 79947 REV C


**OPTION "A" DESIGNATIONS
CABLE LENGTH**

 - 0 FOR NO CABLE
- 1 FOR 10 METER CABLE-PART NUMBER: 79338-10
- 2 FOR 15 METER CABLE-PART NUMBER: 79338-15
- 3 FOR 20 METER CABLE-PART NUMBER: 79338-10 (2)
- 4 FOR 25 METER CABLE-PART NUMBER: 79338-10 (1) & 79338-15 (1)
- 5 FOR 30 METER CABLE-PART NUMBER: 79338-15 (2)





**OPTION "B" DESIGNATIONS
TRIGGER TYPE**

- 2 FOR TWO FINGER TRIGGER-PART NUMBER: 79325-02
- 4 FOR FOUR FINGER TRIGGER-PART NUMBER: 79325-04

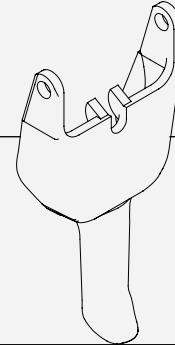

**OPTION "C" DESIGNATIONS
FLUID DELIVERY COMBINATION**

 - 1 OFFSET WITH .093" ID FLUID TUBE-PART NUMBER: 79438-00 & 9704-16
- 2 45° WITH .093" ID FLUID TUBE-PART NUMBER: 79439-00 & 9704-16
- 3 OFFSET STAINLESS WITH .093" ID FLUID TUBE-PART NUMBER: 79438-01 & 9704-16
- 4 OFFSET WITH .250" ID FLUID TUBE-PART NUMBER: 79438-00 & 9704-16
- 5 45° WITH .250" ID FLUID TUBE-PART NUMBER: 79439-00 & 9704-11
- 6 OFFSET STAINLESS WITH .250" ID FLUID TUBE-PART NUMBER: 79438-01 & 9704-11
- 7 OFFSET WITH .125" ID COILED FLUID TUBE-PART NUMBER: 79438-00 & 79871-00

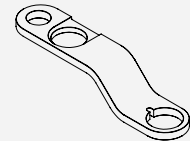


**OPTION "D" DESIGNATIONS
SPRAY TECHNOLOGY**

- 0 FOR STANDARD SPRAY, 65V CAP, #44 NOZZLE-PART NUMBER: 79374-65 & 79377-44
- 1 FOR STANDARD SPRAY, 65V CAP, #45 NOZZLE-PART NUMBER: 79374-65 & 79377-45
- 2 FOR TRANSTECH SPRAY, 122V CAP, #245 NOZZLE-PART NUMBER: 79374-122 & 79552-245
- 3 FOR ROUND SPRAY-PART NUMBER: 79962-00 & 79959-00


APPROVED SPARE FLUID NOZZLES LIST

- 79377-46 (1.06mm ID, STD. WEAR), 79377-47 (.71mm ID, STD. WEAR),
- 79377-48 (1.19mm ID, STD. WEAR), 79377-144 (1.40mm ID, HIGH. WEAR),
- 79377-145 (1.78mm ID, HIGH. WEAR), 79377-146 (1.06mm ID, HIGH. WEAR),
- 79377-147 (.71mm ID, HIGH. WEAR), 79552-244 (1.40mm ID, STD. WEAR),
- 79552-344 (1.40mm ID, HIGH. WEAR), 79552-345 (1.78mm ID, HIGH. WEAR),

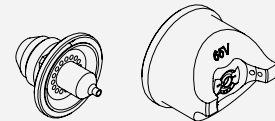

**OPTION "E" DESIGNATIONS
CONTROL UNITS**

- 0 FOR NO CONTROL UNIT
- 1 FOR DOMESTIC SALES, 110/120 V-PART NUMBER: 80131-511
- 2 FOR EUROPE, 240V-50/60 Hz-PART NUMBER: 80131-512
- 2 FOR CHINA, 240V-50/60 Hz-PART NUMBER: 80131-513

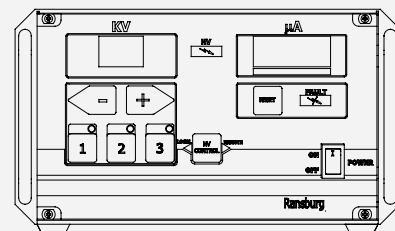


CONFIGURATION DWG. 79947 REV C

VECTOR R90 CASCADE, WATER BASED

79523 - ABCDE


Base Model No. Optional Designations
(Ordering Information Only)

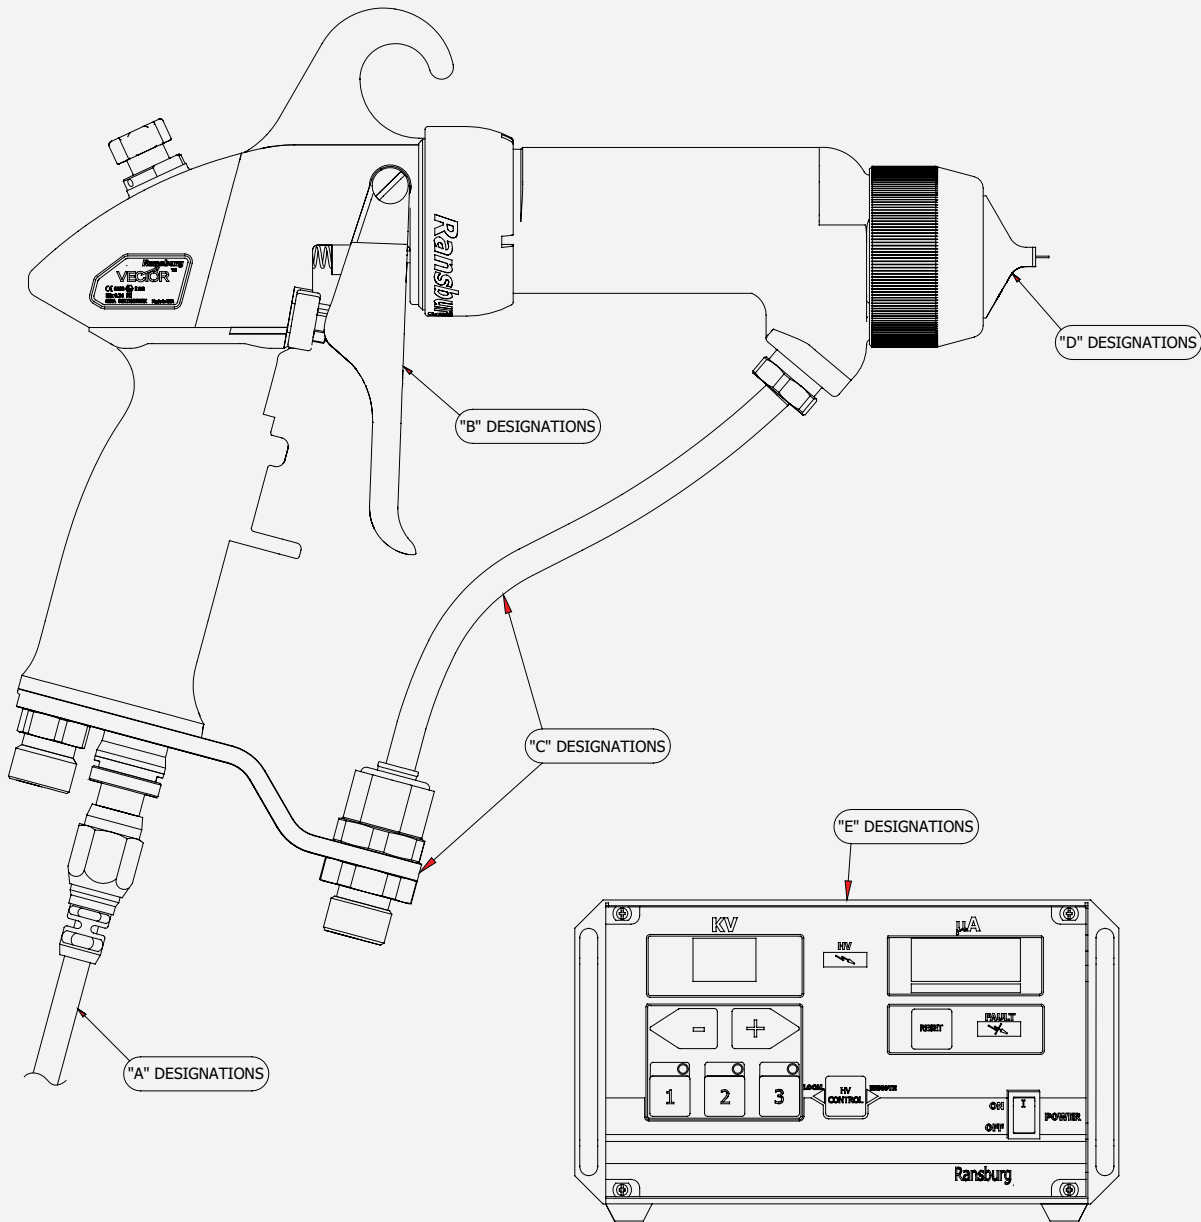

CONFIGURATION DWG. 79951 REV C


**OPTION "A" DESIGNATIONS
CABLE LENGTH**

 - 0 FOR NO CABLE
- 1 FOR 10 METER CABLE-PART NUMBER: 79338-10
- 2 FOR 15 METER CABLE-PART NUMBER: 79338-15
- 3 FOR 20 METER CABLE-PART NUMBER: 79338-10 (2)
- 4 FOR 25 METER CABLE-PART NUMBER: 79338-10 (1) & 79338-15 (1)
- 5 FOR 30 METER CABLE-PART NUMBER: 79338-15 (2)




**OPTION "B" DESIGNATIONS
TRIGGER TYPE**

- 2 FOR TWO FINGER TRIGGER-PART NUMBER: 79325-02
- 4 FOR FOUR FINGER TRIGGER-PART NUMBER: 79325-04

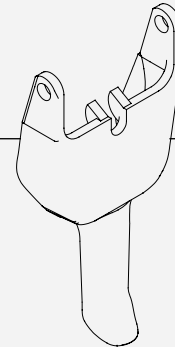

**OPTION "C" DESIGNATIONS
FLUID HOSE LENGTH AND TYPE**

 - 0 FOR NO FLUID HOSE
- 1 FOR WATERBORNE FLUID HOSE-1/4" ID X 10m (30ft)-PART NUMBER: 79525-10
- 2 FOR WATERBORNE FLUID HOSE-3/6" ID X 10m (30ft)-PART NUMBER: 79524-10
- 3 FOR WATERBORNE FLUID HOSE-1/4" ID X 15m (50ft)-PART NUMBER: 79525-15
- 4 FOR WATERBORNE FLUID HOSE-3/16" ID X 15m (50ft)-PART NUMBER: 79524-15




**OPTION "D" DESIGNATIONS
SPRAY TECHNOLOGY**

- 0 FOR STANDARD SPRAY, 65V CAP, #44 NOZZLE-PART NUMBER: 79374-65 & 79377-44
- 1 FOR STANDARD SPRAY, 65V CAP, #45 NOZZLE-PART NUMBER: 79374-65 & 79377-45
- 2 FOR TRANSTECH SPRAY, 122V CAP, #245 NOZZLE-PART NUMBER: 79374-122 & 79552-245
- 3 FOR ROUND SPRAY-PART NUMBER: 79962-00 & 79959-00


APPROVED SPARE FLUID NOZZLES LIST

- 79377-46 (1.06mm ID, STD. WEAR), 79377-47 (.71mm ID, STD. WEAR),
- 79377-48 (1.19mm ID, STD. WEAR), 79377-144 (1.40mm ID, HIGH. WEAR),
- 79377-145 (1.78mm ID, HIGH. WEAR), 79377-146 (1.06mm ID, HIGH. WEAR),
- 79377-147 (.71mm ID, HIGH. WEAR), 79552-244 (1.40mm ID, STD. WEAR),
- 79552-344 (1.40mm ID, HIGH. WEAR), 79552-345 (1.78mm ID, HIGH. WEAR),

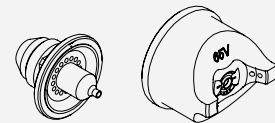

**OPTION "E" DESIGNATIONS
CONTROL UNITS**

- 0 FOR NO CONTROL UNIT
- 1 FOR DOMESTIC SALES, 110/120 V-PART NUMBER: 80131-511
- 2 FOR EUROPE, 240V-50/60 Hz-PART NUMBER: 80131-512
- 2 FOR CHINA, 240V-50/60 Hz-PART NUMBER: 80131-513

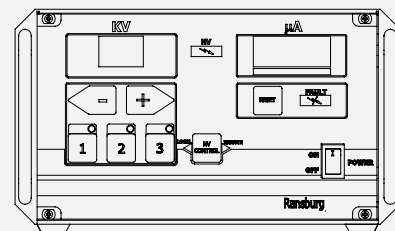

CONFIGURATION DWG. 79951 REV C

INTRODUCTION

GENERAL DESCRIPTION

The **Vector™ R90/70 Spray Applicator** process is an air-atomized method for electrostatically applying product coatings. The Vector R90/R70 Spray Applicator system applies a high voltage DC charge to the applicator electrode, creating an electrostatic field between the atomizer and the target object.

Vector™ R90 Cascade Spray Applicator (see Figure 1) applies a -85 kV DC charge to the coating materials at the point of atomization. The **Vector™ R70 Cascade Spray Applicator** applies a -65 kV charge. This electrostatic charge allows a more efficient, uniform application of coating material to the front, edges, sides, and back of products. It is highly suitable for applying coatings to a variety of surface configurations: large targets, small parts, tubular wares, concave and recessed parts, etc. Because it is a grounded fluid system (for solvent based systems), it is highly suitable for applying a wide range of solvent reduced coatings such as enamels, lacquers, epoxies, etc. The 79523 model is available to accommodate waterborne materials.

A regulated pressure fluid system delivers coating material to the atomizer. At the time of triggering the applicator, fan and atomization air is introduced, which atomizes the coating material into a spray mist. The atomized spray particles under the influence of the electrostatic field become electrically charged. The charged particles are attracted to, and deposited on, the target object. The forces between the charged particles and the grounded target are sufficient to turn most normal overspray around and deposit it on the back surface of the target. Therefore, a high percentage of the coating is deposited on the target.

One of the many features of the Vector R90/70 applicator system is that the electrical energy, which is available from the resistive charging electrode, is limited to the optimum level of safety and efficiency. The system is incapable of releasing sufficient electrical or thermal energy during normal operating conditions to cause ignition of specific hazardous materials in their most easily ignited concentrations in air.

The control unit or power supply provides voltage output to the applicator and contains controls for AC on/off, high voltage adjust, and displays kV and μA in real time.

As the applicator electrode approaches ground, the control unit and applicator circuitry cause the high voltage to approach zero while the current approaches its maximum value.



WARNING

- When more than one waterborne applicator is fed from a common isolated fluid supply, there is a potential for electrical energy discharge through any other applicators when one applicator is triggered. Depending upon the system capacity, this discharge could be hazardous. It is best to only install one applicator per isolated supply.

79500 R90 CASCADE SOLVENTBORNE SPECIFICATIONS

Environmental/Physical

| | |
|--|-----------------------------|
| Gun Length: | 27cm (10.7 inches) |
| Weight: | 735 grams (25.9 oz.) |
| Hose & Cable Lengths (Std): | 10m, 15m, 20m, 25m, and 30m |
| Atomizer Nozzle Assembly (Std): | 79374-65, 79377-45 |

Electrical

| | |
|---------------------------|--|
| Operating Voltage: | 85 kV DC (-) maximum |
| Current Output: | 100 microamperes maximum |
| Paint Resistance:* | .1 M Ω to ∞ *(Use Model No. 76652, Test Equipment) |
| Part Sprayability: | Determine sprayability of part to be coated using 76652, Test Equipment (See current "Paint, HV & SCI Test Equipment" service manual.) |

Mechanical

| | |
|---------------------------------------|--|
| Fluid Flow Capacity: | 1000 cc/minute** |
| Operating Pressure (Air Spray) | |
| Fluid: | (0-6.9 bar) 0-100 psi |
| Air: | (0-6.9 bar) 0-100 psi |
| Ambient Temp.: | 40°C to 12.8°C |
| Consumption: | 510 slpm (18 SCFM) @ 3.4 bar (50 psig) inlet |
| Sound Level: | 92dB (A) @ 50 psig inlet, 1m from applicator |

** This reflects the maximum fluid volume the applicator can deliver. The maximum spray volume that can be effectively atomized depends on fluid rheology, spray technology, and finish quality required.

79501 R70 CASCADE SOLVENTBORNE SPECIFICATIONS

Environmental/Physical

| | |
|--|-----------------------------|
| Gun Length: | 24cm (9.6 inches) |
| Weight: | 650 grams (22.9 oz.) |
| Hose & Cable Lengths (Std): | 10m, 15m, 20m, 25m, and 30m |
| Atomizer Nozzle Assembly (Std): | 79374-65, 79377-45 |

Electrical

| | |
|---------------------------|--|
| Operating Voltage: | 65 kV DC (-) maximum |
| Current Output: | 90 microamperes maximum |
| Paint Resistance:* | .1 M Ω to ∞ *(Use Model No. 76652, Test Equipment) |
| Part Sprayability: | Determine sprayability of part to be coated using 76652, Test Equipment (See current "Paint, HV & SCI Test Equipment" service manual.) |

Mechanical

| | |
|---------------------------------------|--|
| Fluid Flow Capacity: | 1000 cc/minute** |
| Operating Pressure (Air Spray) | |
| Fluid: | (0-6.9 bar) 0-100 psi |
| Air: | (0-6.9 bar) 0-100 psi |
| Ambient Temp.: | 40°C to 12.8°C |
| Consumption: | 510 slpm (18 SCFM) @ 3.4 bar (50 psig) inlet |
| Sound Level: | 92dB (A) @ 50 psig inlet, 1m from applicator |

** This reflects the maximum fluid volume the applicator can deliver. The maximum spray volume that can be effectively atomized depends on fluid rheology, spray technology, and finish quality required.

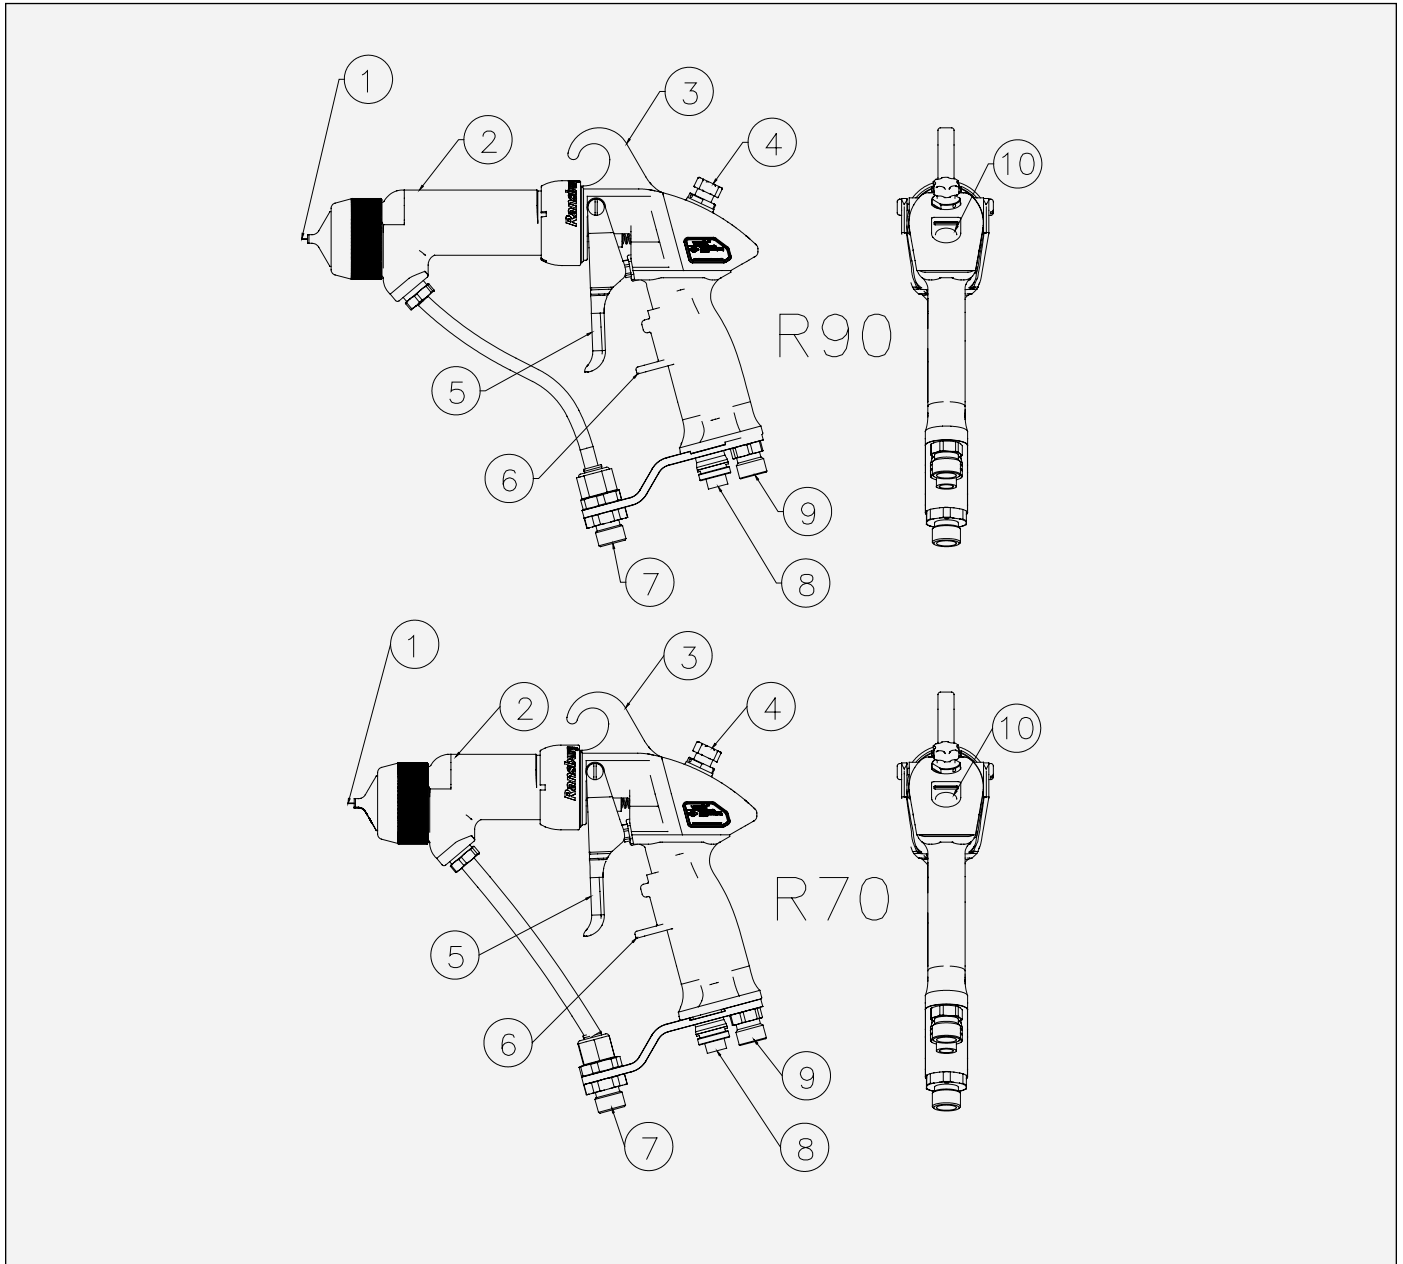


Figure 1: R90/70 Cascade Solventborne Electrostatic Spray Applicator Features

R90/70 CASCADE SOLVENTBORNE ELECTROSTATIC SPRAY APPLICATOR FEATURES

| No. | Description | No. | Description |
|-----|---------------------------|-----|-------------------------------------|
| 1 | Needle/Electrode | 6 | Adjustable Trigger Shelf |
| 2 | Barrel | 7 | Fluid Hose Connection |
| 3 | Replaceable Hook | 8 | Low Voltage Cable Connection |
| 4 | Fan Air Adjust | 9 | Air Inlet Connection |
| 5 | 2-Finger/4-Finger Trigger | 10 | kV Setpoint Switch/Microamp Display |

80131-XXX 9060 POWER SUPPLY ELECTRICAL SPECIFICATIONS

Electrical

| | |
|------------------------|---|
| Input Voltage: | 100-240 VAC |
| Current: | 1 A max. RMS |
| Frequency: | 50/60 Hz |
| Wattage: | 40 watts (max.) |
| Output Voltage: | 20-65 kV DC (79513-11X) 20-85 kV DC (79513-12X) |
| Current: | 100 microamps (max.) (79513-12X) 90 microamps (max.) (79513-11X) |

Physical


| | |
|----------------|---------------------|
| Height: | 14.0cm (5.5-inches) |
| Width: | 21.6cm (8.5-inches) |
| Depth: | 19.1cm (7.5-inches) |
| Weight: | 3.4 kg (7.5 lbs.) |

Pneumatic

| | |
|--------------------|----------------------------|
| Supply Air: | 6.9 bar (100 psig) maximum |
|--------------------|----------------------------|

| CONTROL UNIT INPUTS / OUTPUTS | | |
|-------------------------------|---------------------|----------------|
| 9060 Part # | Voltage Designation | Maximum Output |
| 80131-211 | 110/120 VAC | -65 kV DC |
| 80131-212/213 | 220/240 VAC | -65 kV DC |
| 80131-311 | 110/120 VAC | -85 kV DC |
| 80131-312/313 | 220/240 VAC | -85 kV DC |

| CONTROL UNIT / APPLICATOR COMBINATIONS | |
|--|--------------|
| 9060 Part # | For Use With |
| 80131-21X | 79501-XXXXX |
| 80131-31X | 79500-XXXXX |
| 80131-51X | 79523-XXXXX |

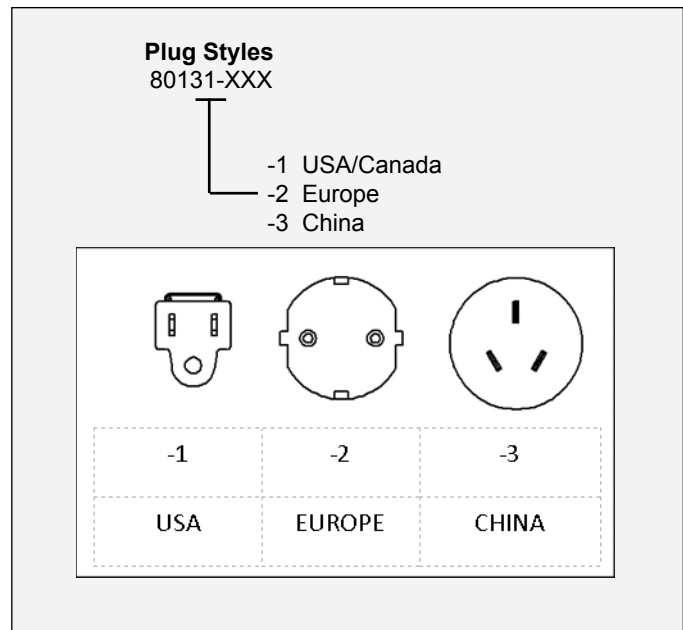

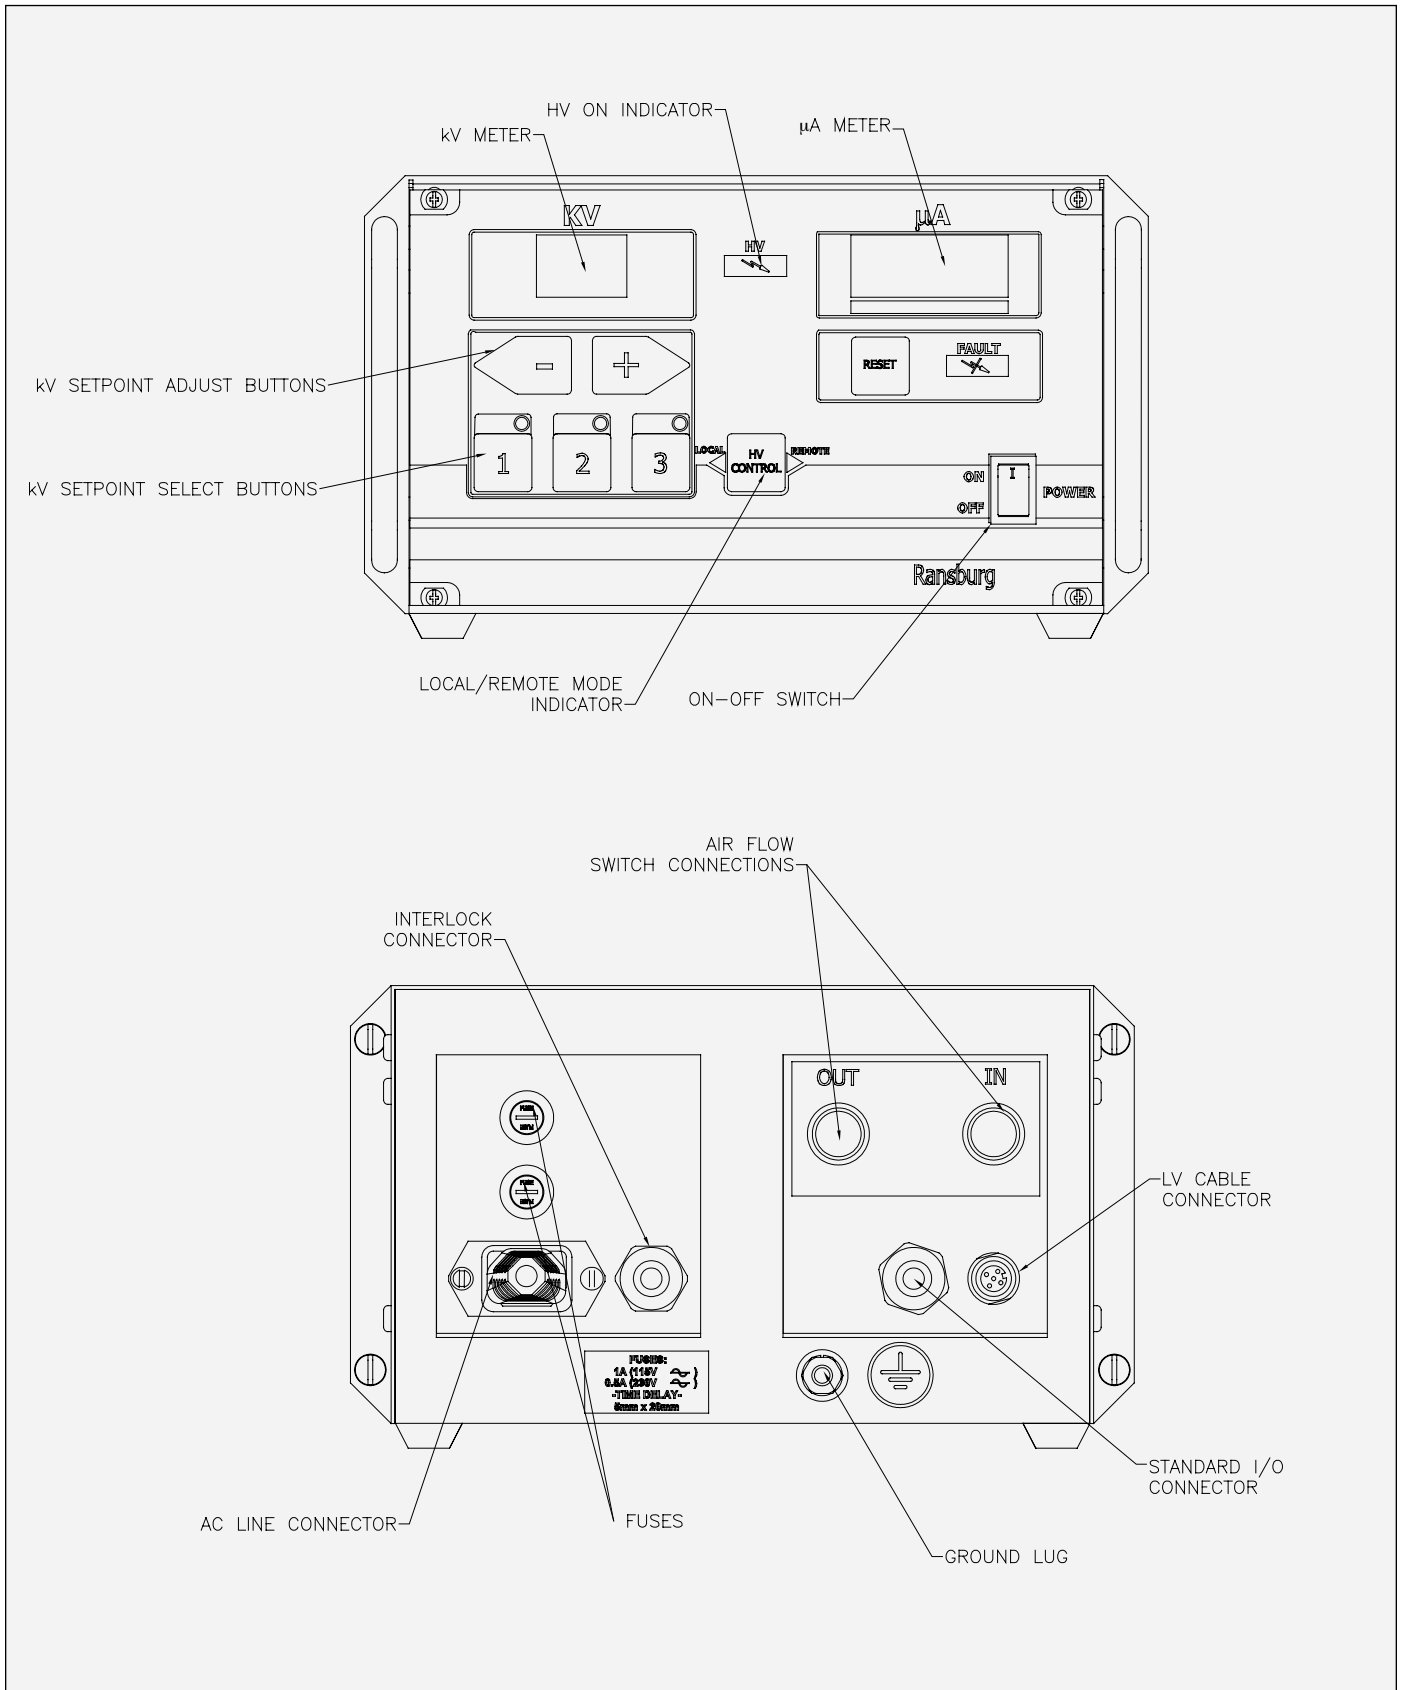


Figure 2: 80131-XXX Cascade Control Unit Features

INSTALLATION

79500 R90 SOLVENTBORNE 79501 R70 SOLVENTBORNE INSTALLATION

WARNING

- The control unit **MUST** be located outside of the spray area.
- The User **MUST** read and be familiar with the "Safety" section of this manual.
- This manual **MUST** be read and thoroughly understood by **ALL** personnel who operate, clean, or maintain this equipment! Special care should be taken to ensure that the warnings and requirements for operating and servicing safety are followed. The user should be aware of and adhere to **ALL** local building and fire codes and ordinances as well as NFPA, OSHA, and all related country safety codes prior to installing, operating, and/or servicing this equipment.
- The fluid lines and fluid sources **MUST** be isolated from ground for waterbase applications.
- Personnel **MUST** be **GROUNDING** to prevent a shock or spark during electrostatic operation.
- Install and route the hoses and cable so they are **NOT** exposed to temperatures in excess of 120° F and so that all hose and cable bends are **NO LESS** than a 6 inch (15cm) radius. Failure to comply with these parameters could cause equipment malfunction that might create **HAZARDOUS CONDITIONS!**
- Install only one spray applicator per isolated waterborne fluid supply system.

WARNING

- **NEVER** wrap the applicator, associated valves and tubing, and supporting hardware in plastic to keep it clean. A surface charge may build up on the plastic surface and discharge to the nearest grounded object. Efficiency of the applicator will also be reduced and damage or failure of the applicator components may occur. **WRAPPING THE APPLICATOR IN PLASTIC WILL VOID WARRANTY.** Only approved applicator covers should be used.

TYPICAL SOLVENTBORNE INSTALLATION

(See "Figure 3 - Typical Solventborne Installation Features")

Location of Control Unit

Install the low voltage control unit in an area **outside the hazardous location** in accordance with federal, state, and local codes. The area should protect the control unit from the possibility of environmental intrusion (such as dust or moisture), have ambient temperatures that do not exceed 120°F, and be as close to the applicator as possible to minimize the length of low voltage cable.

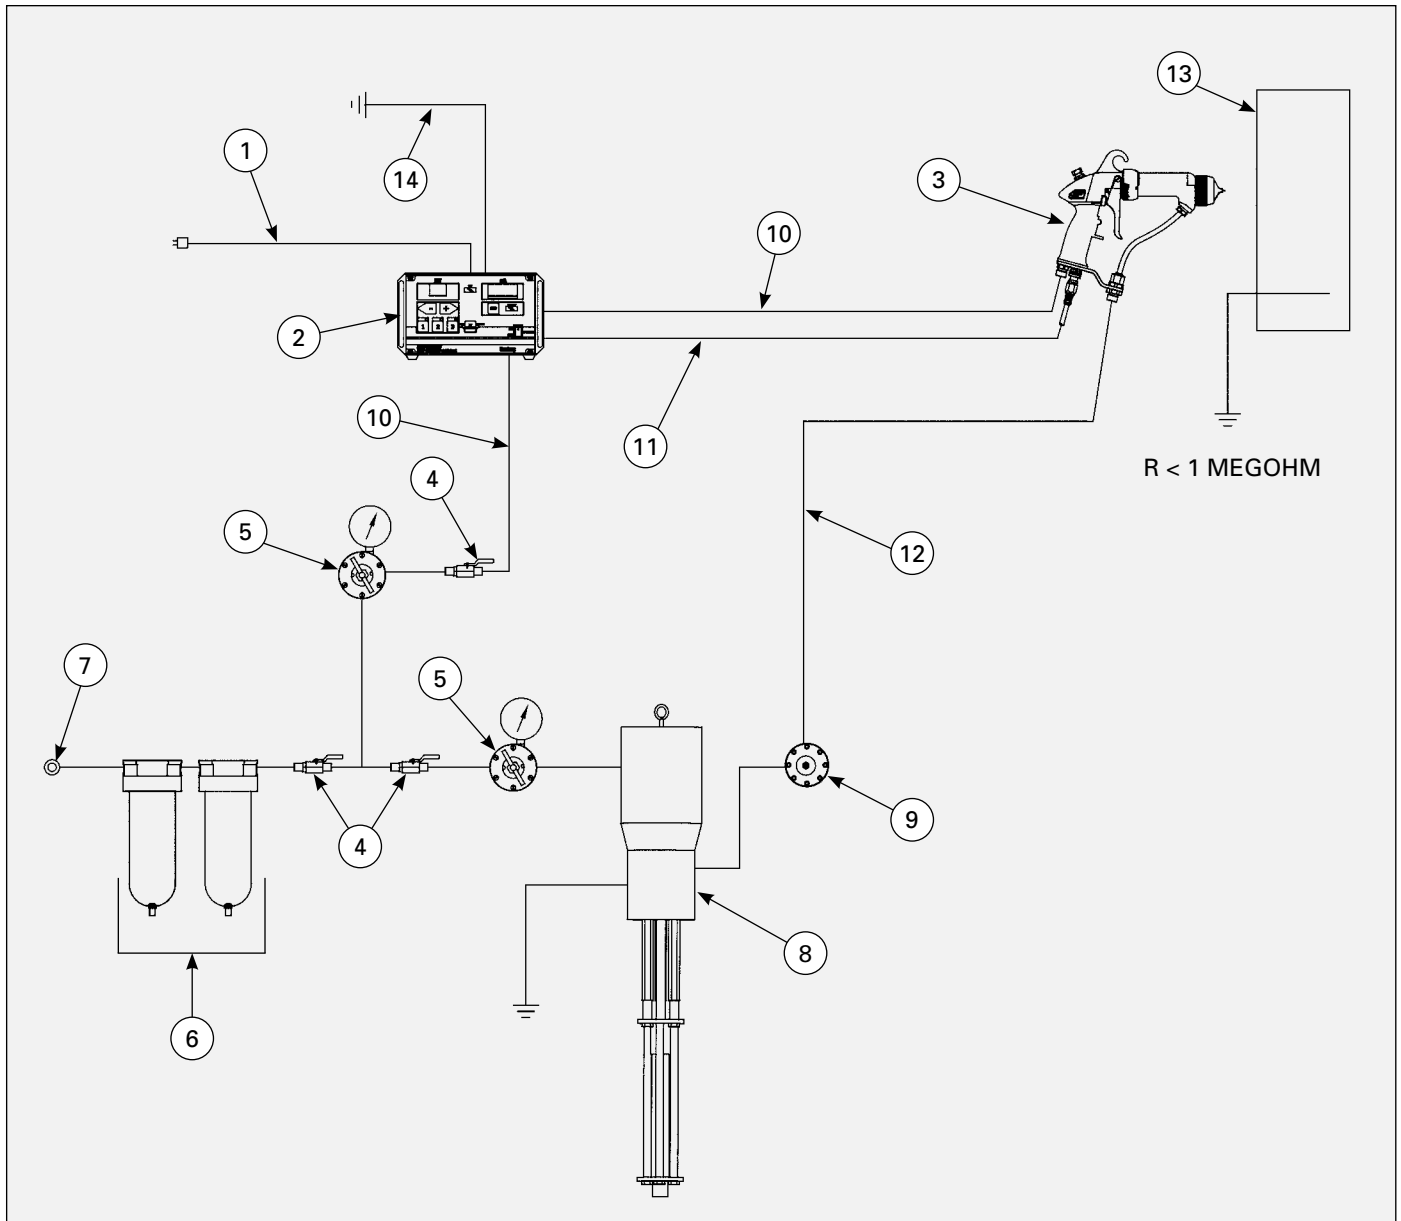


Figure 3: Typical Solventborne Installation Features

| TYPICAL SOLVENTBORNE INSTALLATION FEATURES | | | |
|--|--------------------------------|-----|---|
| No. | Description | No. | Description |
| 1 | AC Line Cord (110/220) | 8 | Fluid Supply (Grounded) |
| 2 | 9060 Control Unit | 9 | Fluid Regulator |
| 3 | Vector Applicator | 10 | Air Line |
| 4 | Ball Valve | 11 | Low Voltage Cable |
| 5 | Air Regulator W/Pressure Gauge | 12 | Fluid Line |
| 6 | Air/Water Separator | 13 | Target (Earth or Building Ground) |
| 7 | Main Air Supply Line | 14 | 9060 Ground (Separate Earth or Building Ground) |

The 9060 Control

Unit must be located a minimum of 5' (1.5 m) outside of what is considered to be the hazardous area. Any mounting method used must properly support the unit to a minimum of 4X the unit weight.

⚠ WARNING

- For safe use these applicators 79500, 79501 and 79523 must be used with the appropriate 9060 Control Unit part number 80131-XXX. For exact configurations see the approved configuration drawings in the front of this manual.

NOTE

- See manual CP-13-07 for the installation instructions for the 9060 control unit.

LOW VOLTAGE CABLE

Connect the low voltage cable from the control unit to the applicator using a wrench to tighten.

⚠ CAUTION

- **DO NOT** over-tighten the low voltage connection at the applicator. The plastic parts could be damaged.

With the Vector design, multiple cables may be connected together to create the length required, up to a maximum of 30m (100 ft.). To connect the cables, insert the male end of one cable into the female end of the other. Tighten both cable connectors against each other using two (2) 16mm (5/8") open-end wrenches.

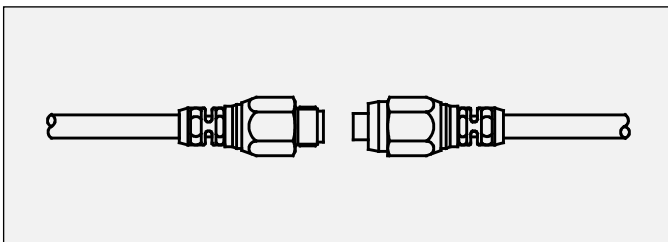


Figure 10: Daisy Chained Cable

⚠ WARNING

- The electrical discharge that is available from the charging electrode must not exceed 0.24 mJ of energy. To achieve this limit, any flow of energy from the paint supply through the paint line to the applicator electrode must be prevented by grounding the paint line at the applicator handle.

Verify that the applicator handle is actually grounded before operating it! This is done with a fully connected and operational system, by placing one lead of an ohmmeter to the handle and the other to the building electrical ground (cold water pipe, building structure, steel, etc.). This reading should be essentially zero.

If a greater reading is obtained, check that the control unit is grounded. (See the control unit manual for "Grounding Procedure.")

FILTERS

1. Install an air filter assembly on the air inlet of the control unit. The filter should be 5 micron with a maximum working pressure of at least 100 psig (6.9 bar). Screw the fitting into the filter inlet. The filter **MUST** be installed with the arrow pointing in the direction of flow. (Refer to the appropriate Filter Assembly manual for "Installation Instructions".)

When the applicator is triggered, the resulting air flow closes the contacts of the air flow switch, thereby activating high voltage at the applicator.

⚠ CAUTION

- An air filter **MUST** be installed to permit proper functioning of the air flow switch inside the control unit. This unit must filter particles 5 microns and larger.

2. Ransburg recommends that a fluid filter be installed at the output of the fluid supply (pressure pot, pump, circulating system, etc.). It is the end user's responsibility to install the proper filter that meets their system's requirements.

Air Hose Recommendation

Ransburg recommends using a 79547-XX air hose assembly that may be ordered through your authorized Ransburg distributor. This hose performs best with the Vector to reduce air hose stiffness along with weight reduction. Available hose lengths are listed in "Accessories" in the "Parts Identification" section of this manual.

CAUTION

- Any user installed air hose must be rated for 100 psig (6.9 bar) working pressure minimum.

Fluid Hose Recommendation

Ransburg recommends using a 79548 fluid hose assembly. This assembly is made to specifically fit the fluid fitting size engineered into the applicator. This hose is available from your authorized Ransburg distributor. Available hose lengths are listed in "Accessories" in the "Parts Identification" section of this manual.

CAUTION

- Any user installed fluid hose used must be rated for 100 psig (6.9 bar) working pressure minimum.

Air and Fluid Hose Installation

The fluid inlet fitting for the Vector applicator is 3/8-18 NPSM(M). When installing a fluid hose, tighten the fitting adequately to prevent any fluid leaks. The air inlet fitting is 1/4-18 NPSM(M). When installing the air hose, use a wrench to hold the air inlet fitting on the Vector and tighten the air hose fitting enough to prevent any air leaks.

Routing of Air and Fluid Hoses

Starting at the applicator, route the air hose along the same path as the low voltage cable to the low voltage control unit. The fluid hose can be run with the low voltage cable and air hose or it can be separate and run to the fluid source. Do not expose the hoses to high temperatures (over 120°F) and/or conditions such as moving parts, foot traffic, vehicle traffic, etc.

Prior to connecting the air hose to the low voltage unit and the fluid hose to the fluid supply, adjust the hose and low voltage cable position at the applicator to relieve some strain on the low voltage cable. To do this, perform the following procedure:

1. Disconnect the air hose from the applicator.
2. Position the air hose 1-inch (2.5cm) away from the bottom of the handle.
3. Secure the air hose to the low voltage cable. Secure the two together at one additional location, about 12-16-inches (30-41cm) back.
4. With a wrench, reconnect and secure the air hose to the applicator. (This should form a small loop in the low voltage cable.)
5. Secure the fluid hose to the air hose and low voltage cable as needed.

WARNING

- When securing the air hose, fluid hose, and low voltage cable together, take care not to use items such as wire or anything that might cut into the hoses or cable. If wire ties are used, they should only be tight enough to secure the cable and not so tight that they might restrict fluid and air flow.

Adjust the length of the air hose to the low voltage controller and install the fitting to the hose.

PAINT PREPARATION

A proper paint mixture is essential to electrostatic operation. Paint test equipment may be obtained through your Ransburg distributor. Reference the Technical Manual "Paint Related Information for REA, REM, Vector, and M90 Guns" for paint formulation information. For further paint formulation and testing procedures, consult your Ransburg distributor and/or your paint supplier.

SPRAY PATTERN ADJUSTMENT

The spray pattern of fan atomizers is adjustable from a small circle to an elongated oval, approximately 10-18-inches of usable pattern when sprayed from a target distance of 8-12-inches. The swirl atomizer assemblies produce a round pattern from 4-6-inches in diameter. The fan control knob provides control of the pattern shaping air. Counter-clockwise expands the pattern and clockwise reduces it.

The Vector has a distinct feature that allows counting of clicks. The fan valve has 8 clicks per 1 full turn of the adjustment knob.

To change the spray pattern axis of fan atomizers from horizontal to vertical, loosen the air nozzle retaining ring, rotate the air cap clockwise to the desired position, and gently tighten the ring.

APPLICATOR TO TARGET DISTANCE

Hold the applicator 6-12-inches maximum from the target for best operation (higher transfer efficiency will be achieved at the closer target distance). Trigger the applicator fully to operate.

NOTE

- See the Ransburg bulletin "Handgun Spray Techniques".

FLUID NOZZLE SELECTION STD SPRAY CHART

| Fluid Nozzle Part # | Orifice ID | Nozzle Material |
|---------------------|-------------------|-----------------|
| 79377-44 | 1.4mm (.055 inch) | Standard Wear |
| 79377-144 | 1.4mm (.055 inch) | Extended Wear |
| 79377-45 | 1.8mm (.070 inch) | Standard Wear |
| 79377-145 | 1.8mm (.070 inch) | Extended Wear |
| 79377-46 | 1.0mm (.042 inch) | Standard Wear |
| 79377-146 | 1.0mm (.042 inch) | Extended Wear |
| 79377-47 | .7mm (.028 inch) | Standard Wear |
| 79377-147 | .7mm (.028 inch) | Extended Wear |
| 79377-48 | 1.2mm (.047 inch) | Standard Wear |
| 79377-148 | 1.2mm (.047 inch) | Extended Wear |

FLUID NOZZLE SELECTION TRANS-TECH. CHART

| Fluid Nozzle Part # | Orifice ID | Nozzle Material |
|---------------------|-------------------|-----------------|
| 79552-244 | 1.4mm (.055 inch) | Standard Wear |
| 79552-344 | 1.4mm (.055 inch) | Extended Wear |
| 79552-245 | 1.8mm (.070 inch) | Standard Wear |
| 79552-345 | 1.8mm (.070 inch) | Extended Wear |
| 79552-246 | 1.0mm (.042 inch) | Standard Wear |
| 79552-346 | 1.0mm (.042 inch) | Extended Wear |
| 79552-247 | .7mm (.028 inch) | Standard Wear |
| 79552-347 | .7mm (.028 inch) | Extended Wear |
| 79552-248 | 1.2mm (.047 inch) | Standard Wear |
| 79552-348 | 1.2mm (.047 inch) | Extended Wear |

AIR CAP / FLUID NOZZLE SELECTION CHART AIR SPRAY / TRANS-TECH. SPRAY

| Air Cap Part # | Fluid Nozzle Part # | Orifice ID | Separate Retaining Ring | Pressure Reducer |
|----------------|---------------------|--------------|-------------------------|------------------|
| 79374-65 | 79377-44 | 1.4mm (.055) | 79379-00 | 74963-05 |
| 79374-65 | 79377-45 | 1.8mm (.070) | 79379-00 | 74963-05 |
| 79374-98 | 79377-44 | 1.4mm (.055) | 79379-00 | 74963-05 |
| 79374-98 | 79377-45 | 1.8mm (.070) | 79379-00 | 74963-05 |
| 79374-122 | 79552-44 | 1.4mm (.055) | 79379-00 | 74963-06 |
| 79374-122 | 79552-45 | 1.8mm (.070) | 79379-00 | 74963-06 |

AIR CAP / FLUID NOZZLE PERFORMANCE CHART

| Fluid Nozzle Part # | Orifice ID (in/m) | Fluid Delivery* (ml/min) | Spray Type | Air Consumption** (SCFM/SLPM) | Air Pressure (psi/bar) | Air Cap | Pattern Size*** (inches) | Pressure Reducer | Applicators |
|---------------------|-------------------|--------------------------|------------|-------------------------------|------------------------|-----------|--------------------------|------------------|-------------|
| 79377-45 | .070/1.8 | 300 | Air Spray | 18/510 | 22/1.5 | 79374-65 | 15±1/2 | Black | Vector |
| 79377-45 | .070/1.8 | 300 | Air Spray | 18/510 | 37/2.6 | 79374-98 | 17±1/2 | Black | |
| 79522-245 | .070/1.8 | 300 | LVMP | 8.3/234 | 30/2.1 | 79374-122 | 12±1/2 | Green | |

* Material: Lacquer, 18 Sec. No. 4 Ford Cup @ 72°F. Results are material dependent.

** Air Flow @ Air Pressure noted in next column.

*** Patterns at 8-inch target distance.

ROUND SPRAY PERFORMANCE CHART

| Fluid Nozzle Part # | Round Air Cap Part # | Retaining Ring Part # | Spray Type | Air Applicators (SCFM/SLPM) | Air Pressure (psi/bar) | Pattern Size Ø | | | |
|---------------------|----------------------|-----------------------|----------------|-----------------------------|------------------------|----------------|----------------|------------------|-------------|
| | | | | | | Fan Open | Fan Closed | Pressure Reducer | Applicators |
| 79959-00 | 79962-00 | 79379-00 | Swivel / Round | 7.1/ Horn Closed 202 | 25/1.7 | 2.0" / 50mm | 3.5" / 89mm | Black | Vector |
| | | | | 8.1/ Horn Closed 230 | | | | | |

OPERATION

POWERING UP CONTROL UNIT

When the AC power is turned on, the unit will display the PC board applicator type number on the kV setpoint display and the software revision level in the μ A display for 2-3 seconds.

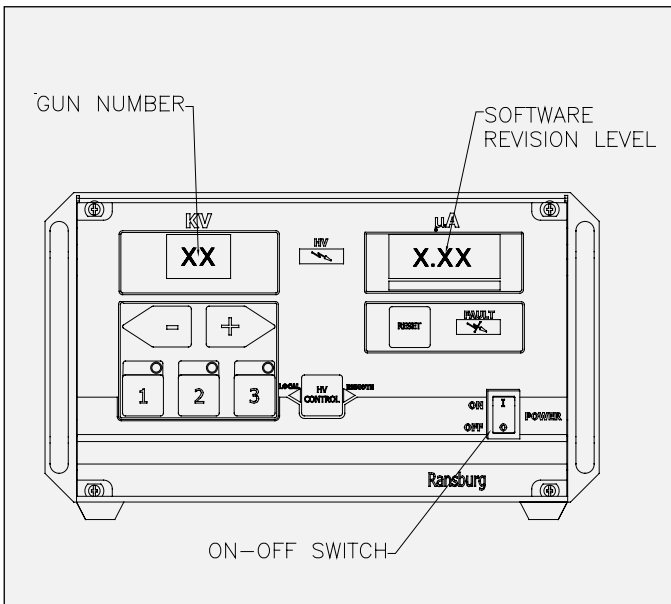


Figure 4: Control Unit Start-Up Display

| START-UP DISPLAY | |
|------------------|---------------|
| Applicator Type | Description |
| 1 | 85 kV Cascade |
| 5 | 65 kV Cascade |

⚠ CAUTION

► **DO NOT** connect a 65 kV applicator to a unit setup for 85 kV. Damage to 65 kV barrel assembly may occur.

SETPOINT VOLTAGE

The Vector spray applicator system has three voltage setpoints 1, 2, and 3. Each of these voltages can be individually adjusted between 20 and full kV using the + and - buttons on the front of the control unit. When the applicator trigger is off, the present setpoint can be changed either from the control unit or from the switch on the back of the applicator.

NOTE

► Setpoints cannot be adjusted below 20 kV.

Setting and Changing the Setpoint at the Control Unit

From the factory, Preset 1 is full minus 20 kV, Preset 2 is full kV minus 10, and Preset 3 is full kV. For 79500/79523 full kV is 85 kV. For 79501 full kV is 65 kV.

At the control unit with the applicator not triggered, press the 1, 2, or 3 button on the front panel of the control unit. (See Figure 5 for positions of the kV setpoint and adjust buttons.) The only place to adjust the kV of each setpoint is at the control unit.

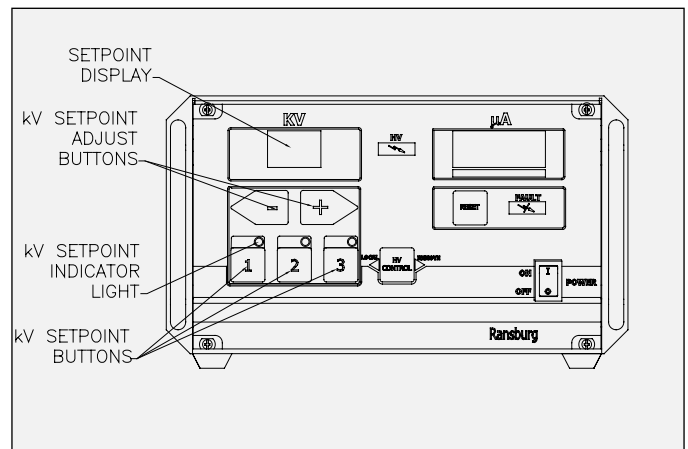


Figure 5: Front View of Control Unit

When a kV setpoint button is pressed, the light above the button will light and the kV display will show the present voltage for that setpoint. This indicates the unit is set to spray at that setpoint. To adjust the kV for the present setpoint, press the + or - setpoint adjust buttons.

When the + or - setpoint adjust buttons are held in longer than 1 second, the kV display will begin incrementing or decrementing in units of 5 instead of 1.

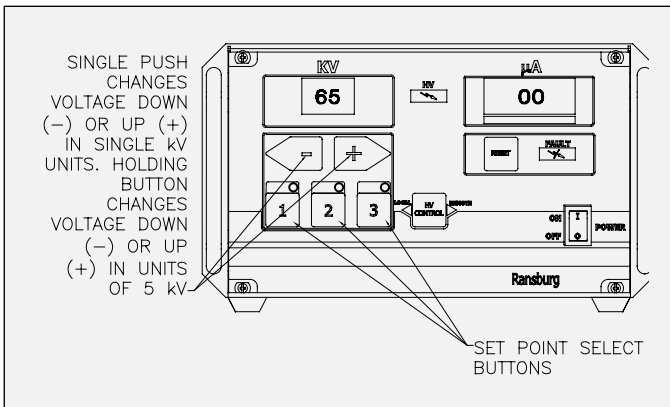


Figure 6: Changing Setpoint

Changing the Setpoint at the Applicator

To change the setpoint at the applicator, the applicator must NOT be triggered. By pushing the kV button on the rear cover of the applicator, the setpoint will change. If there are 2 green lights lit, setpoint 1 is active. If 2 green lights and 2 yellow lights are lit, setpoint 2 is active. If all lights are lit (2 green lights, 2 yellow lights, and 2 red lights) setpoint 3 is active.

kV to the applicator can be turned off by pressing the applicator kV button in for 2-3 seconds. This can be done whether the applicator is triggered or not and is useful if the kV needs to be turned off for spraying into recessed areas. When the kV is disabled in this manner, the kV meter will read zero, OFF will be displayed in the microamp meter and all kV setpoint indicator lights will be disabled. Pressing the kV button in for another 2-3 seconds turns the kV to the applicator back on.

⚠ WARNING

- **DO NOT** turn the applicator off using the applicator button in place of interlocking with a solvent supply for flushing. The applicator must be interlocked with solvent supply such that when the solvent is on to flush the applicator, there is no kV at the applicator.

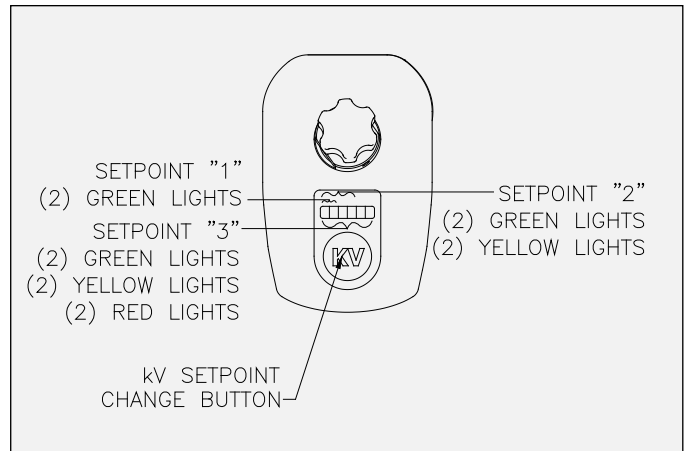


Figure 7: View of Rear Cover

LOCKOUTS

There are lockouts that may be done at the PC board (see Figure 8). These lockouts may be used individually or in combination as required. If the jumpers are disconnected, the original functions are re-enabled. After changing any jumpers, the AC power must be cycled for the new setting to take affect.

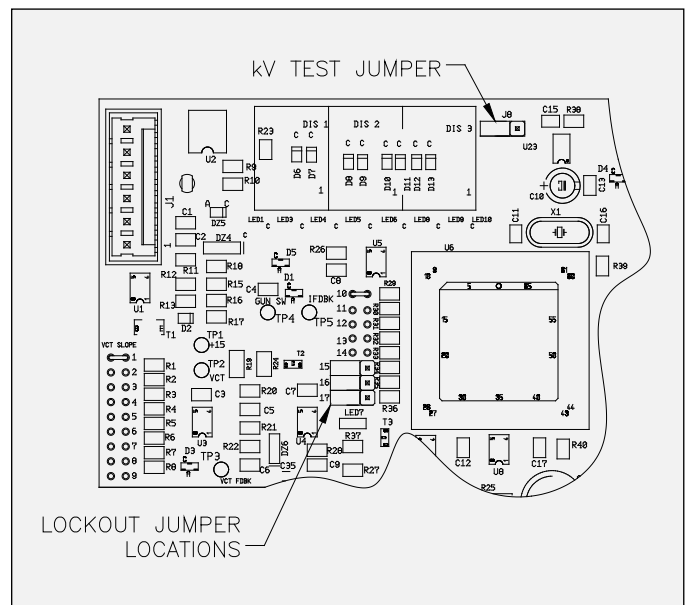


Figure 8: Lockout Jumper Location

Front Panel Lockout

This feature locks out any changes to the kV setting from the front panel of the control unit.

1. Set the kV to the desired value using the front panel buttons. This must be set prior to installing the jumper.
2. Turn AC power off and access the interior of the control unit.
3. Place the jumper across the two (2) pins at location 16 on the main PC board (see Figure 9).
4. Close the control unit and turn AC power back on. Pressing the front panel +, -, or setpoint buttons will now have no effect on the kV setting.

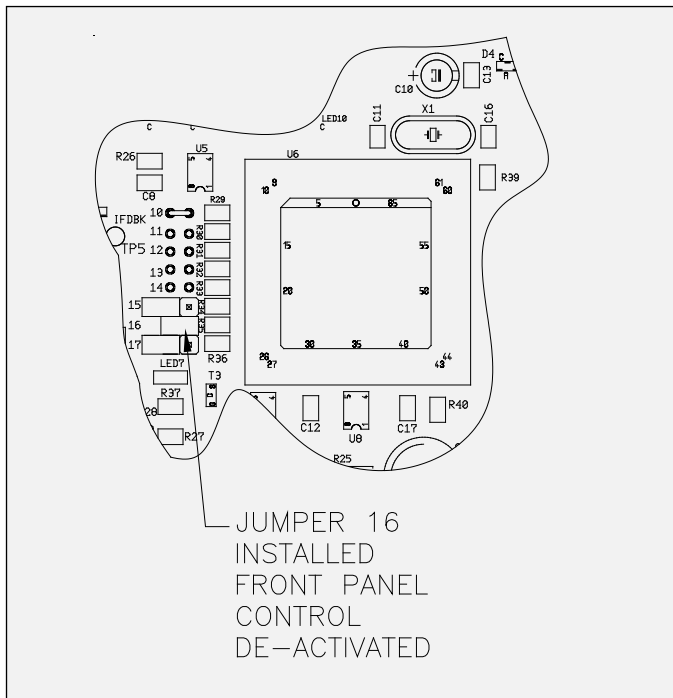


Figure 9: Jumper Location - Front Panel Lockout

Applicator Switch Lockout

The applicator switch may be de-activated for applications that require the operator to not be able to change settings or turn the applicator off at the applicator.

1. Turn AC power off and access the interior of the control unit.
2. Place the jumper across the two (2) pins at location 15 on the main PC board (see Figure 10).
3. Close the control unit and turn AC power back on. It will now be no longer possible to change setpoints or turn kV off at the applicator.

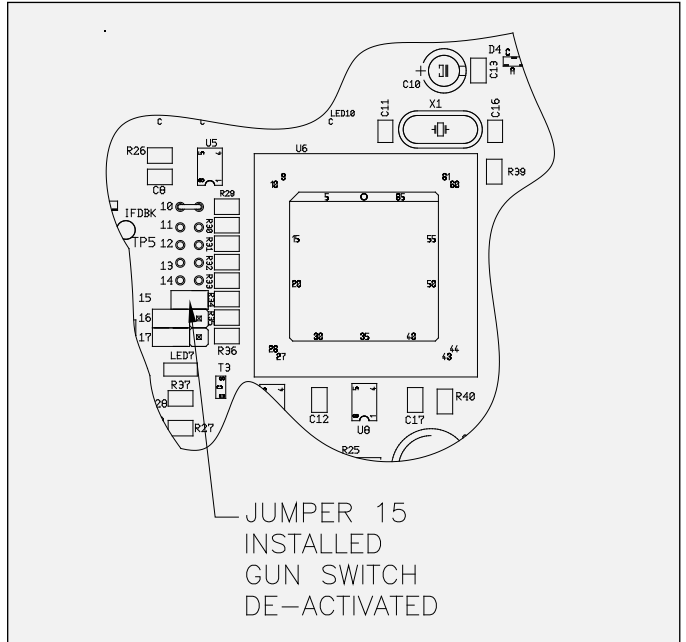


Figure 10: Jumper Location - Applicator Switch Lockout

Overload Activation

The overload circuit may be activated for applications that require notification of high applicator output currents. The overload value is set in the software and is maximum microamp rating minus 10 microamps.

1. Turn AC power off and access the interior of the control unit.
2. Place the jumper across the two (2) pins at location 17 on the main PC board (see Figure 11).
3. Close the control unit and turn the AC power back on. An overload fault will now occur if the microamp display comes within 10 microamps of the maximum current.

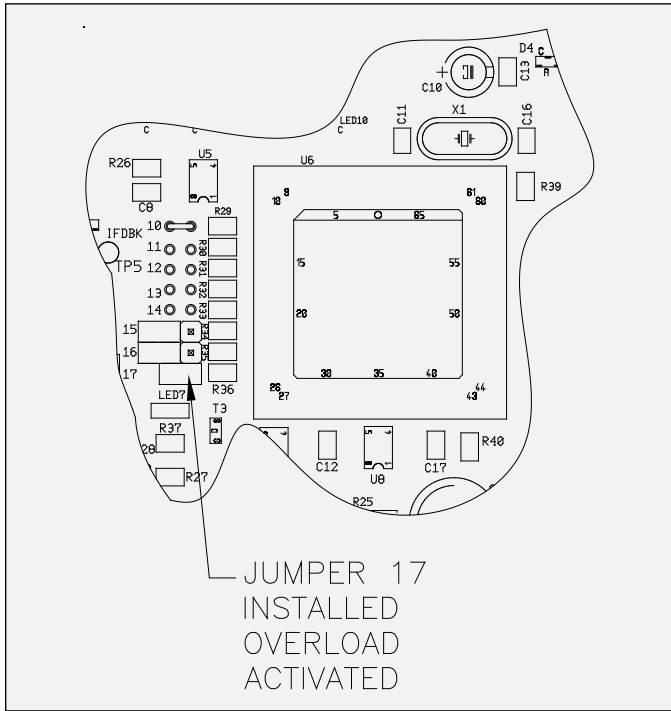


Figure 11: Jumper Location - Overload Activation

KV TEST JUMPER

To assist in testing and troubleshooting, a jumper (J8) has been added to the main PC board. By covering (shorting) both terminals of this jumper, the high voltage to the spray applicator can be activated. Thus, for testing and troubleshooting, high voltage output can be obtained without the need to trigger air through the spray applicator. After testing, the jumper must be repositioned so that it covers only one terminal (open) or the high voltage will stay on all the time. (See Figure 8 for location of test jumper J8.)

⚠ CAUTION

➤ If jumper J8 is left covering (shorting) both terminals, high voltage will be on whenever AC power is turned on.

BASIC OPERATION

Triggering

High voltage is actuated by pulling the trigger to start the flow of atomizing and fan control air through the applicator. When the applicator is triggered, an air flow switch is activated, the kV setpoint is displayed on the kV display, the actual current draw on the μA display and the high voltage light illuminates. Under the μA display is a bar graph meter that illuminates according to the actual current draw.

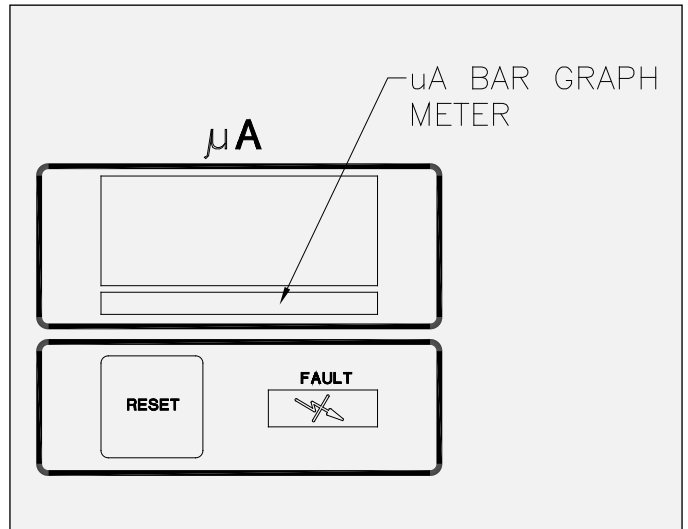


Figure 12: μA Bar Graph Display

The green and yellow regions of the bar graph meter indicate output current is in the optimum range for maximum transfer efficiency. The red region of the bar graph indicates high output current causing decreased transfer efficiency.

The display at the rear of the applicator also doubles as a microamp bar graph meter when high voltage is on (see Figure 13). Its function is similar to that of the control unit bar graph display.

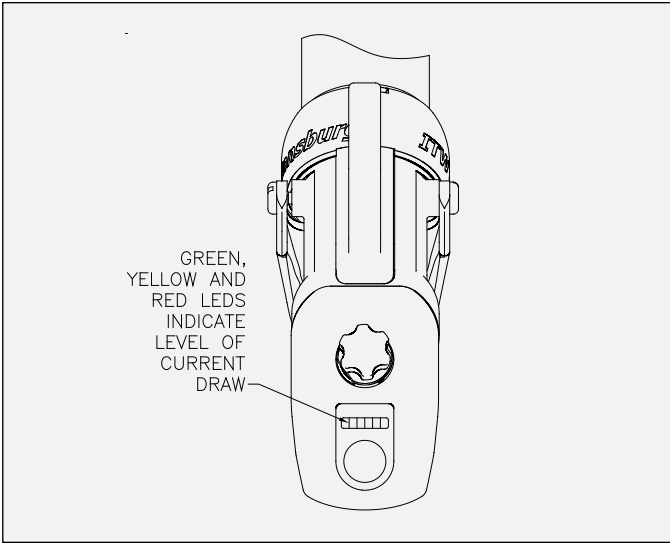


Figure 13: View of Applicator LED Display

Measuring "High Voltage On" Time

The 9060 Power Supply records the amount of time the high voltage is triggered on up to 99,999 hours. These units are displayed in the kV and μ A displays of the unit. There are two registers that retain this information, one that may be reset, the other that is permanently retained in memory. The number of hours the unit's high voltage has been on may be displayed by depressing at the same time the preset 1 and reset buttons. The display will show hours of use for 3 seconds. This is the re-settable register.

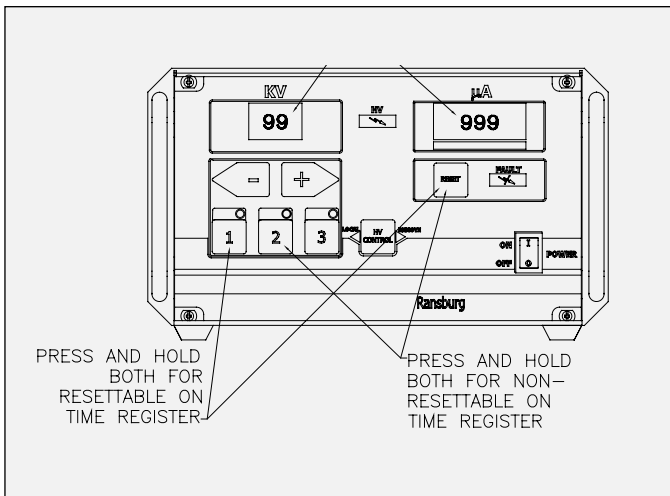


Figure 14: Display In "High Voltage On" Time

To reset this register, press the reset button while the hours are displayed. Pressing the preset 2 and reset buttons at the same time will show the number of hours on the non-re-settable register.

Local/Remote

The Vector product line is designed currently for applicators only. The local/remote high voltage control switch should be set to local for all Vector applicator applications.

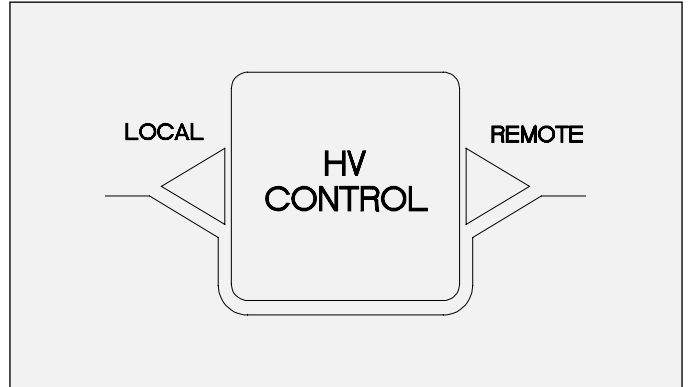


Figure 15: High Voltage Control Switch

⚠ CAUTION

- The unit will not function if it is in remote mode without external inputs.

FAULT DESCRIPTIONS

For in depth troubleshooting information on the 9060, refer to CP-XX-XX. When a fault occurs, the Fault Indicator on the front of the control unit will light, a fault code will be displayed on the microamp meter and the 6 LED's at the rear of the applicator will flash. Faults can be reset by pressing the Reset button on the front of the control unit or by pressing and holding the kV switch at the rear of the applicator for 2-3 seconds.

MAINTENANCE

SUITABLE SOLVENTS FOR CLEANING VECTOR R90/70 APPLICATORS

When cleaning the applicator, a suitable solvent for cleaning depends on the part(s) of the applicator to be cleaned and the material that needs to be removed. Ransburg recommends that all exterior cleaning be done with non-polar solvents to prevent a conductive residue on critical components. We also understand that some of these solvents do not always meet the cleaning needs of some materials. If conductive polar solvents are used to clean the applicator components, all residue must be removed using a non-conductive non-polar solvent (i.e. high flash Naphtha). If there are any questions as to what solvents are best for cleaning, contact your local Ransburg distributor and/or your paint supplier.

The Vector applicator, air hoses, fluid hose, and high voltage cable assemblies should not be submerged or soaked in solvent. However, the outer surfaces of these items can be wiped with a suitable cleaning solvent. The items that cannot be soaked are noted throughout this manual. All electrical components cannot be cleaned or soaked in any solvents.



WARNING

- The user **MUST** read and be familiar with the safety instructions in this manual.
- If compressed air is used in cleaning, **REMEMBER** that high pressure air can be dangerous and should **NEVER** be used against the body. It can blind, deafen, and may even penetrate the skin. If used for cleaning equipment, the user should wear safety glasses.
- **ALWAYS** turn the control unit's power off prior to cleaning and servicing the equipment.
- Be **SURE** the power is **OFF** and the system is grounded before using solvent to clean **ANY** equipment.
- **DO NOT** operate a faulty applicator!
- When using cleaning solvent, standard health and safety precautions should apply.
- Any solvent used to clean the fluid passages must be discharged into a grounded container. Use of ungrounded or plastic containers may cause fire or explosion.
- Cleaning of the exterior surface of the applicator should be done with non-polar solvents. If cleaning requires the use of polar solvents, the applicator should be wiped down with non-polar solvent prior to going back into use. Using polar solvents will leave a semi-conductive film on the surface of the applicator that will effect efficiency of the applicator and cause damage to the components.

ROUTINE SCHEDULE

Follow these maintenance steps to extend the life of the applicator and ensure efficient operation:

Several Times Daily

- Turn the control unit power to OFF!
- Inspect the air cap for paint accumulation. Clean as frequently as necessary with a soft bristled brush and a suitable solvent.
- Clean all insulating surfaces in the system. Remove paint accumulation from the exterior of the applicator and low voltage cable with a solvent dampened cloth.

CAUTION

► **NEVER** remove the fluid nozzle assembly while paint is in the applicator or paint may enter into the air passages. Clogged or restricted air passages will cause poor atomization and/or electrical shorting. Air passages that are clogged with conductive material can lead to excessive current output levels and consequent low operating voltage or long-term electrical damage. Before undertaking any atomizer maintenance procedure, see "Applicator Assembly Cleaning Procedure" in the "Maintenance" section.

The applicator barrel **MUST** be tilted front down to remove the fluid nozzle. Failure to do so may allow paint to enter the air passages, thereby reducing airflow and damaging the applicator barrel/cascade. Applicators may be flushed in lieu of tilting. However, they must be either flushed or tilted down during nozzle removal!

Daily (or at start of each shift)

- Verify that ALL solvent safety containers are grounded!
- Check within 20 feet of the point of operation (of the applicator) and remove or ground ALL loose or ungrounded objects.

CAUTION

► **NEVER** soak or submerge the electrical components of the applicator, i.e., barrel, hook, or cable. Damage and failure may occur.

- Inspect work holders for accumulated coating materials (and remove such accumulations).
- Check that atomizer assembly is clean and undamaged.
- Straighten the applicator electrode if necessary.
- Clean the fluid filter, if used.
- Turn the control unit power ON.
- Run a current/voltage output test.

NOTE

► Standard electrode is "snap back" spray wire electrode.

Electrical Current Output Test

1. Turn the paint and/or solvent supply OFF.

WARNING

► Paint and/or solvent supply must be turned off during this test - risk of fire or explosion.

2. Trigger the applicator (high voltage ON).
3. Slowly approach the applicator electrode to any grounded object and make contact.
4. Monitor the current output reading on the control unit microamp meter as the applicator approaches ground:

Upon ground contact, the microamp meter should display 100 μ A (for R90) or 90 μ A (for R70) and the green, yellow, and red LED's of the bar graph meter will all be illuminated.

If the reading is outside of the acceptable range (95-100 μA for R90; 85-90 μA for R70), DO NOT use the applicator until the problem has been corrected (see "Troubleshooting Guide" in the "Maintenance" section.)

5. Release the trigger (high voltage OFF) and turn the control unit power OFF.

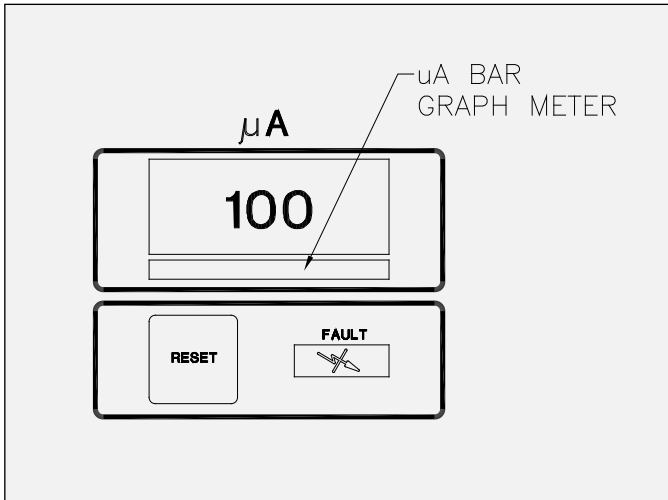


Figure 16: Control Unit Meter Current Output Test Reading

Shutdown (or at end of each shift)

1. Turn the power supply power OFF.
2. Turn the paint supply OFF.
3. Turn the atomizing and fan air OFF.
4. Wipe the applicator, cable, and hoses with a rag and a suitable cleaning solvent.

NOTE

- If production downtime is to be short, the fluid lines may not require flushing, depending on the coating material being used. If the solids in the material settle slowly, the lines will not need to be flushed as soon after shutdown as with fast settling solids. The paint being used and the length of downtime will determine the need for flushing. Metallic paint and primer will require flushing sooner than other types of coating materials.

⚠ CAUTION

- If the coating material is fast settling and the fluid lines are not flushed soon enough, the internal passages may become clogged. This can lead to excessive downtime for repair.

5. Flush the lines and allow the solvent to remain in the lines unpressured (see "Flushing Procedures" in the "Maintenance" section).

Weekly

- Check the entire system for damage, leaks, and paint accumulation.
- Clean the atomizer assembly.

APPLICATOR ASSEMBLY CLEANING PROCEDURE

Routine Cleaning Equipment Needed

- An appropriate solvent
- A solvent safety container (grounded)
- A small soft-bristled brush
- The Ransburg special multi-purpose wrench (19749-00)

⚠ CAUTION

- To avoid damage to the fluid nozzle or needle/electrode, the paint pressure **MUST** be released by triggering the applicator prior to removing the tip.
- The applicator barrel **MUST** be tilted front down to remove the fluid nozzle. Failure to do so may allow paint to enter the air passages, thereby reducing airflow and damaging the applicator barrel/cascade. Applicators may be flushed in lieu of tilting. However, they must be either flushed or tilted down during nozzle removal!
- The control unit power **MUST** be off when removing the nozzles and/or during any applicator maintenance.

⚠ CAUTION

- When installing or removing the fluid nozzle, the applicator **MUST** be triggered. Failure to do so may cause damage to the electrode or fluid nozzle. Such damage can result in fluid leaks around the sealing area of these components.
- Using any tool other than the Ransburg multi-purpose wrench (19749-00) to remove or install the fluid nozzle may cause damage.

⚠ CAUTION

- Metal tools and wire brushes must **NEVER** be used. **NEVER** use a cleaning tool that is harder than the plastic parts. If a deposit cannot be removed with the solvent and a rag or the soft brush, soak **ONLY** the part in the solvent until the deposit can be removed! **NEVER** soak the applicator body or barrel!

For efficient electrostatic operation, keep the applicator's exterior and low voltage cable free of paint accumulation. This prevents the loss of voltage to ground with a resultant reduction in transfer efficiency. Paint accumulation in and around the air cap nozzles will reduce atomization quality. Clean the air cap using clean solvent and a soft bristle brush as often as needed to ensure good atomization. Proceed as follows:

⚠ WARNING

- **NEVER** wrap the applicator, associated valves and tubing, and supporting hardware in plastic to keep it clean. A surface charge may build up on the plastic surface and discharge to the nearest grounded object. Efficiency of the applicator will also be reduced and damage or failure of the applicator components may occur. **WRAPPING THE APPLICATOR IN PLASTIC WILL VOID WARRANTY.** Only approved applicator covers should be used.

1. Turn OFF the control unit power.
2. Release the trigger.
3. Turn the paint flow OFF.
4. See "Applicator Repair - Disassembly Procedures" in the "Maintenance" section.

⚠ WARNING

- Any broken or damaged components should be replaced. Any damage to the applicator may result in **UNSAFE** operating conditions.

5. Clean the applicator and associated parts with a soft brush and suitable solvent.

FLUSHING PROCEDURES

1. Turn OFF the control unit power.

⚠ WARNING

- Whenever solvent is flushed through the applicator the control unit power must be off.

2. Turn the paint supply OFF.
3. Turn the atomizing air supply OFF.
4. Tilt the applicator down and trigger until it is clear of paint.
5. Connect the solvent supply.
6. Run solvent through the system until it runs clear.

⚠ WARNING

- Any solvent used to clean the fluid passages must be discharged into a grounded container. Use of ungrounded or plastic containers may cause fire or explosion.

7. Disconnect the solvent supply.
8. Trigger the applicator until it is clear of solvent. After the preceding steps are complete, the applicator is ready for color change, storage, or maintenance.

⚠ CAUTION

- **DO NOT** allow the fluid lines to stand empty without flushing first! This will cause dried paint flaking and clogging of the fluid lines, applicator passages, and/or nozzles.

APPLICATOR REPAIR

All repairs should be made on a clean, flat surface. If a vise is used to hold parts during service or repair, **DO NOT** clamp onto plastic parts and always pad the vise jaws!

The following parts should be thoroughly packed with dielectric grease (LSCH0009-00) leaving **NO** air space or voids when assembling:

- All O-Rings (PTFE o-rings do not need lubrication)
- Needle Shaft Assembly
- Packing Tube
- Cartridge Assembly, Non-Adjustable
- Air Valve Rod Assembly

Apply sealant (7969-10) to the external threads of the following parts when assembling:

- Nut Air Valve Retaining (78635-00)
- Cap, Air Valve (79317-00)

Equipment Required

- Special Multi-Purpose Wrench (19749-00)
- 3/32" Allen Wrench for Set Screws
- Screwdriver (blade)
- Dielectric Grease (LSCH0009-00)
- Sealant, Medium Strength (7969-10)
- Plastic or Wood Dowel Rod, 5/16" Diameter

TO REMOVE THE APPLICATOR FROM THE WORK SITE

⚠ CAUTION

- **ALWAYS** remove the applicator from the work site for service or repair!
- **DO NOT** use any silicone lubricants in order to avoid paint defects.



WARNING

- Ensure the control unit power is **OFF** prior to any maintenance.

Solventborne Applicators

1. Flush the applicator. (Refer to "Flushing Procedures" in the "Maintenance" section.)
2. With a wrench, loosen and unscrew the fluid hose nut. Remove the fluid hose assembly.
3. With a wrench, lock the air fitting in place and loosen the air hose nut using a second wrench. Completely unscrew the nut and remove the air hose assembly.
4. Using a 16mm (5/8") open-end wrench, loosen the low voltage cable from the cable plug. Pull the cable straight out of the plug assembly.
5. Remove the applicator from the work site.

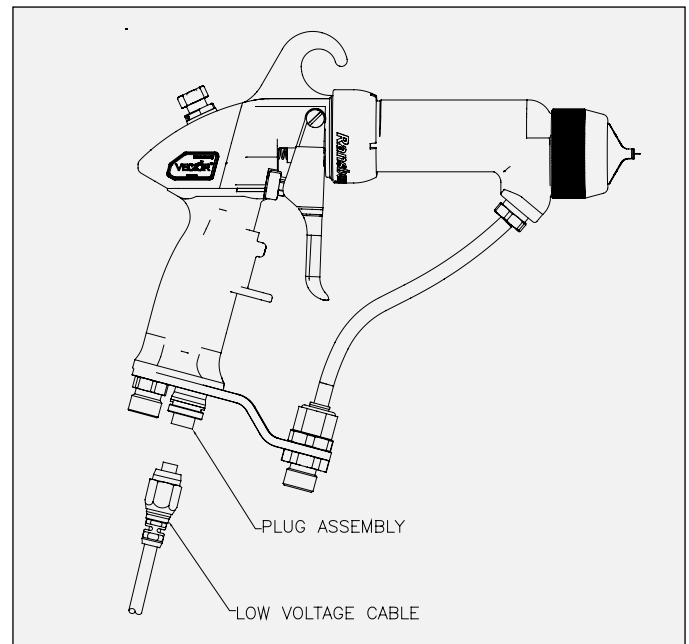


Figure 17: Removing Cascade Applicator

AIR CAP

Removal

1. While holding the barrel with one hand, loosen the retaining nut using the other hand.
2. Unscrew the retaining nut completely and remove the air cap.

Cleaning and Inspection

1. Use a suitable solvent to clean the air cap. (Refer to "Suitable Solvents for Cleaning Vector R90/70 Applicators" in the "Maintenance" section.)
2. Examine the air cap for damage to the air horns, face, and any air passages. If any of these areas are damaged or worn, the air cap should be replaced.

Reinstall

1. Check the fluid nozzle to ensure that it is tightly screwed into the barrel.
2. Place the air cap over the electrode wire of the needle/electrode and set it onto the fluid nozzle.
3. Place the retaining nut over the air cap and begin screwing it onto the barrel.
4. Before securing the retainer nut to the barrel, position the air cap for the desired spray pattern position.

FLUID NOZZLE

(Refer to Figure 18)

Removal

1. Remove the air cap from the applicator (refer to "Air Cap - Removal" in the "Maintenance" section).
2. Tilt the applicator forward and pull the trigger to make sure that all fluid in the applicator is drained out.

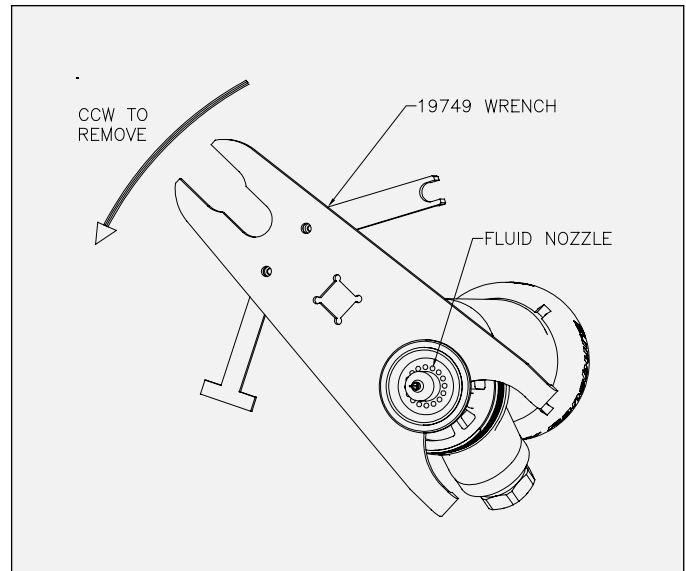


Figure 18: Removal of Fluid Nozzle

CAUTION

- The applicator barrel **MUST** be tilted front down to remove the fluid nozzle. Failure to do so may allow paint to enter the air passages, thereby reducing air-flow and damaging the applicator barrel. Applicators may be flushed in lieu of tilting. However, they **MUST** be either flushed or tilted during nozzle removal!

3. While holding the applicator assembly with the trigger pulled back, remove the fluid nozzle with the open-end of the special multi-purpose wrench.

NOTE

- To keep the needle/electrode from unscrewing from the needle shaft, the applicator's trigger should be actuated to pull the needle/electrode away from the fluid nozzle.

Cleaning and Inspection

1. Use a suitable solvent to clean the fluid nozzle
2. Examine the fluid nozzle for damage to the air passages and the fluid nozzle tip. Also, examine the needle seat for damage or wear. If any damaged or any worn areas are found, the fluid nozzle must be replaced.

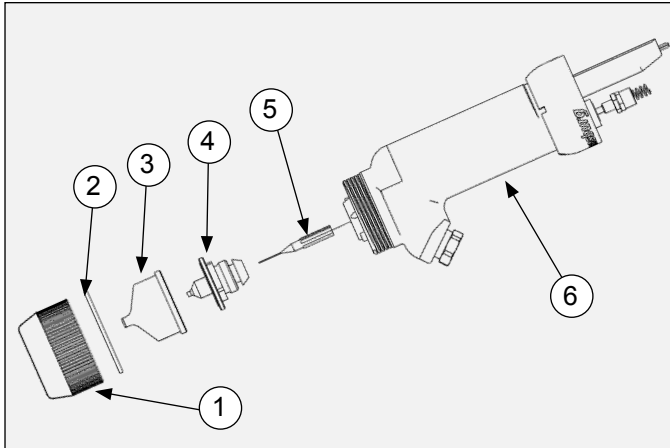


Figure 19: Air Cap, Fluid Nozzle, and Nut

| AIR CAP, FLUID NOZZLE, AND NUT | |
|--------------------------------|---------------------------|
| Item # | Description |
| 1 | Retaining Ring |
| 2 | O-Ring, PTFE Encapsulated |
| 3 | Air Cap |
| 4 | Fluid Nozzle |
| 5 | Electrode Assembly |
| 6 | Barrel Assembly |

NOTE

➤ If the fluid nozzle is replaced, there is a good chance that the needle/electrode assembly will need to be replaced also. A worn needle/electrode assembly may not always seat well in a new fluid nozzle.

Reinstall

1. Check the needle/electrode tightness on the needle shaft. If it is loose, tighten it (refer to "Needle/Electrode" in the "Maintenance" section).
2. With the applicator trigger actuated, place the fluid nozzle over the needle/electrode and screw it into the barrel by hand.
3. Tighten it using the special multi-purpose wrench with 3/8" square. Torque to 40-45 lbs - in (4.5-5.1 Nm). An alternate method (if no torque wrench is available) is to hand tighten, then tighten an additional 1/16 to 1/8 turn in the clockwise direction.
4. Install the air cap and retaining ring onto the applicator (refer to "Air Cap - Reinstall" in the "Maintenance" section).

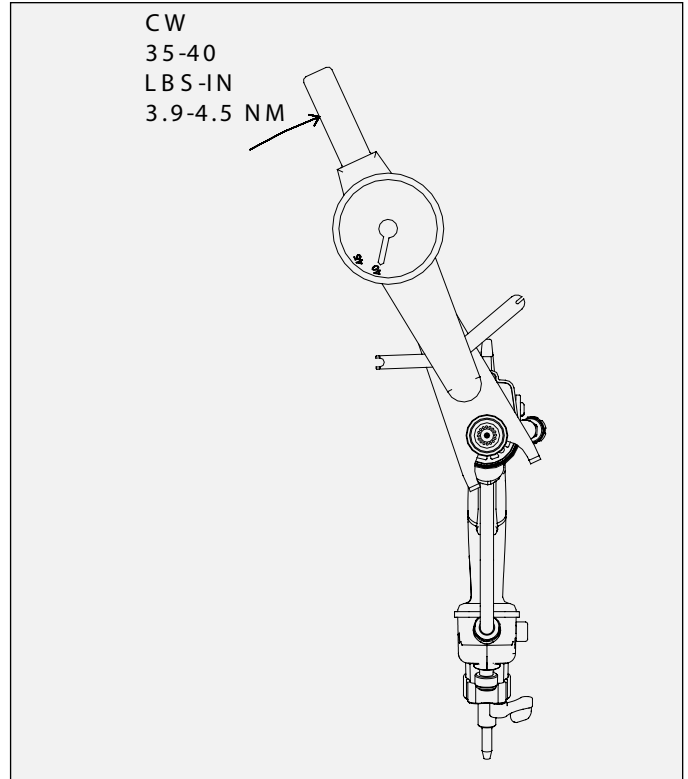


Figure 20: Reinstalling Fluid Nozzle

NOTE

➤ **DO NOT** over-tighten the fluid nozzle into the barrel. Doing so could damage or break the fluid nozzle or damage the thread of the barrel.

NEEDLE / ELECTRODE

Removal

1. Remove the air cap and fluid nozzle from the applicator assembly.
2. Secure the needle shaft at the rear of the barrel and unscrew the needle/electrode from the needle shaft.

Cleaning and Inspection

1. Use a suitable solvent to clean the needle/electrode.
2. Examine the needle/electrode for damage or wear. Pay special attention to the area where the wire electrode extends from the main body. This is a sealing surface that seats inside the fluid nozzle. If there are signs of wear in this area, both the needle/electrode and fluid nozzle must be replaced.
3. An electrical check of the needle/electrode must be done prior to reinstalling it into the applicator assembly (refer to "Needle/Electrode Resistance Testing" in the "Maintenance" section).

Reinstall

1. Secure the needle shaft at the rear of the barrel and screw the needle/electrode into place by hand.
2. Reinstall the fluid nozzle and air cap onto the barrel.

NEEDLE / ELECTRODE RESISTANCE TESTING

The electrical resistance of the needle/electrode should be tested periodically (typically on a weekly basis) or any time it is removed from the applicator.

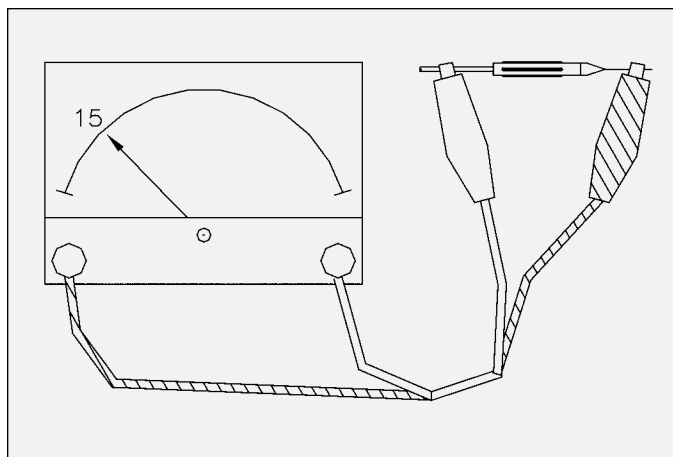


Figure 21: Testing Resistive Electrode

To Test

1. Install the needle/electrode onto the front end of an available needle shaft. Be sure that the needle/electrode is completely seated for proper contact between the metal shaft and the threaded insert of the needle/electrode.
2. Using a VOM meter that will read 15 megohms accurately, connect the first meter lead to the metal needle shaft and the second lead to the needle/electrode wire. The needle/electrode resistance should be less than 35 megohms at 9 volts or 12 to 17 megohms at 1000 volts. Needle/electrodes outside these ranges must be replaced.

BARREL ASSEMBLY

Removal

1. While holding the barrel with one hand, loosen the air cap retaining nut using the other hand.
2. Unscrew the retaining nut completely and remove the air cap.
3. Using a flat head screwdriver, loosen the two (2) shoulder screws that retain the trigger to the applicator handle.

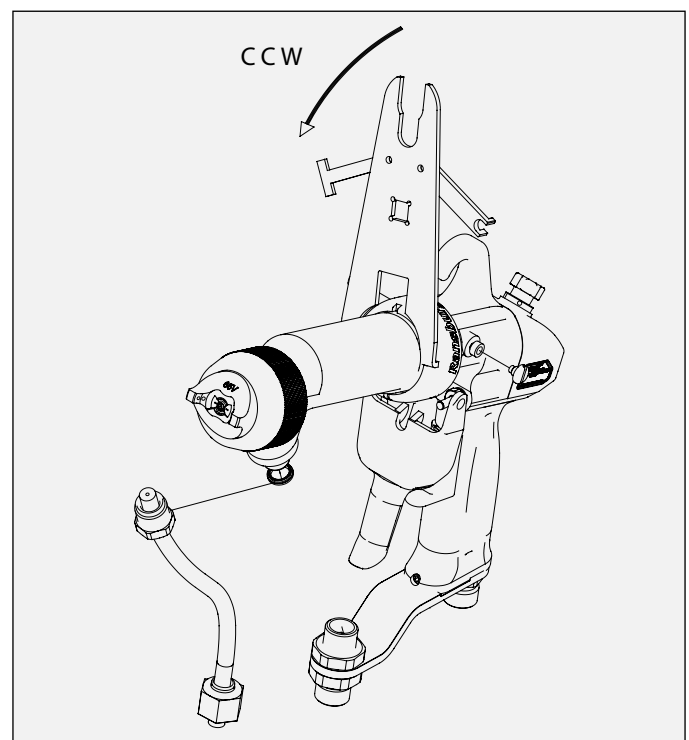


Figure 22: Barrel Assembly Removal

4. Remove trigger from the applicator handle.
5. Using an adjustable wrench, unscrew the fluid tube connector from the barrel and slide it down the fluid tube. The fluid tube must be removed prior to removing the barrel to prevent damage to the cascade.
6. Use the special multi-purpose wrench to loosen the retaining nut that secures the barrel to the applicator handle. After unscrewing the nut, slide it forward onto the barrel.
7. Hold the applicator handle and fluid tube so the barrel points downward. With the other hand, pull the barrel forward to separate it from the handle. Once the barrel has cleared the handle, remove the spring from the spring retainer and set it aside.
8. There is no need to remove the retaining ring or nut from the barrel unless they are damaged. If they are to be replaced, lift one end of retaining ring over the captive ridge and spiral it off the end of the barrel. Then the retaining nut can be removed.

⚠ CAUTION

- Use care in removing the retaining ring. If it is spread too much it could break.

DISASSEMBLY/REASSEMBLY OF BARREL WITH THE 2K FLUID NEEDLE PACKINGS

Disassembly

1. Remove the trigger adjustment nut and spring retainer from the needle shaft using two 3/8" open-end wrenches.
2. Position the barrel so the front is facing down. Using the small spanner tool on the special multi-purpose wrench, unscrew the packing nut from the rear of the barrel by turning it counter-clockwise.

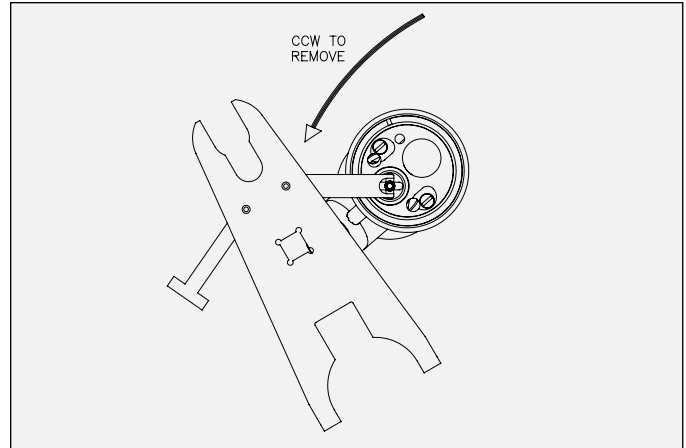


Figure 23: Removal of Needle Shaft

3. Hold the barrel in one hand and with a firm pull, remove the needle shaft assembly from the packing chamber of the barrel. The trigger adjustment nut can be reinstalled for additional grip. If the needle shaft will not pull out of the barrel, use the following procedure.
 - a. Remove the needle/electrode from the needle shaft.
 - b. Pull the needle shaft from the rear of the barrel.
 - c. Place the barrel on a work bench. Holding the barrel in one hand, with the front pointing upward, push a 5/16-inch diameter wooden or plastic dowel rod, down through the center bore of the barrel. This should push all of the packing chamber parts out the rear of the barrel.

NOTE

- The six (6) spring washers will come off the needle shaft assembly at this point.

⚠ CAUTION

- During this operation, be **CAREFUL** that the interior surface of packing chamber is **NOT** damaged (marred or scratched)! This chamber is a seal area and the barrel/cascade assembly will have to be replaced if it is damaged.
- **DO NOT** lose any of the spring washers! The applicator **MUST** have all six, correctly positioned, in order to function properly!

- Remove the trigger adjustment nut if it was required when pulling the needle shaft from the barrel packing chamber. Then remove the packing nut, spacer, rear seal retainer sub-assembly, and packing tube from the rear of the needle shaft. The spring loaded u-cup and o-ring can now be re-moved from the rear seal retainer.

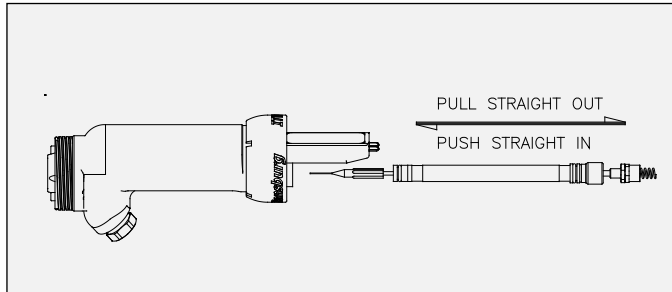


Figure 24: Needle Shaft Insert/Removal

NOTE

- If the spacer and seal retainer do not separate easily, wedge a knife blade between them and pry them apart.

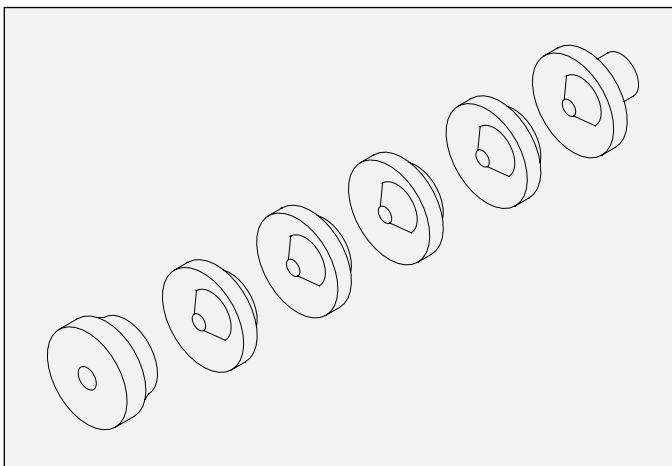


Figure 25: Chevron Seal Assembly

- Unscrew needle/electrode from shaft and slide the male chevron adapter, the chevron seals and female chevron adapter off the shaft (see Figure 31).
- Remove retaining ring and air cap from barrel.
- Loosen the fluid nozzle using the special multipurpose wrench and unscrew it by hand to remove.

Cleaning and Inspection

- Clean the packing chamber of the barrel with a suitable solvent and a soft bristle bottle brush. **DO NOT submerge or soak the barrel in solvent.** If the chamber has dry paint in it and cannot be cleaned out, the barrel **MUST BE REPLACED.**

⚠ CAUTION

- Soaking or submerging the barrel could allow solvents into the high voltage section of the barrel, leading to applicator failure and/or possible dangerous conditions that could result in property damage and personnel injury.

- Examine the plastic section of the needle shaft and the packing tube for signs of carbon tracking. Also, inspect the air passages and packing chamber of the barrel for signs of scratches, additional carbon tracking, or dried paint. Shine a small flashlight into the front of the barrel to highlight any damage in these areas.
- From time to time it is desirable to test the electrical integrity of the 70430-01 resistive electrode (see "Needle/Electrode Resistance Testing" in the "Maintenance" section).

Reassembly

(Refer to Figures 26, 27, 28, and 29)

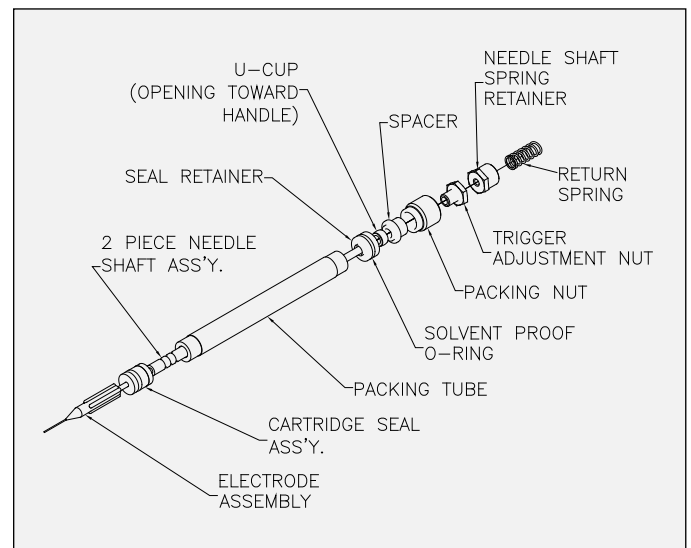


Figure 26: Needle Shaft Assembly (2k Packings)

⚠ CAUTION

- To avoid damage to the chevron seals, they **MUST** be installed from the rear of the barrel.

⚠ CAUTION

- **FAILURE** to coat the needle shaft assembly **MAY CAUSE** lower electrical output of the applicator.

1. Place conductive female chevron adapter onto the front of shaft with the concave side toward the front.
2. Screw the four (4) chevron seals onto shaft, concave sides forward.

⚠ CAUTION

- **DO NOT** push the chevron seals straight onto the shaft. The shaft threads may damage the chevron bore and cause the applicator to leak fluid.
- Inspect needle/electrode shaft sealing surface for wear. If it is rough or uneven, replace it.

3. Place male nonconductive chevron adapter onto shaft with the convex end rearward.

NOTE

- The chevron adapters and chevron seals should seat together to form an unbroken seal.

4. Screw needle/electrode onto shaft and hand tighten.

NOTE

- Apply a light coating of dielectric grease to the chevron seals and needle shaft.

5. Fill the inner diameter of the packing tube with dielectric grease.
6. Insert the needle shaft, rear section first, into the packing tube. Rotate the needle shaft while moving back and forth inside the packing tube until fully inserted.
7. With your finger, wipe the excess grease from both ends of the packing tube. Using the excess grease, apply a thin film to the outer surface of the packing tube and to the external o-ring on the cartridge seal.

NOTE

- Be generous with the dielectric grease when applying it to the packing tube and needle shaft. This helps to remove air voids from this chamber. **DO NOT** apply so much grease that it creates an air lock during assembly of the applicator.

8. Apply a light film of dielectric grease to the seal retainer o-ring and install it into the external groove.
9. Insert the spring loaded u-cup seal into the seal retainer (with the concave side facing outward). Use the short end of the spacer to seat the seal.
10. While holding the rear seal retainer sub-assembly and spacer together, place these components (with the spacer rearward) onto the rear of the needle shaft and slide them over the sealing area.
11. Place the six (6) spring washers onto shaft with the first, third, and fifth ones concave (cupped) side forward. The second, fourth, and sixth ones should be cupped side rearward (see Figure 33).

⚠ WARNING

➤ All six (6) spring washers **MUST** be replaced alternately as shown in Figure 33, or the applicator will malfunction.

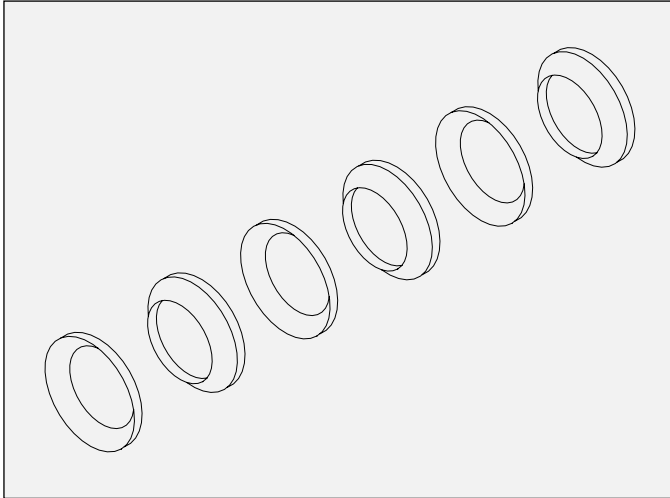


Figure 27: Spring Washer Assembly Sequence

12. Place the packing nut (large bore first) on the rear needle shaft section.
13. Screw the trigger adjustment nut onto the rear needle shaft section with the hexagon rearward and the spring retainer with the hexagon forward. Do not lock the hexagon nuts in place.
14. Install the needle shaft sub-assembly into the packing chamber from the rear of the barrel with the needle/electrode forward.
15. Push the needle shaft sub-assembly forward until the packing nut will engage its mating thread in the barrel and screw it into place by hand, approximately 3 turns.

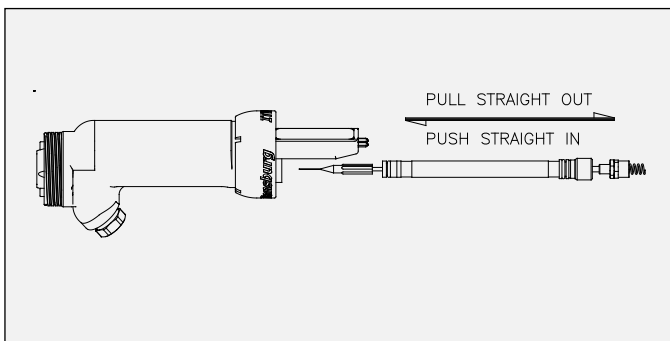


Figure 28: Needle Shaft Assembly Into Barrel

16. Pull the needle shaft rearward as far as it will go.
17. Install the fluid nozzle, air cap, and retaining nut (refer to "Air Cap" and "Fluid Nozzle" in the "Maintenance" section).
18. Tighten the packing nut using the spanner tool on the special multi-purpose wrench until a firm resistance is felt on the needle shaft while reciprocating it by hand.

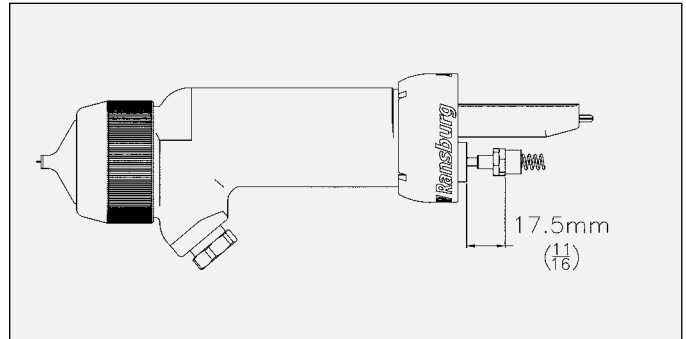


Figure 29: Trigger Adjustment Nut Dimensions

19. Push the needle shaft forward until the needle/electrode seats into the fluid nozzle.
20. Adjust the trigger adjustment nut as far forward on the needle shaft as possible.
21. Adjust the needle shaft spring retainer until the rear of the hexagon is 11/16-inch from the rear surface of the barrel packing chamber (refer to Figure 29).
22. Hold the spring retainer in place and screw the front trigger adjustment nut rearward until contact is made. Use two 3/8" open-end wrenches to tighten and lock the adjustment nuts in place on the needle shaft.

⚠ CAUTION

➤ **DO NOT** overtighten the hexagon adjustment nuts or damage may occur to the plastic threads or the needle shaft may break. Finger tight is typically sufficient. (Maximum torque of 18-24 in•oz).

Attaching Barrel to Handle

1. If the barrel retaining nut has been removed, it will have to be reinstalled before the barrel can be attached to the handle.
2. Place the retaining nut over the rear of the barrel and slide it as far forward as possible.
3. Spread the retaining ring and place it onto the barrel. Starting at one end, lift the retaining ring over the captive ridge and spiral into place.
4. Place the large hole of the gasket over the needle shaft and onto the base of the barrel packing chamber.
5. While holding the barrel with the air nozzle pointing downward, install the needle shaft spring into the spring retainer. Align the rear end of the barrel assembly with the matting area of the handle assembly, and the needle shaft spring with the spring recess in the handle. Slide the barrel into the handle cavity until it is seated against the gasket. Ensure the needle shaft spring seats properly into the handle recess.
6. While holding the barrel in place, screw the retaining nut onto the handle by hand and then tighten using the special multi-purpose wrench.

NOTE

- Torque the retaining ring to 8-10 lbs•ft or after hand tightening, torque an additional 1/6 to 1/8 turn using the special multi-purpose wrench.

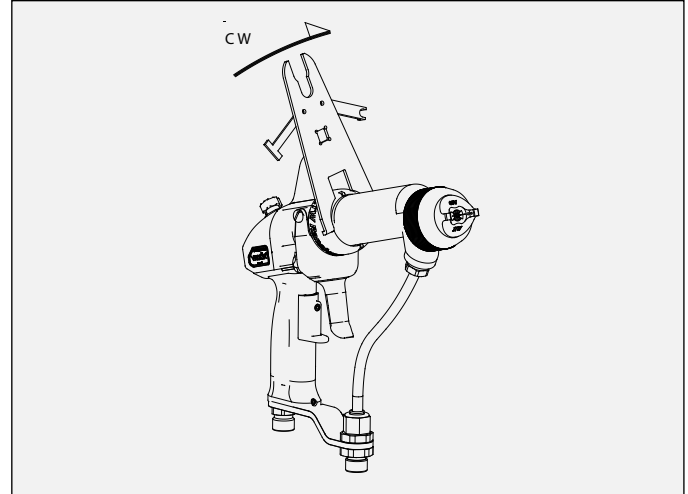


Figure 30: Barrel to Handle Assembly

7. Check the spacing between the back of the spring retainer and the handle. It should be about 1/8-inch. If not, check for one or more of the following:
 - Gasket has been left out
 - Loose retaining nut
 - Loose fluid nozzle
 - Improper adjustment of the trigger adjustment nut and spring retainer
8. Secure the trigger with the two (2) shoulder screws.

NOTE

- The needle shaft travel **MUST** be checked. The air valve stem must be engaged and moved back slightly before the trigger engages the trigger adjustment nut. If this does not occur then the trigger adjustment nut and/or the trigger set screw must be adjusted. The 11/16-inch dimension is only a starting place for trigger adjustment and can be altered to obtain proper triggering sequence.

HANDLE / PLUG ASSEMBLY

Removal

- The following procedures must be performed prior to removing the handle:
 - Barrel removal
 - Low Voltage Cable removal
 - Fluid/Air Hose removal
- Remove the gasket from the handle; if it was not removed with the barrel.
- Remove the fan air adjustment valve, pull the rear cover straight off.

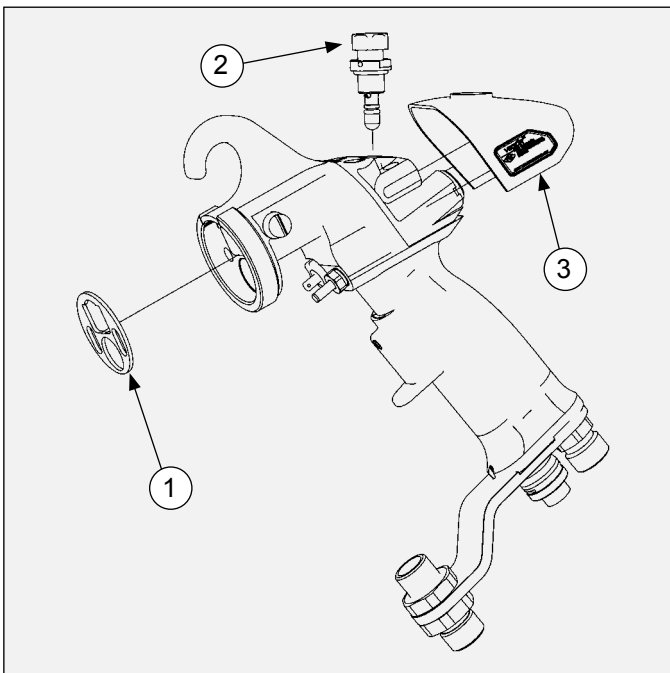


Figure 31: Air Valve and Rear Cover Removal

| AIR VALVE AND REAR COVER REMOVAL | |
|----------------------------------|--------------------------|
| Item # | Description |
| 1 | Barrel Gasket |
| 2 | Fan Air Adjustment Valve |
| 3 | Rear Cover |

- Remove the air valve retaining cap and o-ring. Remove the air valve return spring. From the front of the applicator, push the air valve out the rear of the applicator. Remove the air valve retaining nut and seal from the base of the applicator.

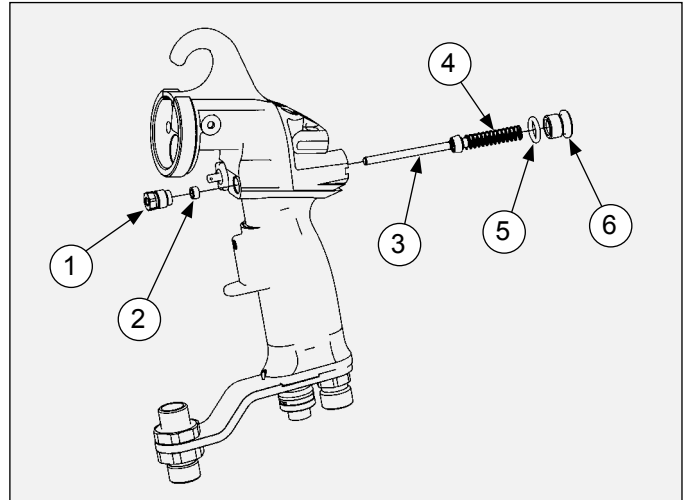


Figure 32: Air Valve Removal

| AIR VALVE REMOVAL | |
|-------------------|---------------------------------------|
| Item # | Description |
| 1 | Air Valve Retaining Nut |
| 2 | Seal (opening toward applicator rear) |
| 3 | Air Valve |
| 4 | Air Valve Return Spring |
| 5 | Solvent Proof O-Ring |
| 6 | Air Valve Retaining Cap |

- Remove the hook and hook gasket. Loosen the plug assembly setscrew and pull the plug assembly straight out of the applicator.

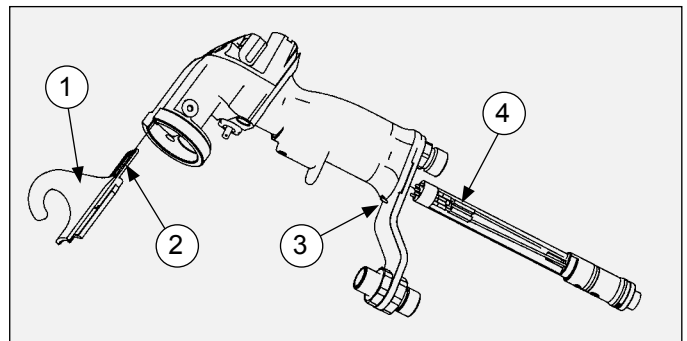


Figure 33: Hook and Plug Assembly Removal

| HOOK AND PLUG ASSEMBLY REMOVAL | |
|--------------------------------|-----------------------------------|
| Item # | Description |
| 1 | Hook |
| 2 | Hook Gasket |
| 3 | Plug Assembly Set Screw (loosen) |
| 4 | Plug Assembly (pull straight out) |

- Remove the air inlet fitting and the fluid bracket from the base of the applicator.

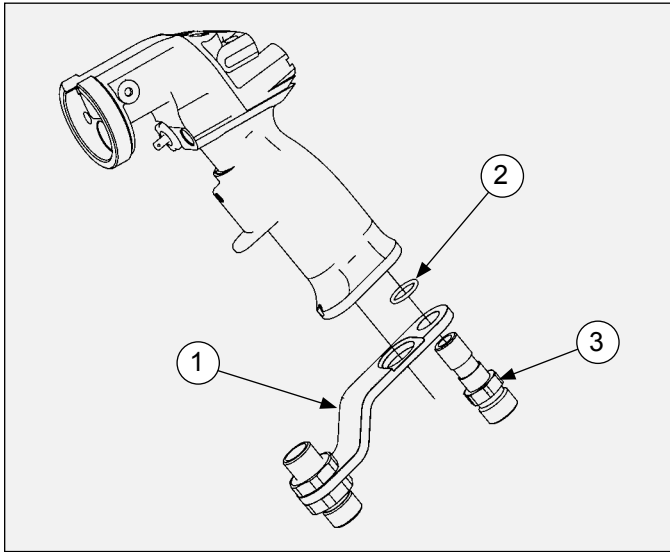


Figure 34: Fluid Bracket Removal

FULL BRACKET REMOVAL

| Item # | Description |
|--------|--------------------------------|
| 1 | Fluid Bracket |
| 2 | Air Inlet Solvent Proof O-Ring |
| 3 | Air Inlet Fitting |

- Remove the trigger shelf by removing the set screw with a 3/32" Allen wrench. Push down on the shelf to remove.

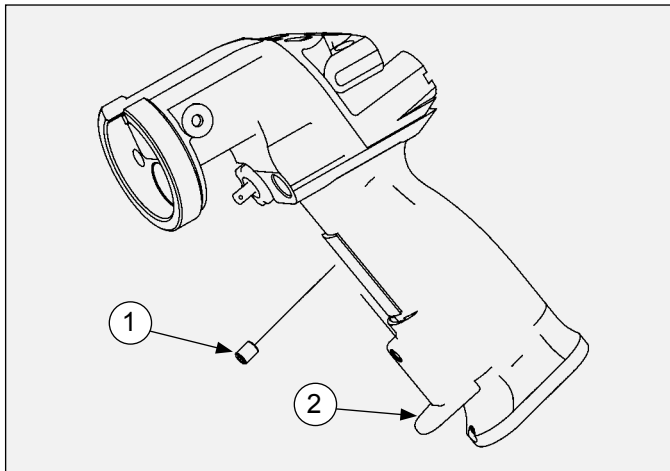


Figure 35: Trigger Shelf Removal

TRIGGER SHELF REMOVAL

| Item # | Description |
|--------|----------------------------|
| 1 | Finger Shelf Set Screw |
| 2 | Finger Shelf (pushed down) |

- Remove the trigger stop by turning the knob of the stop counter-clockwise until the thread of the stop is completely disengaged.

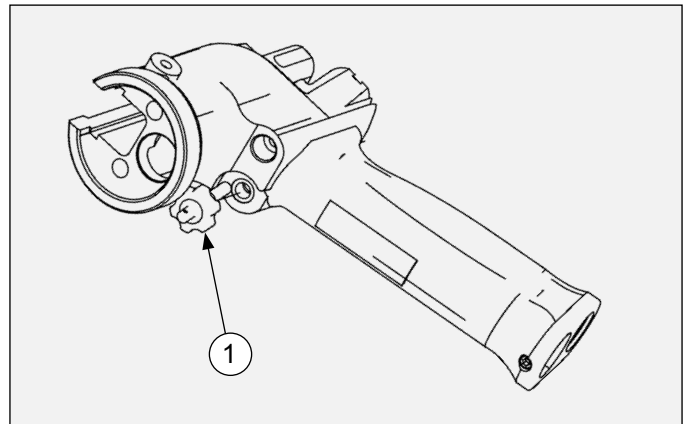


Figure 36: Trigger Stop Removal

TRIGGER STOP ASSEMBLY

| Item # | Description |
|--------|-----------------------|
| 1 | Trigger Stop Assembly |

**Reassembly
(Refer to Figures 31-38)**

- Screw the trigger stop into the handle in a clockwise direction.
- Push the finger shelf up on the dovetail pad on the handle to the desired height, insert the set screw and tighten with a 3/32" Allen wrench.
- Insert the fluid bracket over the air fitting, then install the o-ring over the air fitting. Tighten the air fitting in a clockwise direction.

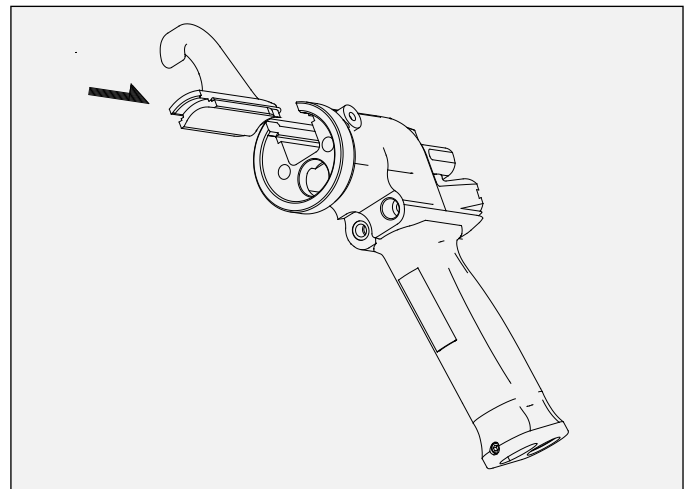


Figure 37: Hook Insertion Into Handle

4. Push the hook gasket into the groove of the hook. Apply a light coat of dielectric grease (LSCH0009) to the hook gasket exterior and slide the hook into position.

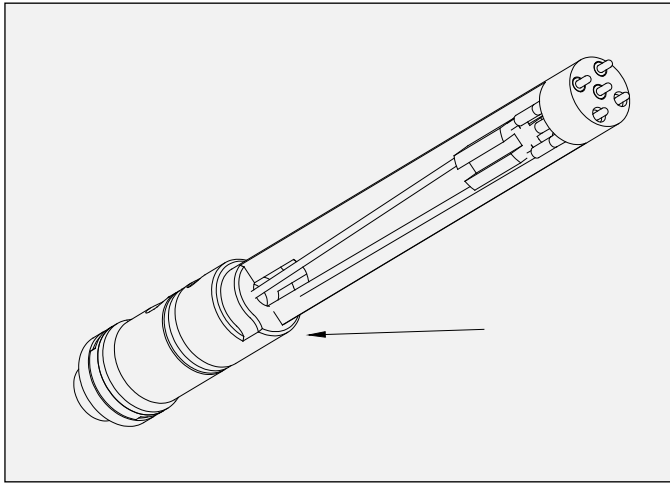


Figure 38: Low Voltage Plug Locating Tab

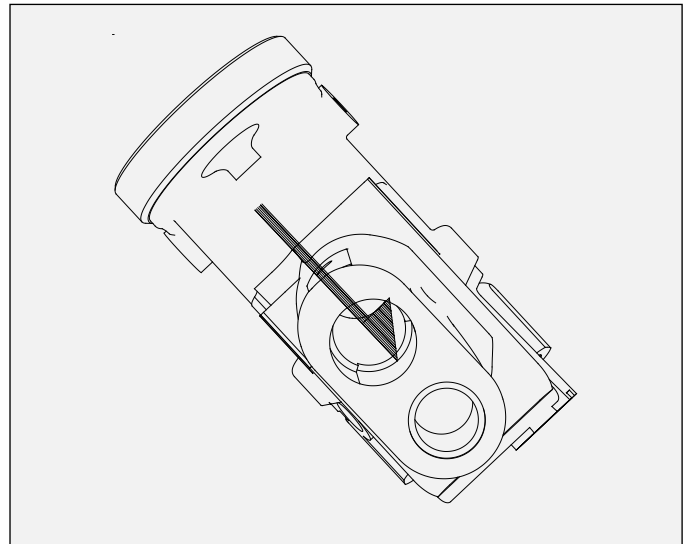


Figure 39: Location of Handle Low Voltage Plug Recess

5. Reinstall the air valve components in the reverse order of disassembly.
6. Push the rear cover onto the back of the handle. Secure the cover by inserting the fan air adjustment valve into the handle and tighten in the clockwise direction.
7. Insert the barrel gasket back into the handle.
8. Insert the plug assembly into the base of the handle. Align the raised portion into the mating handle recess.

**TROUBLESHOOTING GUIDE (Cont.)**

| General Problem | Possible Cause | Solution |
|---|---|--|
| DEFECTIVE SPRAY PATTERN | | |
| <i>Pattern Will Not Shape</i> | Clogged or faulty fan air valve | Clean, repair, or replace. |
| | Air passages in applicator or air line clogged | Blow out, clean, or replace. |
| | Worn, faulty, or clogged air cap | Clean or replace. |
| | Barrel restrictor missing | Replace barrel restrictor. |
| <i>Pattern Heavy At One End</i> | Clogged or faulty air cap | Clean or replace. |
| | Clogged or faulty fluid nozzle | Clean or replace. |
| <i>Extremely Heavy Spitting or Severely Deformed Pattern</i> | Wrong air cap/fluid nozzle combination | Ensure proper fluid nozzle/air nozzle pressure reducer combinations (see "Fluid Nozzle Tables" in the "Installation" section). |
| | Faulty air cap | Replace. |
| INADEQUATE DELIVERY | | |
| <i>Air</i> | Air passages in applicator or air line clogged | Blow out. |
| | Inadequate air source | Increase pressure, flow capacity. |
| | Paint in air passage | Clean and blow out. |
| <i>Fluid</i> | Clogged or faulty fluid nozzle | Flush or replace. |
| | Clogged passages in applicator fluid tube or fluid line | Flush. |
| | Insufficient needle/electrode travel | Adjust (see "Trigger Adjustment Nut Dimension Figure" in the "Maintenance" section). |
| | Low fluid supply pressure | Increase. |
| | Clogged fluid filter | Clean or replace. |
| | Clogged or obstructed valve or fluid regulator | Clean as required or replace. |

(Continued On Next Page)



TROUBLESHOOTING GUIDE (Cont.)

| General Problem | Possible Cause | Solution |
|---|---|---|
| LEAKAGE | | |
| Air | Defective valve seat or valve spring | Clean and lubricate or replace. |
| Fluid (At rear of barrel) | Cartridge seal assembly and/or needle/ electrode shaft defective | See "Barrel Assembly" in the "Maintenance" section. |
| Fluid (Slight leak at nozzle when trigger is released) | Nozzle not secure | Tighten. |
| | Air valve closing before fluid valve | Adjust needle shaft/electrode travel. |
| Fluid (Constant at nozzle) | Worn or damaged fluid nozzle | Replace fluid nozzle. |
| | Worn or damaged needle/electrode | Replace. |
| | Loose fluid nozzle | Tighten. |
| | Needle/electrode does not seat when trigger is released | Adjust (see "Trigger Adjustment Nut Dimension Figure" in the "Maintenance" section). |
| ELECTRICAL | | |
| Wrap Back | Improper target ground | Trace and correct (1 megohm maximum ground to target resistance). |
| | Improper spray technique | See Ransburg "Applicator Spray Techniques" manual. |
| | Improper booth exhaust | Trace and correct. |
| | Excessive atomizing air | Reduce pressure. |
| | Excessive target distance | Decrease distance between applicator and target. |
| Improper or No High Voltage | Is the power turned on? | Check and secure at the applicator and at the control unit. |
| | Is the atomizing air turned on? | Trace and correct. |
| | Is the applicator triggered? | Replace. |
| | Blown fuse | Replace. |
| | Faulty high voltage cable connections | Replace. |
| | Is the paint too conductive? | Clean as required per suggested "Maintenance Schedule". |

(Continued On Next Page)



TROUBLESHOOTING GUIDE (Cont.)

| General Problem | Possible Cause | Solution |
|---|---|-----------------------------------|
| ELECTRICAL (Cont.) | | |
| <i>Improper or No High Voltage (Cont.)</i> | Blown fuse | Replace fuse. |
| | Is the power turned on? | Check power supply. |
| | Is the atomizing air turned on? | Check air regulator. |
| | Is the applicator triggered? | Check applicator trigger. |
| | Is the applicator switch on? | Check applicator switch. |
| | Is the paint too conductive? | Check conductivity of paint. |
| | Faulty flow switch | Replace flow switch. |
| <i>Isolation System Grounded Out</i> | Failed fluid hose | Replace fluid hose. |
| | Insulation stand or charged equipment too close to ground | Provide adequate ground distance. |

PARTS IDENTIFICATION

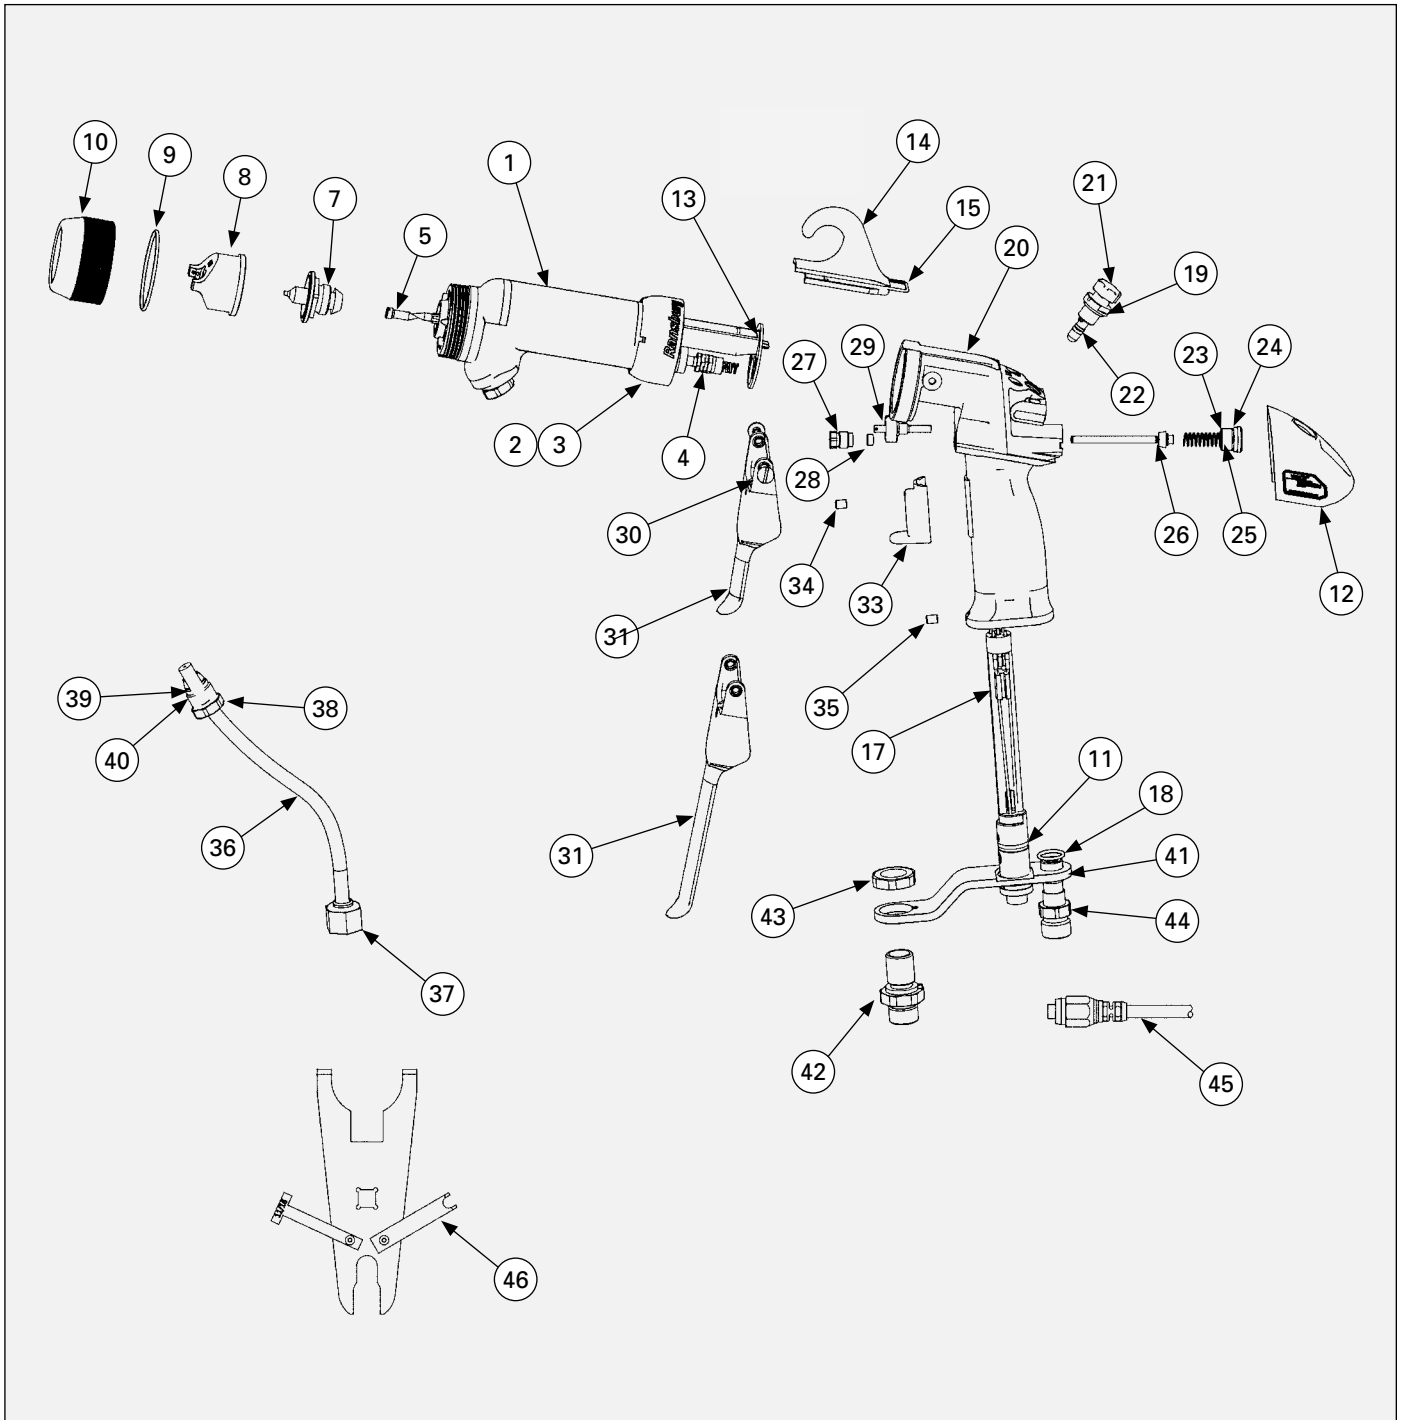


Figure 40: R90/70 Cascade Solventborne Applicator Breakdown

R90/70 CASCADE SOLVENTBORNE APPLICATOR - PARTS LIST (Figure 40)

| Item # | Part # | Description | Qty |
|--------|------------------------|--|---------------------|
| 1 | 79468-00 | Barrel, Machined, R90 | 1 |
| | 79469-00 | Barrel, Machined, R70 | 1 |
| 2 | 79373-00 | Nut, Retaining Barrel | 1 |
| 3 | 75326-00 | Ring, Retaining | 1 |
| 4 | 79599-01 | Needle Shaft Assembly, R90, 2k Packings (Std.) | 1 |
| | 79599-02 | Needle Shaft Assembly, R70, 2k Packings (Std.) | 1 |
| 5 | Table D-"D3" | Restrictor, Standard Air Spray (Black) | 1 |
| 6 | -- | -- | -- |
| 7 | Table D-"D2" * | Nozzle, Fluid | 1 |
| 8 | Table D-"D1" ** | Cap, Air | 1 |
| 9 | LSOR0005-17 | O-Ring, PTFE Encapsulated | 1 |
| 10 | 79379-00 | Nut, Retaining, Air Nozzle | 1 |
| 11 | 79001-09 | O-Ring, Solvent Proof | 1 |
| 12 | 79471-01 | Assembly, Rear Cover | 1 |
| 13 | 79378-00 | Gasket, Barrel Cover | 1 |
| 14 | 79322-00 | Hook, Molded | 1 |
| 15 | 80185-00 | O-Ring, Solvent Resistant | 1 |
| 16 | | | |
| 17 | 79460-03 | Assembly, Plug | 1 |
| 18 | 79001-08 | O-Ring, Solvent Proof | 2 |
| 19 | 79001-07 | O-Ring, Solvent Proof | 2 |
| 20 | 79476-00 | Handle, Assembly | 1 |
| 21 | 79445-10 | Fan Air Adjust, Assembly | 1 |
| 22 | 79001-16 | O-Ring, Solvent Proof | 1 |
| 23 | 17130-00 | Spring, Return | 1 |
| 24 | 79001-31 | O-Ring, Solvent Proof | 1 |
| 25 | 79453-00 | Cap, Retaining, Air Valve | 1 |
| 26 | 79310-00 | Air Valve, Assembly | 1 |
| 27 | 78635-00 | Nut, Retaining, Air Valve | 1 |
| 28 | 10051-05 | Cup Seal, Spring Loaded | 1 |
| 29 | 79560-00 | Trigger Stop, Assembly | 1 |
| 30 | 79454-00 | Screw, Trigger Retention | 2 |
| 31 | Table B-"B1" | Trigger, Molded | 1 |
| 32 | -- | -- | -- |
| 33 | 79324-00 | Shelf, Finger Molded | Table B-"B2" |
| 34 | 19603-8F | Set Screw, Cup Point | Table B-"B2" |
| 35 | 19603-10F | Set Screw, Cup Point | 1 |
| 36 | Table C-"C4" | Tube, Fluid | 1 |
| 37 | 3587-03 | Nut and Ferrule | Table C-"C5" |

* See "Fluid Nozzle Selection Chart" in the "Installation" section.

** See "Air Cap/Fluid Nozzle Selection Chart" in the "Installation" section.

(Continued On Next Page)

R90/70 CASCADE SOLVENTBORNE APPLICATOR - PARTS LIST (Figure 40) (Cont.)

| Item # | Part # | Description | Qty |
|--------|----------------|---|----------------|
| 38 | 79385-00 | Nut, Connector, Hose | Table C-"C5" |
| 39 | EMF-202-05 | Ferrule, Back, 3/8" Tube | Table C-"C5" |
| 40 | EMF-203-05 | Ferrule, Front, 3/8" Tube | Table C-"C5" |
| 41 | Table C-"C2" | Bracket, Support | 1 |
| 42 | Table C-"C1" | Fitting, Fluid (Straight Offset Bracket) | 1 |
| 43 | Table C-"C3" | Nut, Hex | 1 |
| 44 | 18847-01 | Fitting, Air Inlet, 1/4" NPSM(M) (Std.) | 1 |
| | 18847-00 | Fitting, Air Inlet, 3/8" NPSM(M) (Optional) | 1 |
| 45 | Table A - "A2" | Cable, Low Voltage, Vector | Table A - "A1" |
| 46 | 19749-00 | Special Applicator Wrench | 1 |
| 47 | 72315-00 | Conductive Ferrule | 1 |
| 48 | 6241-06 | Fitting, Fluid | 1 |
| 49 | 7787-03 | Swivel Fitting | 1 |

VECTOR R90/R70 CASCADE SOLVENTBORNE MODEL IDENTIFICATION

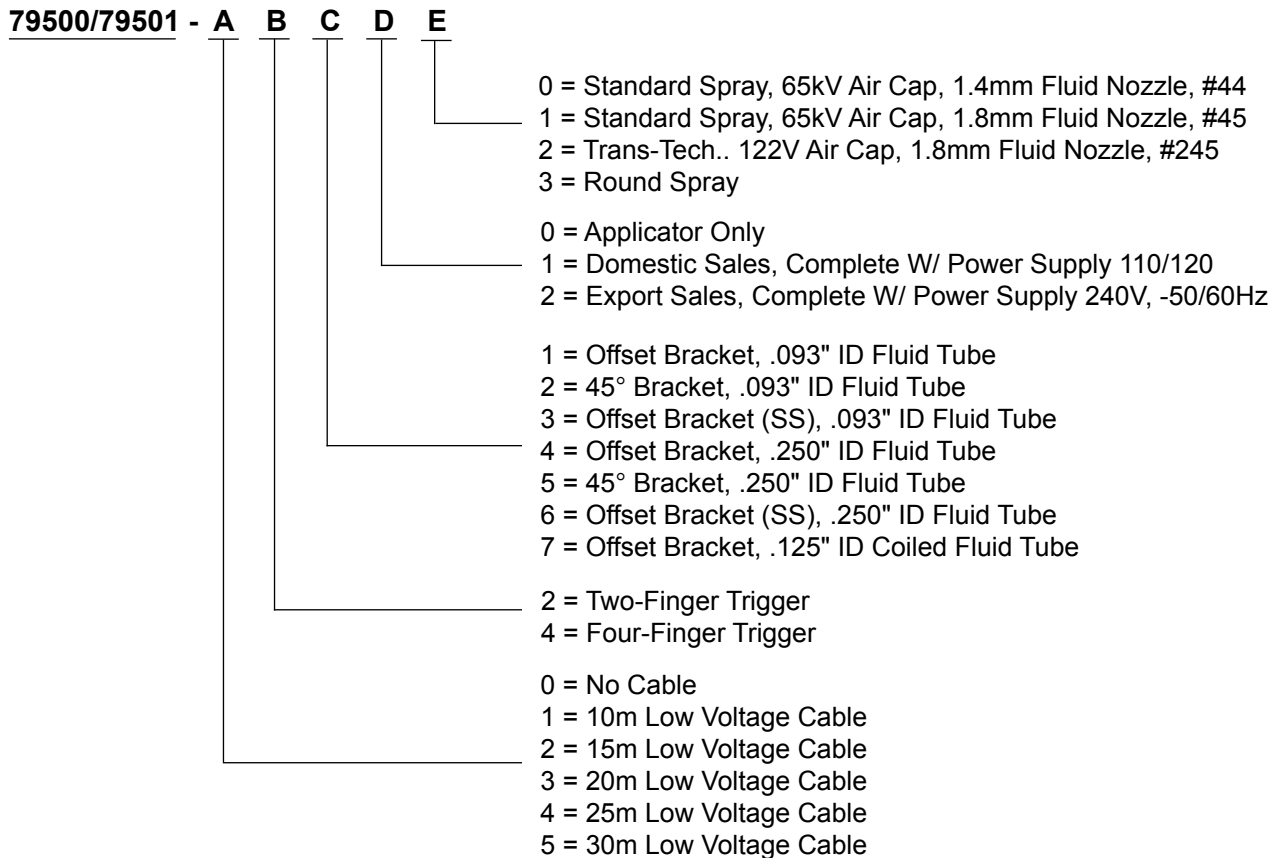


TABLE A - LOW VOLTAGE CABLE LENGTHS

| "A" Dash # | Description | "A1" | "A2" |
|------------|-------------|------|----------|
| 0 | No Cable | 0 | -- |
| 1 | 10m | 1 | 79338-10 |
| 2 | 15m | 1 | 79338-15 |
| 3 | 20m | 2 | 79338-10 |
| 4 | 25m | 1 | 79338-10 |
| | | 1 | 79338-15 |
| 5 | 30m | 2 | 79338-15 |

TABLE B TRIGGER TYPE

| "B" Dash # | Description | "B1" | "B2" |
|------------|------------------|----------|------|
| 2 | 2-Finger Trigger | 79325-02 | 1 |
| 4 | 4-Finger Trigger | 79325-04 | 0 |

TABLE C - FLUID DELIVERY COMBINATION

| "C" Dash # | Description | "C1" | "C2" | "C3" | "C4" | "C5" |
|------------|--|----------|----------|----------|----------|------|
| 1 | Offset Bracket, .093" ID Fluid Tube | 70399-00 | 79438-00 | 10553-06 | 9704-16 | 1 |
| 2 | 45° Bracket, .093" ID Fluid Tube | 70442-00 | 79439-00 | 10553-06 | 9704-16 | 1 |
| 3 | Offset Bracket (SS), .093" ID Fluid Tube | 70399-00 | 79438-01 | 10553-06 | 9704-16 | 1 |
| 4 | Offset Bracket, .250" ID Fluid Tube | 70399-00 | 79438-00 | 10553-06 | 9704-11 | 1 |
| 5 | 45° Bracket, .250" ID Fluid Tube | 70442-00 | 79439-00 | 10553-06 | 9704-11 | 1 |
| 6 | Offset Bracket (SS), .250" ID Fluid Tube | 70399-00 | 79438-01 | 10553-06 | 9704-11 | 1 |
| 7 | Offset Bracket, .125" ID Coiled Fluid Tube | 79650-00 | 79438-00 | 10553-05 | 79871-00 | 0 |

TABLE D - SPRAY SELECTION

| D Dash # | Description | "D1" | "D2" | "D3" |
|----------|--|-----------|-----------|----------|
| 0 | Standard Spray, 65V Air Cap, 1.4mm Fluid Nozzle, #44 | 79374-65 | 79377-44 | 74963-05 |
| 1 | Standard Spray, 65V Air Cap, 1.8mm Fluid Nozzle, #45 | 79374-65 | 79377-45 | 74963-05 |
| 2 | Trans-Tech., 122V Air Cap, 1.8mm Fluid Nozzle, #245 | 79374-122 | 79552-245 | 74963-06 |
| 3 | Round Spray | 79962-00 | 79959-00 | 74963-04 |

TABLE E - CONTROL UNIT

| Dash No. | Description | Control Unit |
|----------|---|--------------|
| 0 | Applicator with Cable Only, No Power Supply | -- |
| 1 | Domestic Sales, 110/120 V | 79344-1X1 |
| 2 | Export Sales, 240 V - 50/60 Hz | 79344-1X2 |

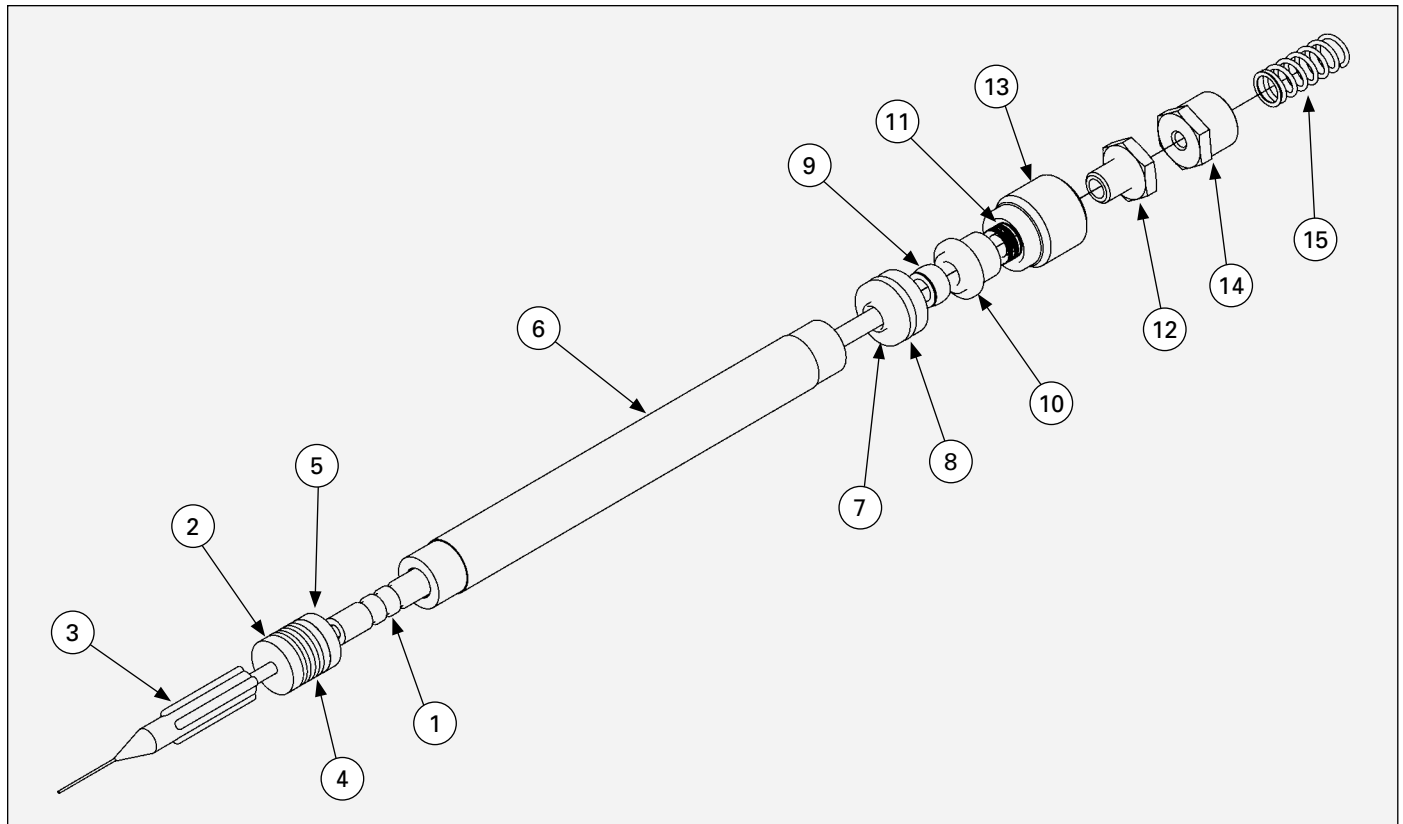


Figure 41: R90 (79599-01) and R70 (79599-02) Cascade Needle Shaft (2k Packings)-Standard

R90 (79599-01) AND R70 (79599-02) CASCADE NEEDLE SHAFT (STANDARD 2K PACKINGS) - PARTS LIST (Figure 41)

| Item # | Part # | Description | Qty |
|--------|----------|--|-----|
| 1 | 78627-04 | Shaft Assembly, 2-Piece Needle, R90, 2k Packings | 1 |
| | 78627-05 | Shaft Assembly, 2-Piece Needle, R70, 2k Packings | |
| 2 | 74653-00 | Adapter, Male Chevron | 1 |
| 3 | 70430-01 | Electrode, High Wear | 1 |
| 4 | 14323-00 | Seal, Chevron | 4 |
| 5 | 18821-00 | Adapter, Female Chevron | 1 |
| 6 | 18842-01 | Tube, Packing, R90 | 1 |
| | 18842-02 | Tube Packing, R70 | |
| 7 | 78629-00 | Retainer, Needle Seal, Rear | 1 |
| 8 | 79001-06 | O-Ring, Solvent Proof | 1 |
| 9 | 10051-05 | Cup Seal, Spring Loaded | 1 |
| 10 | 78630-00 | Spacer, Seal | 1 |
| 11 | 17390-04 | Washer, Beville Spring | 6 |
| 12 | 78632-00 | Nut, Locking Trigger Adjustment | 1 |
| 13 | 78631-00 | Nut, Packing | 1 |
| 14 | 78633-00 | Spring Retainer, Needle Shaft | 1 |
| 15 | 78824-00 | Spring | 1 |
| 16 | SI-07-03 | Service Instruction | 1 |

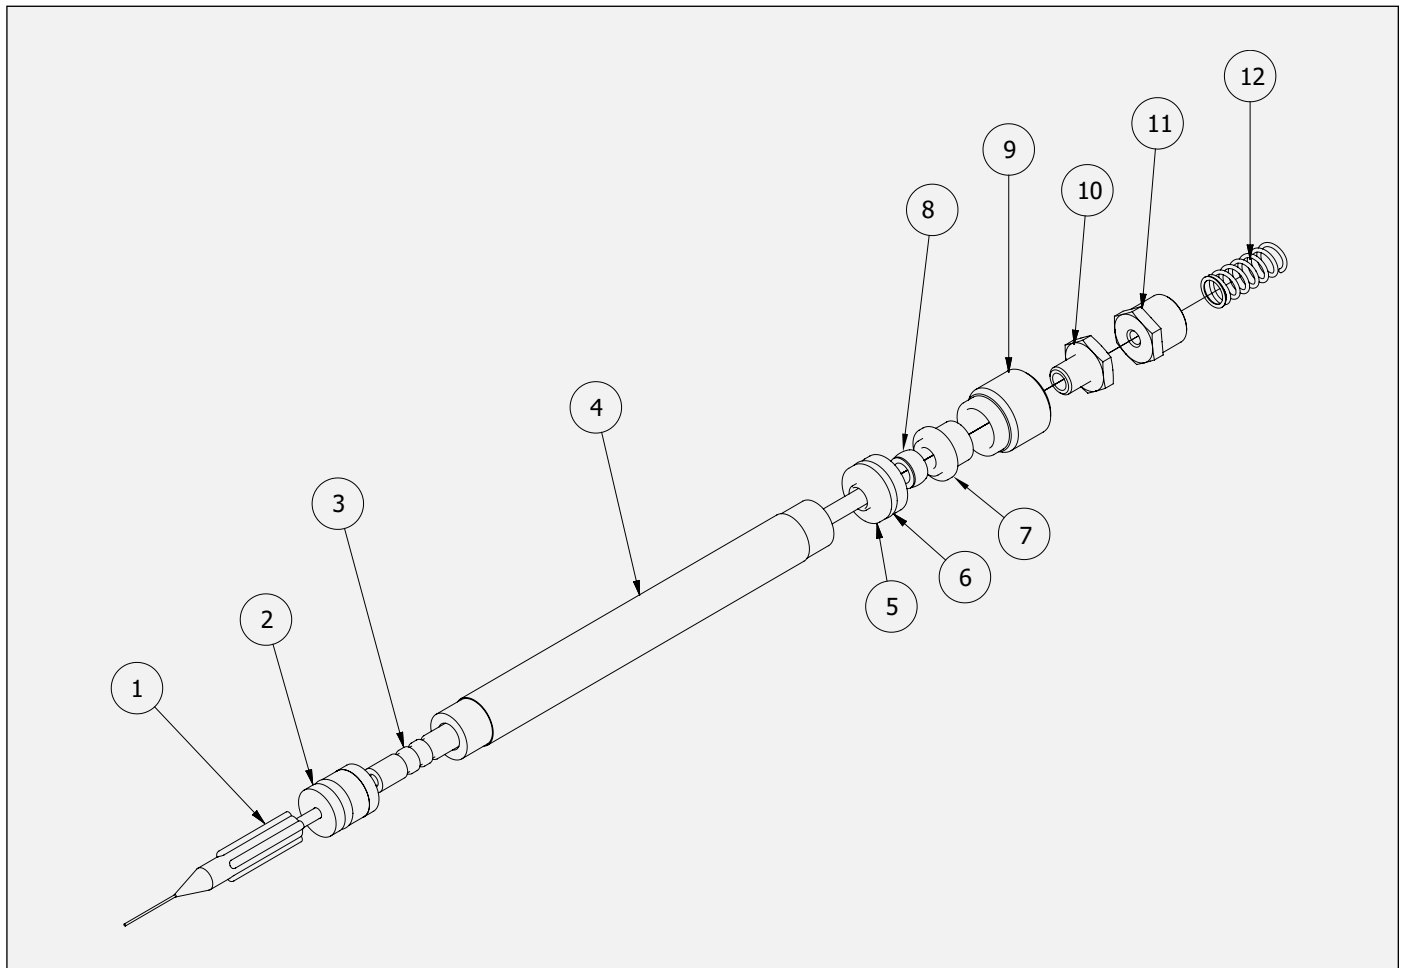


Figure 42: R90 (78628-11) and R70 (78628-12) Cascade Needle Shaft (Optional Packings)

**R90 (78628-11) AND R70 (78628-12) CASCADE NEEDLE SHAFT
(OPTIONAL PACKINGS) - PARTS LIST** (Figure 42)

| Item # | Part # | Description | Qty |
|--------|----------|--|-----|
| 1 | 70430-01 | Electrode, High Flex | 1 |
| 2 | 78626-00 | Seal Cartridge Non-Adj., Assembly | 1 |
| 3 | 78627-04 | Shaft Assembly, 2-Piece Needle, R90, Standard Packings | 1 |
| | 78627-05 | Shaft Assembly, 2-Piece Needle, R70, Standard Packings | 1 |
| 4 | 18842-01 | Tube, Packing, R90 | 1 |
| | 18842-02 | Tube, Packing, R70 | 1 |
| 5 | 78629-00 | Retainer, Needle Seal, Rear | 1 |
| 6 | 79001-06 | O-Ring, Solvent Proof | 1 |
| 7 | 78630-00 | Spacer, Seal | 1 |
| 8 | 10051-05 | Cup Seal, Spring Loaded | 1 |
| 9 | 78631-00 | Nut, Packing | 1 |
| 10 | 78632-00 | Nut, Locking Trigger Adjustment | 1 |
| 11 | 78633-00 | Spring, Retainer, Needle Shaft | 1 |
| 12 | 78636-00 | Spring | 1 |



WATERBORNE APPLICATOR MODEL 79523-XXXXX SECTION

WARNING

- Typical installations to spray non-flammable conductive materials (waterborne materials) must not be used to handle flammable materials (solvent based materials).



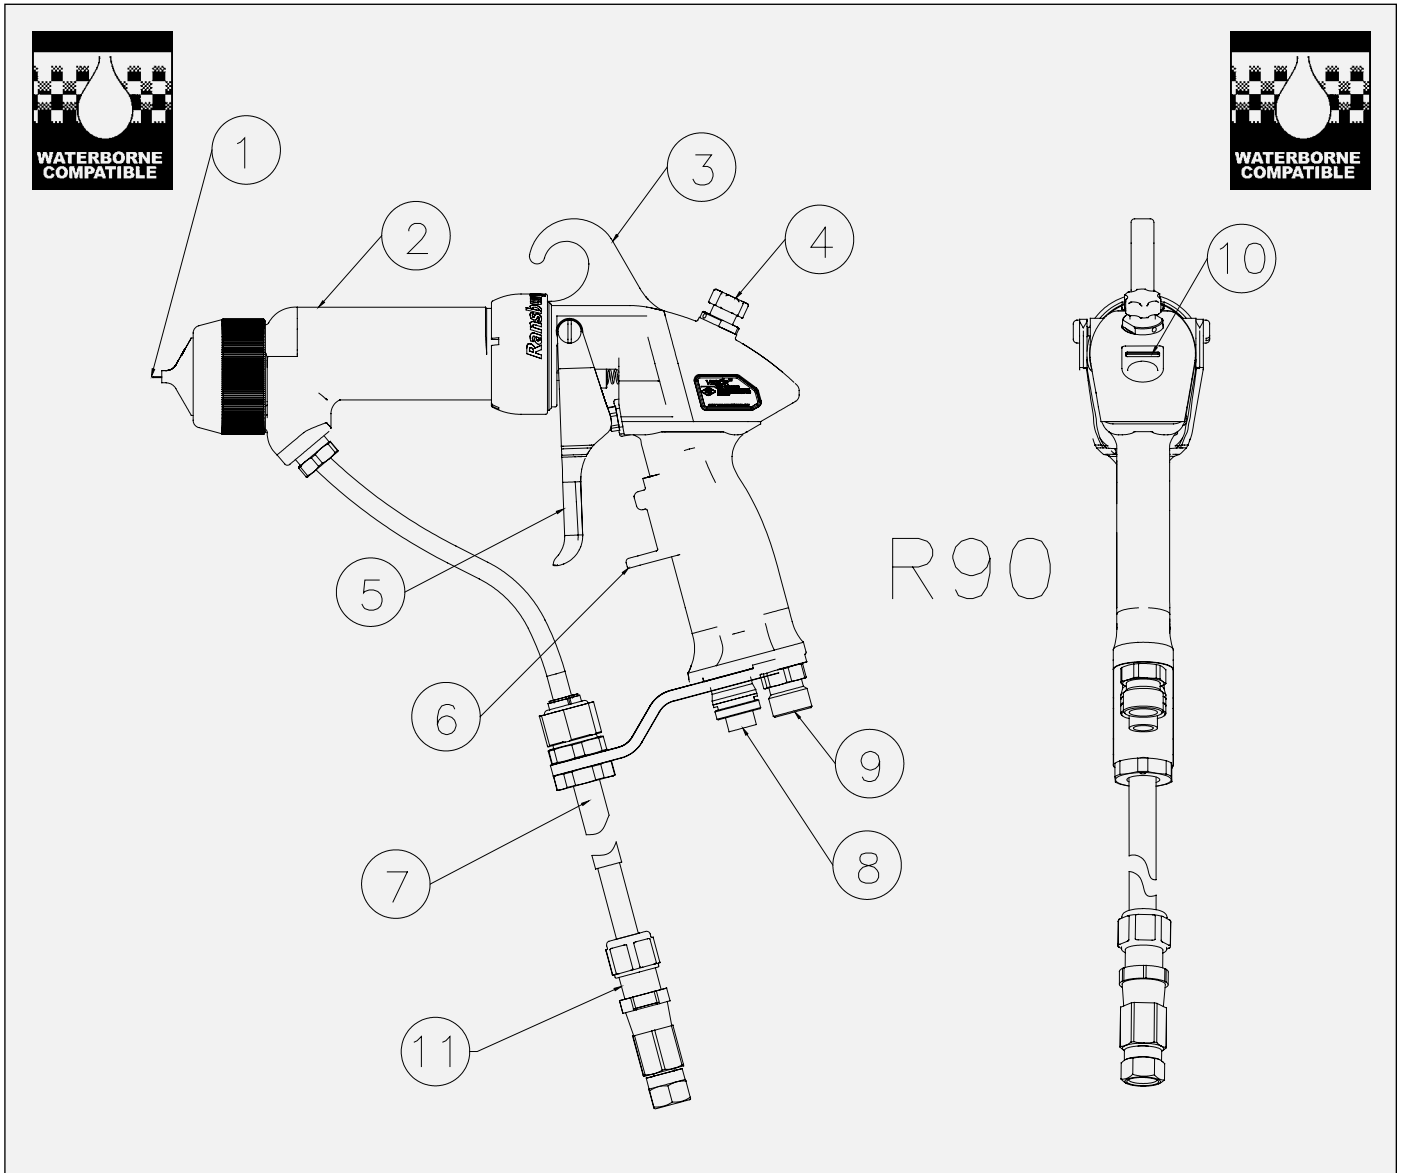


Figure 43: R90 Cascade Waterborne Electrostatic Spray Applicator Features

R90 CASCADE WATERBORNE ELECTROSTATIC SPRAY APPLICATOR FEATURES (Figure 43)

| No. | Description | No. | Description |
|-----|---------------------------|-----|--|
| 1 | Needle/Electrode | 7 | Waterborne Hose |
| 2 | Barrel | 8 | Low Voltage Cable Connection |
| 3 | Replaceable Hook | 9 | Air Hose Connection |
| 4 | Fan Air Adjust | 10 | kV Setpoint Switch/Microamp 11 Display |
| 5 | 2-Finger/4-Finger Trigger | 11 | Waterborne Source Connection |
| 6 | Adjustable Trigger Shelf | | |



79523 R90 CASCADE WATERBORNE SPECIFICATIONS

Environmental/Physical

| | |
|--|-----------------------------|
| Gun Length: | 27cm (10.7 inches) |
| Weight: | 735 grams (25.9 oz.) |
| Hose & Cable Lengths (Std): | 10m, 15m, 20m, 25m, and 30m |
| Atomizer Nozzle Assembly (Std): | 79374-65, 79377-45 |

Electrical

| | |
|---------------------------|---|
| Operating Voltage: | 85 kV DC (-) maximum |
| Current Output: | 100 microamperes maximum |
| Part Sprayability: | Determine sprayability of part to be coated using 76652, Test Equipment (See current "Paint, HV & SCI Test Equipment" service manual.) |

Mechanical

| | |
|---------------------------------------|--|
| Fluid Flow Capacity: | 1000 cc/minute** |
| Operating Pressure (Air Spray) | |
| Fluid: | (0-6.9 bar) 0-100 psi |
| Air: | (0-6.9 bar) 0-100 psi |
| Ambient Temp.: | 40°C to 12.8°C |
| Consumption: | 510 slpm (18.0 SCFM) @ 3.4 bar (50 psig) inlet |
| Sound Level: | 92dB (A) @ 50 psig inlet, 1m from applicator |

** This reflects the maximum fluid volume the applicator can deliver. The maximum spray volume that can be effectively atomized depends on fluid rheology, spray technology, and finish quality required.

79513-1XX 9050 POWER SUPPLY ELECTRICAL SPECIFICATIONS

Electrical

| | |
|------------------------|----------------------------------|
| Input Voltage: | 100-240 VAC |
| Current: | 1 A maximum RMS |
| Frequency: | 50/60 Hz |
| Wattage: | 40 watts (max.) |
| Output Voltage: | 20-85 kV DC (79513-12X) |
| Current: | 100 microamps (max.) (79513-12X) |

Physical

| | |
|----------------|---------------------|
| Height: | 14.0cm (5.5-inches) |
| Width: | 21.6cm (8.5-inches) |
| Depth: | 19.1cm (7.5-inches) |
| Weight: | 3.4 kg (7.5 lbs.) |

Pneumatic

| | |
|--------------------|----------------------------|
| Supply Air: | 6.9 bar (100 psig) maximum |
|--------------------|----------------------------|



CONTROL UNIT INPUTS / OUTPUTS

| 9050 Part # | Voltage Designation | Maximum Output |
|-------------|---------------------|----------------|
| 79513-121 | 110/120 VAC | -85 kV DC |
| 79513-122 | 220/240 VAC | -85 kV DC |

CONTROL UNIT / APPLICATOR COMBINATIONS

| 9050 Part # | For Use With Applicator Combinations |
|-------------|--------------------------------------|
| 79513-12X | 79523-XXXXX |

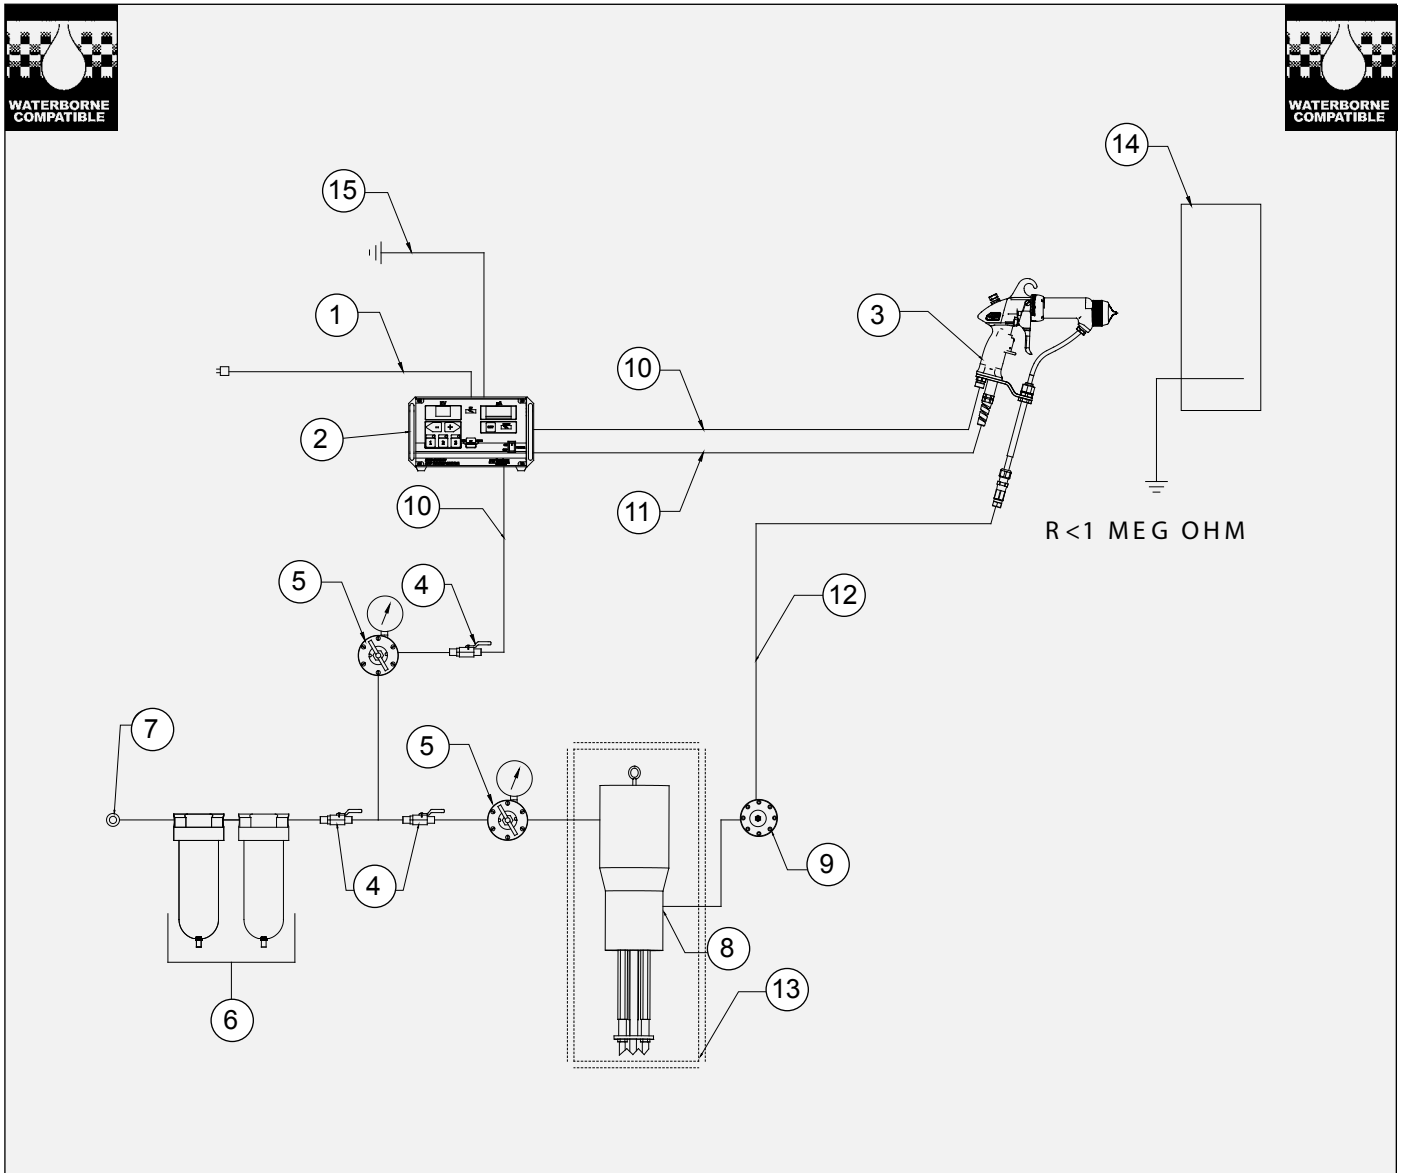


Figure 44: R90 Cascade Waterborne Typical Installation

R90 CASCADE WATERBORNE TYPICAL INSTALLATION

| No. | Description | No. | Description |
|-----|--------------------------------|-----|---|
| 1 | AC Line Cord (110/220) | 9 | Fluid Regulator |
| 2 | 9060 Power Supply | 10 | Air Line |
| 3 | Vector Applicator | 11 | Low Voltage Cable |
| 4 | Ball Valve | 12 | Fluid Valve |
| 5 | Air Regulator W/Pressure Gauge | 13 | Isolated Fluid System (Protection required from human contact.) |
| 6 | Air/Water Separator | 14 | Target (Earth or Building Ground) |
| 7 | Main Air Supply Line | 15 | 9060 Ground (Separate Earth or Building Ground) |
| 8 | Fluid Supply (Grounded) | | |

 **WARNING**

► Typical installations to spray non-flammable conductive materials (waterborne materials) must not be used to handle flammable materials (solvent based materials).

WATERBORNE ISOLATION SYSTEM INSTALLATION GUIDELINES

Using waterborne coating with electrostatic equipment requires that the fluid source be isolated from ground. Precautions should be taken to ensure operator safety and system efficiency. The following guidelines should be followed:

- The fluid lines and source **MUST** be isolated from ground. An isolating Paint Stand or similar isolating (non-porous) material **MUST** be used.
- Isolation stands **MUST** be at least 18-inches from grounded booth walls, chain link fences, or other grounded objects.

 **CAUTION**

► Never use wood products, wooden boxes, pallets, or boards as an isolator. Wood contains moisture and is a poor insulator. Electrical current passing through these materials can ignite them, causing a hazardous condition.

- Air hoses to the pressure pot or pump on the insulating stand should be non-conductive plastic. Many rubber hoses will have static grounding circuits or carbon content and are **NOT** suitable for this application.
- All charged (isolated) systems **MUST** be inside a fence or cage to prevent contact by personnel. An interlock system **MUST** be provided that interrupts high voltage flow to the applicator if the gate is opened.

- Air regulators for pots or pumps should be mounted remotely outside the fence or cage area to facilitate changes in pressure without shutting the system down.
- Grounding hooks at the cage **MUST** be used to ground the system when personnel are working close by.
- Fluid lines to the applicator **MUST** be protected from scraping and abrasion on the floor or sharp metal edges that could lead to voltage pin holing and loss of kV on the charged system.
- Cleanliness and maintenance are extremely critical.
- Refer to "Installation - 79500 R90 Solventborne, 79501 R70 Solventborne Installation" in the "Installation" section of this manual.

WATERBORNE HOSE FITTING INSTALLATION

For 79523 R90 Cascade - Waterborne: Ransburg supplies the waterborne fluid hose factory pre-assembled to the applicator unit. Standard hose lengths are 10m, 15m, and 25m. To modify the hose length, use the following procedures. All adjustments must be made at the supply end of the system.

1. Remove the male connector and swivel fitting from the end of the fluid hose by turning the nut of the male connector counter-clockwise while holding its main body.
2. Remove the male connector nut from the fluid hose.
3. Determine the hose length that is needed and cut the hose off squarely.

**WARNING**

► Special care must be taken when removing the sheathing from the fluid hose. Make sure all tools are very sharp and only score the surface of the sheath. Inserting the knife too deep can score the surface of the core material and lead to pin-holing and failure of the hose.

4. Carefully score the outer jacket linearly and then radially approximately 18-inches back from the cut end. Split the outer jacket along the linear score mark and peel it away from the inner sheath. Then remove the jacket completely by tearing along the radial score mark.
5. Lightly score the inner sheath linearly and then radially 1-inch from the outer jacket. Split the inner sheath along the linear score mark and peel it away from the core fluid hose. Then remove the sheath completely by tearing along the radial score mark.
6. Roll the inner sheath back over itself until it touches the outer jacket.
7. Cut approximately 1/4-inch of inner sheath off.



WATERBORNE FLUID DELIVERY COMPONENTS - PARTS LIST (Figure 45)

| Item # | Part # | Description | Qty |
|--------|----------------------|--|-----|
| 61 | Table F - "F" | Fluid Hose, Assembly, Vector * | 1 |
| 61a | 74179-XX | Bulk Tube, Fluid, 1/4" ID | XXm |
| | 72307-XX | Bulk Tube, Fluid, 3/16" ID | XXm |
| 62 | 72310-00 | Connector, Bulk Head | 1 |
| 63 | 10553-05 | Nut, Hex | 1 |
| 64 | 79438-00 | Bracket, Support, Offset (Std.) | 1 |
| | 79438-01 | Bracket, Support Offset (Stainless Steel) (Optional) | 1 |
| 65 | 72315-00 | Conductive Ferrule | 1 |
| 66 | 3587-02 | Nut, 3/8" | 1 |
| 67 | 79385-00 | Nut, Connector, Hose | 1 |
| 68 | EMF-203-05 | Tube, Ferrule, Front, 3/8" | 1 |
| 69 | EMF-202-05 | Tube, Ferrule, Back, 3/8" | 1 |
| 70 | 6241-06 | Fitting, Fluid | 1 |
| 71 | 7787-03 | Swivel Fitting | 1 |

* Includes Item # 61a, 63, 65, 66, 70, and 71.


TABLE F - WATERBORNE FLUID HOSE LENGTHS AND ID

| Dash # | Description | "F" |
|--------|---------------|----------|
| 0 | No Fluid Hose | -- |
| 1 | 10m, 1/4" ID | 79525-10 |
| 2 | 10m, 3/16" ID | 79524-10 |
| 3 | 15m, 1/4" ID | 79525-15 |
| 4 | 15m, 3/16" ID | 79524-15 |



VECTOR R90 CASCADE WATERBORNE MODEL IDENTIFICATION

 79500/79501 - A B C D E



0 = Applicator Only
 1 = Domestic Sales, Complete W/ Power Supply 110/120
 2 = Export Sales, Complete W/ Power Supply 240V, -50/60Hz

0 = Standard Spray, 65kV Air Cap, 1.4mm Fluid Nozzle, #44
 1 = Standard Spray, 65kV Air Cap, 1.8mm Fluid Nozzle, #45
 2 = Trans-Tech.. 122V Air Cap, 1.8mm Fluid Nozzle, #245
 3 = Round Spray

0 = No Fluid Hose
 1 = Waterborne Fluid Hose, 1/4" ID x 10m
 2 = Waterborne Fluid Hose, 3/16" ID x 10m
 3 = Waterborne Fluid Hose, 1/4" ID x 15m
 4 = Waterborne Fluid Hose, 3/16" ID x 15m

2 = Two-Finger Trigger
 4 = Four-Finger Trigger

0 = No Cable
 1 = 10m Low Voltage Cable
 2 = 15m Low Voltage Cable
 3 = 20m Low Voltage Cable
 4 = 25m Low Voltage Cable
 5 = 30m Low Voltage Cable

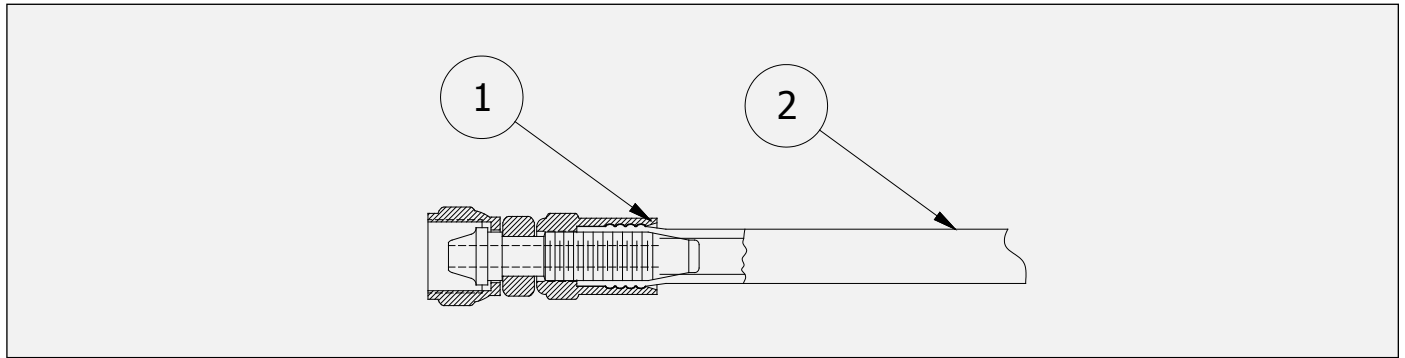


Figure 46: Optional Air Hose

VECTOR AIR HOSE OPTIONS - PARTS LIST (Figure 46)

| Item # | Part # | Description | Qty |
|--------|----------|------------------------------|-----|
| | 79547-10 | Air Hose Assembly, 10m (33') | |
| | 79547-15 | Air Hose Assembly, 15m (49') | |
| | 79547-20 | Air Hose Assembly, 20m (66') | |
| | 79547-31 | Air Hose Assembly, 30m (99') | |
| 1 | LSFI0027 | Reusable Hose Fitting | 1 |
| 2 | 6919-XX | Bulk Hose, Air | XX |

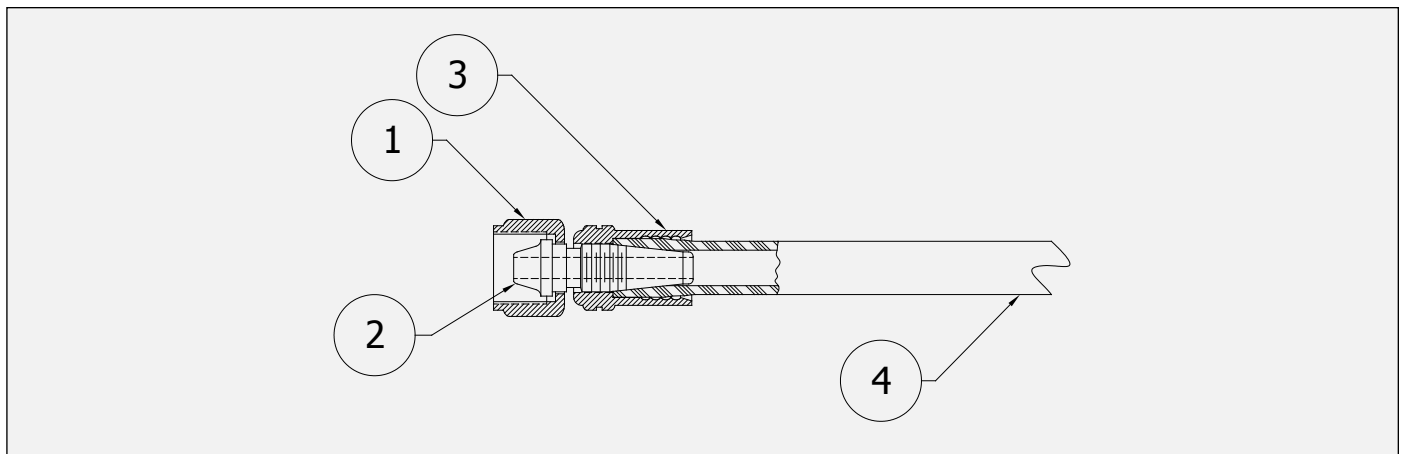


Figure 47: Optional Fluid Hose

VECTOR FLUID HOSE OPTIONS - PARTS LIST (Figure 47)

| Item # | Part # | Description | Qty |
|--------|----------|--------------------------------|-----|
| | 79548-10 | Fluid Hose Assembly, 10m (33') | |
| | 79548-15 | Fluid Hose Assembly, 15m (49') | |
| | 79548-20 | Fluid Hose Assembly, 20m (66') | |
| | 79548-31 | Fluid Hose Assembly, 30m (99') | |
| 1 | 14599-00 | Nut | 1 |
| 2 | 7623-00 | Union Stem | 1 |
| 3 | 7617-00 | Ferrule | 1 |
| 4 | 77031-XX | Bulk Hose, Fluid | XX |

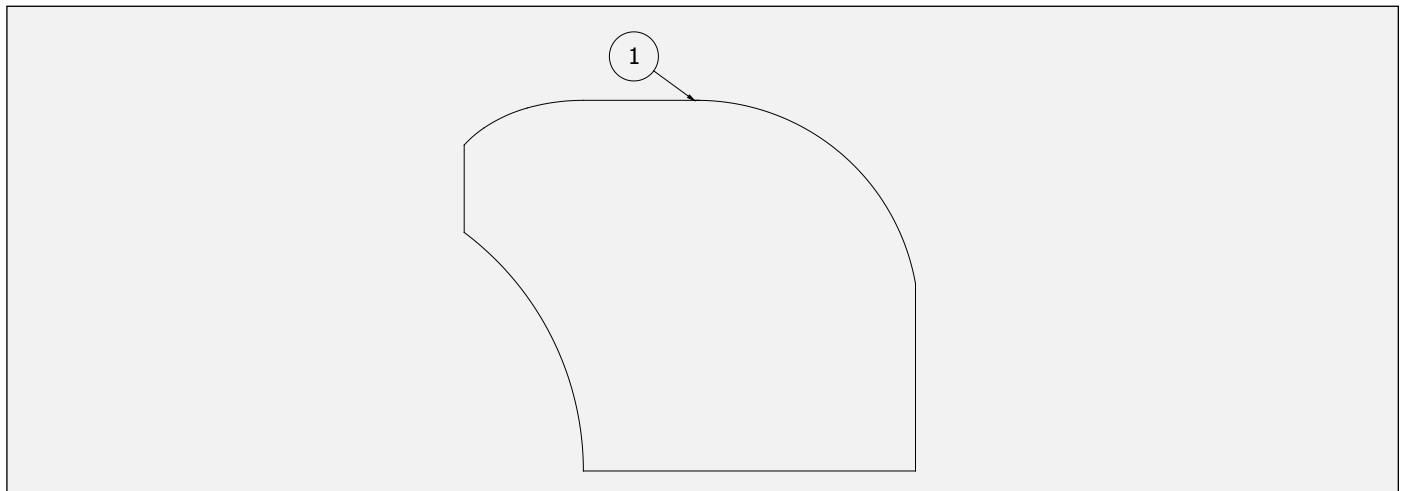


Figure 48: Applicator Cover

VECTOR APPLICATOR COVER OPTIONS - PARTS LIST

| Item # | Part # | Description | Qty |
|--------|-------------|--------------------------------|-----|
| 1 | 79529-00 | Applicator Cover | 1 |
| | 79529-00-K5 | Applicator Cover, Package of 5 | |

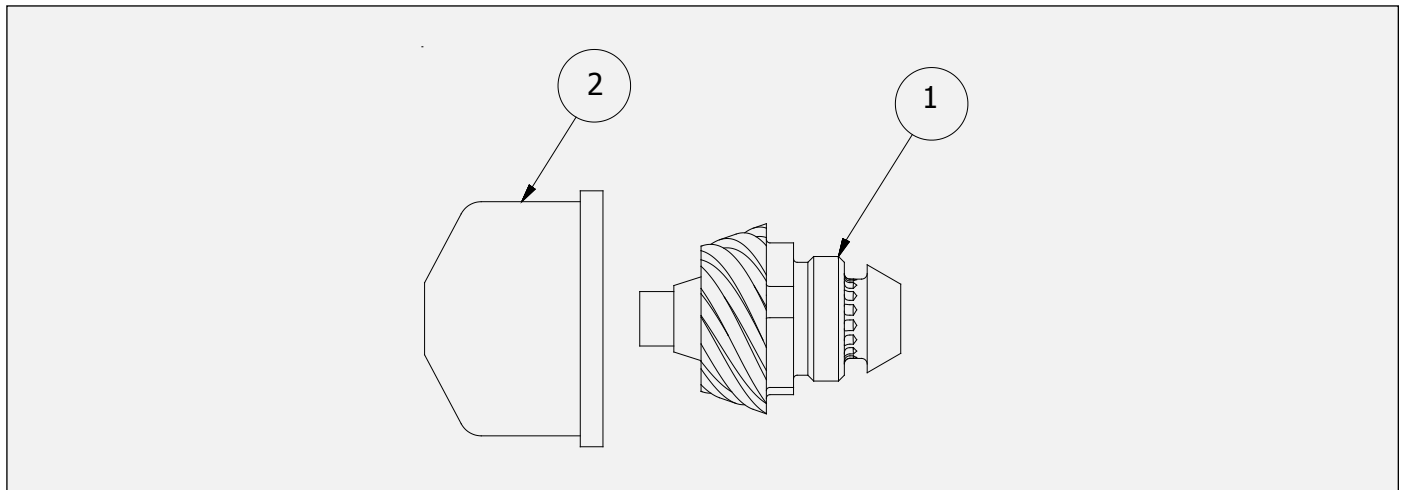


Figure 49 - Swirl Nozzle

VECTOR SWIRL NOZZLE OPTIONS - PARTS LIST

| Item # | Part # | Description | Qty |
|--------|----------|-----------------------|-----|
| 1 | 79959-00 | Fluid Nozzle Assembly | 1 |
| 2 | 79962-00 | Air Cap, Swirl | 1 |

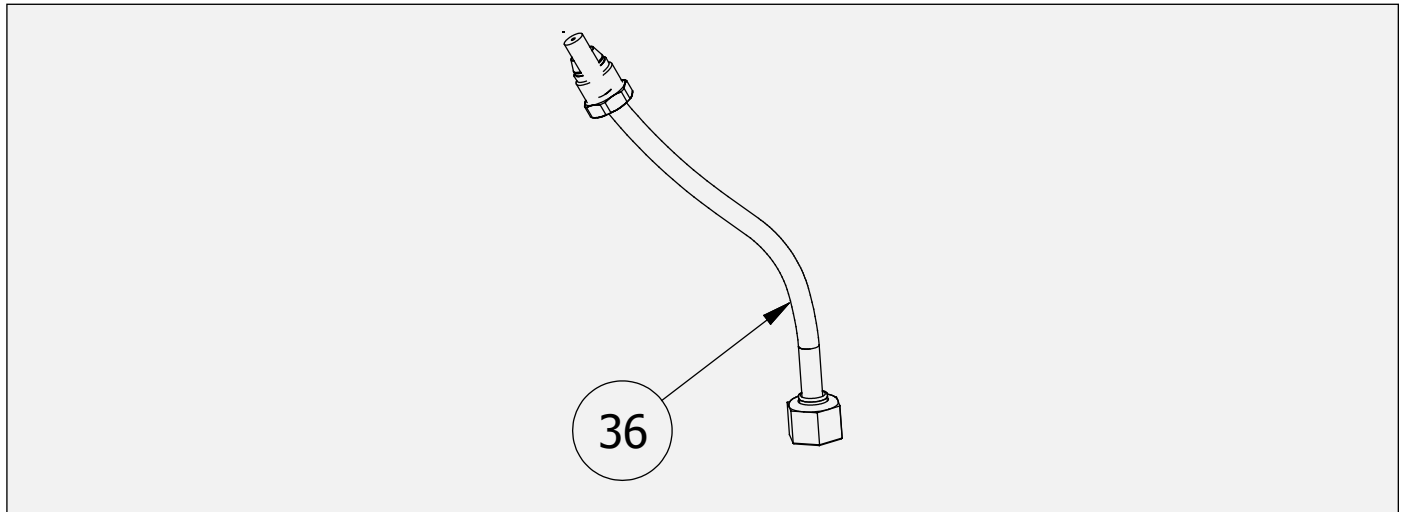


Figure 50: Fluid Tube

VECTOR FLUID TUBE OPTIONS

| Part # | Description | Qty. |
|---------|---------------------------------------|---------------|
| 9704-16 | .093" ID Tube (Standard W/Applicator) | See "Item 36" |
| 9704-05 | .125" ID Tube | See "Item 36" |
| 9704-11 | .250" ID Tube | See "Item 36" |

NOTE: The standard fluid delivery tube is the smallest diameter to work best with highly conductive materials, down to .1 megohm resistance. If higher fluid flows are required, the larger diameter tube either .125-inch or .250-inch may be used, but depending on material conductivity, the current draw during the spray operation may increase.

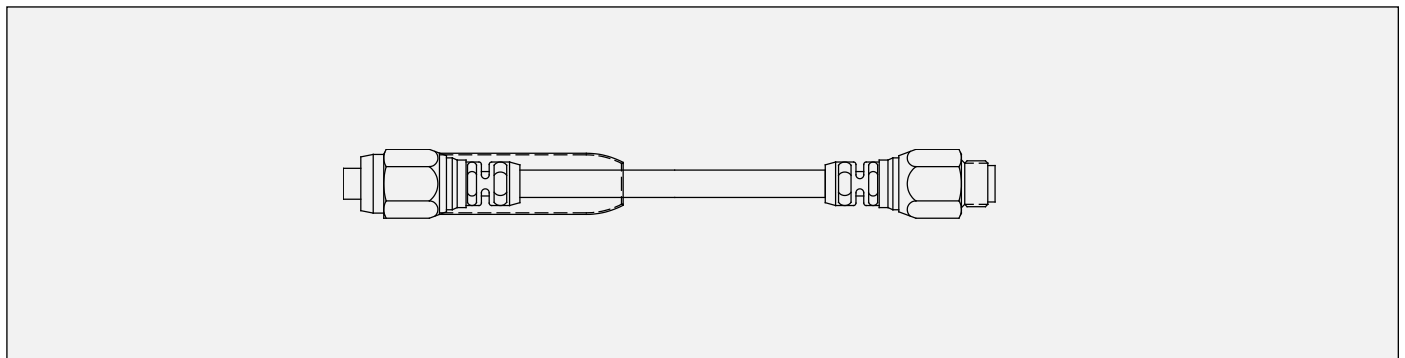


Figure 51: Low Voltage Cable

LOW VOLTAGE CABLE OPTION

| Part # | Description | Qty. |
|----------|----------------------------|------|
| 79338-01 | Low Voltage Cable, 1 Meter | 1 |

PARTS COMPARISON

79374-65 Standard Air Spray Air Cap **79374-122 Trans-Tech. Air Spray Air Cap**

Standard Air Spray Nozzles have a number between 44 and 148; Trans-Tech. Air Spray Nozzles have a number between 244 and 348.

Standard Air Spray Nozzles have a longer, narrower tip; Trans-Tech. Air Spray Nozzles have a shorter, wider tip, and have a shorter over-all length.

79377-XX Standard Air Spray Fluid Nozzle **79552-XXX Trans-Tech. Air Spray Fluid Nozzle**

74963-05 Standard Air Spray Restrictor **74963-06 Trans-Tech. Air Spray Restrictor**

TRANS-TECH. ATOMIZATION - PARTS LIST

| Item # | Part # | Description | Qty |
|--------|-----------|--|-----|
| 1 | 79379-00 | Nut, Retaining, Air Nozzle | 1 |
| 2 | 79374-65 | Standard Air Spray Cap, Air | 1 |
| | 79374-122 | Trans-Tech. Air Spray Cap, Air (Included in 79555 Kit) | |
| 3 | 79377-XX | Standard Air Spray Nozzle, Fluid | 1 |
| | 79552-XXX | Trans-Tech. Air Spray Nozzle, Fluid (Included in 79555 Kit) | |
| 4 | 79001-09 | O-Ring, Solvent Proof | 1 |
| 5 | 74963-05 | Standard Air Spray Restrictor, Black, Vector | 1 |
| | 74963-06 | Trans-Tech. Air Spray Restrictor, Green(Included in 79555 Kit) | |

79555 TRANS-TECH. CONVERSION KITS AVAILABLE

| Kit Part No. | Fluid Nozzle Part No. | Description |
|--------------|-----------------------|----------------------|
| 79555-244 | 79552-244 | 1.4mm (.055") Acetal |
| 79555-245 | 79552-245 | 1.8mm (.070") Acetal |
| 79555-247 | 79552-247 | 0.7mm (.028") Acetal |
| 79555-344 | 79552-344 | 1.4mm (.055") Peek |
| 79555-345 | 79552-345 | 1.8mm (.070") Peek |
| 79555-347 | 79552-347 | 0.7mm (.028") Peek |

All Kits Include: 79374-122 Air Cap, 74963-06 Restrictor (green), and chosen Fluid Nozzle.

Kit 79555 replaces parts:

- 74963-05 Restrictor
- 79377-45 Fluid Nozzle
- 79374-65 Air Cap

NOTE: For additional information on solvent Viscosities and Conversion, refer to Technical Manual IL-307 @ www.ransburg.com.

ACCESSORIES FOR ECON FLUSH BOX COMPATIBILITY (OPTIONAL)

| Part No. | Description |
|----------|-----------------------------------|
| 77582-00 | Nozzle Drain, Flush Box |
| 77581-00 | REA90 to REA70 Adapter, Flush Box |

VECTOR CASCADE APPLICATORS RECOMMENDED SPARE PARTS

| Part # | Description | Qty |
|----------|---|-----------|
| 10051-05 | Cup Seal, Spring Loaded | 2 |
| 17130-00 | Spring, Return | 2 |
| 19749-00 | Applicator Wrench | Accessory |
| 3587-02 | Nut and Ferrule | 2 |
| 3587-03 | Nut and Ferrule | 2 |
| 59972-00 | Dielectric Grease | Accessory |
| 70430-01 | Electrode High Flex | 4 |
| 75326-00 | Barret Retaining Ring | 3 |
| 78626-00 | Seal Cartridge | 4 |
| 78627-04 | Shaft Assembly, 2-Piece Needle, R90 | 2 |
| 78627-05 | Shaft Assembly, 2-Piece Needle, R70 | 2 |
| 78628-11 | Needle Shaft Assembly R90, Standard Packing | 1 |
| 78628-12 | Needle Shaft Assembly R70, Standard Packing | 1 |
| 79629-00 | 2k Fluid Seal Repair Kit | 1 |
| 79001-06 | O-Ring, Solvent Proof | 2 |
| 79001-07 | O-Ring, Solvent Proof | 4 |
| 79001-08 | O-Ring, Solvent Proof | 4 |
| 79001-09 | O-Ring, Solvent Proof | 6 |
| 79001-16 | O-Ring, Solvent Proof | 6 |
| 79001-31 | O-Ring, Solvent Proof | 2 |
| 79310-00 | Air Valve Assembly | 2 |
| 79322-00 | Applicator Hook | 1 |
| 79325-02 | Trigger, 2-Finger | 1 |
| 79338-01 | Low Voltage Cable, 1m | Accessory |
| 79338-10 | Low Voltage Cable, 10m | 1 |
| 79338-15 | Low Voltage Cable, 15m | Accessory |
| 79373-00 | Barrel Retaining Nut | 1 |
| 79374-65 | Air Cap, V65 | 3 |
| 79374-98 | Air Cap, V98 | 1 |
| 79377-44 | Fluid Nozzle, 1.4mm/.055" | 3 |
| 79377-45 | Fluid Nozzle, 1.8mm/.070" | 3 |
| 79378-00 | Gasket, Barrel | 2 |
| 79379-00 | Air Cap Retaining Ring | 2 |
| 79385-00 | Nut Connector Hose | 2 |
| 79438-00 | Hose/Cable Support Bracket | 1 |
| 79445-10 | Fan Air Adjustment Assembly | 2 |
| 79450-00 | Trigger Stop Assembly | 1 |

(Continued On Next Page)

VECTOR CASCADE APPLICATORS RECOMMENDED SPARE PARTS (Cont.)

| Part # | Description | Qty |
|--------------------------------|---|-----------|
| 79454-00 | Trigger Retaining Screws | 4 |
| 79460-03 | Plug Assembly | 1 |
| 79468-00 | Barrel, R90 Cascade | 1 |
| 79468-00 | Barrel, R70 Cascade | 1 |
| 79471-01 | Rear Cover W/Switch | 1 |
| 79479-00 | Applicator Hook Seal | 1 |
| 79529-00-K5 | Applicator Covers | Accessory |
| 79560-00 | Trigger Stop Assembly | 1 |
| 79599-01 | Needle Shaft Assembly, R90, 2k Packings | 1 |
| 79599-02 | Needle Shaft Assembly, R70, 2k Packings | 1 |
| 9704-16 | Fluid Tube R70 Standard | 1 |
| | Fluid Tube R90 Standard | 2 Ft. |
| A11745-00-K5 | Cable Boot | Accessory |
| EMF-202-05 | Ferrule, Back | 2 |
| EMF-203-05 | Ferrule, Front | 2 |
| LSOR0005-17 | O-Ring, PTFE Encapsulated | 6 |
| Power Supply Components | | |
| 79390-20 | PC Board R70 Cascade | 1 |
| 79390-22 | PC Board R90 Cascade | 1 |

MANUAL CHANGE SUMMARY

AH-06-01-R17 - Replaces AH-06-01.16 with the following changes:

| No. | Change Description | Page(s) |
|-----|--|---------|
| 1. | Update to latest manual format. | All |
| 2. | Change page head to new verbage. | 10 |
| 3. | Change text in bullet point number two under "To Test" | 42 |

WARRANTY POLICY

This product is covered by Carlisle Fluid Technologies materials and workmanship limited warranty. The use of any parts or accessories, from a source other than Carlisle Fluid Technologies, will void all warranties. For specific warranty information please contact Carlisle Fluid Technologies.

Carlisle Fluid Technologies is a global leader in innovative finishing technologies. Carlisle Fluid Technologies reserves the right to modify equipment specifications without prior notice.

DeVilbiss®, Ransburg®, MS®, BGK®, and Binks®,
are registered trademarks of Carlisle Fluid Technologies, Inc.

©2019 Carlisle Fluid Technologies, Inc.
All rights reserved.

For technical assistance or to locate an authorized distributor, contact one of our international sales and customer support locations.

| Region | Industrial / Automotive | Automotive Refinishing |
|--|--|--|
| Americas | Tel: 1-800-992-4657 Fax: 1-888-246-5732 | Tel: 1-800-445-3988 Fax: 1-800-445-6643 |
| Europe, Africa Middle East, India | Tel: +44 (0)1202 571 111 Fax: +44 (0)1202 573 488 | |
| China | Tel: +8621-3373 0108 Fax: +8621-3373 0308 | |
| Japan | Tel: +81 45 785 6421 Fax: +81 45 785 6517 | |
| Australia | Tel: +61 (0) 2 8525 7555 Fax: +61 (0) 2 8525 7575 | |

For the latest information about our products, visit www.carlisleft.com.